

Upgrading the OPERATING SYSTEM and SOFTWARE of the Multimedia Video Touch Screen Art. 21553

UPDATING PROCEDURE FOR OPERATING SYSTEM 1.0.0 (reserved for Installers only).

The following procedure can also be performed with the Multimedia Video Touch Screen in **OFF-LINE** mode.

Important: As “Installer” rights are required, the installer must have an SD card to load the firmware 1.5.0.

1. In the main menu, select the first icon on the right, “**Settings**”.
2. In the “**Settings**” page, click on the icon in the bottom right hand corner and **Log in** (enter as the **Installer**).
3. Select “**Update**” - “**Firmware**” and touch the “**Browse**” icon; then select the file “**vimar_firmware_1.5.0.zip**” uploaded onto the SD card as a single file.
N.B. The file must have the original name as uploaded and be compressed with the .zip extension and loaded directly into the main directory of the SD Card without creating a folder).
4. Select “**Confirm**” and wait for the Firmware to update.
5. After the automatic restart and having chosen the **name**, **language** and **country of origin**, touch the “**Recovery**” icon shown in the main menu next to the “**Settings**” icon; this will run a quick check on the integrity of the system files. If a fault is found, you will be asked to proceed with the repair; if the check is OK, a pop-up will invite you to exit to the main menu with no further action.
6. Now **Log in** as **Installer** or **Administrator** and update all the applications in the “**Settings**” - “**Update**” – “**Applications**” page.
Run one update at a time, waiting for the installation request to appear in the page and then touching the “**Install**” icon and then “**End**”; wait for confirmation that installation has been completed before updating the next application.
7. Exit the main menu, then **Log in** as “**Administrator**”, return to the “**Settings**” page and select “**Update**” – “**Search for updates**” and wait; no applications to be updated must appear.

UPDATING PROCEDURE FOR OPERATING SYSTEM 1.4.1 or 1.4.2 (valid for both Clients and Installers).

The following procedure can only be performed with the Multimedia Video Touch Screen in **ON-LINE** mode.

Important: You need “Administrator” or “Installer” rights and a broadband internet connection.

1. In the main menu, select the first icon on the right, “**Settings**”.
2. From the “**Settings**” page, click on the icon in the bottom right hand corner and **Log in** (enter as **Administrator** or **Installer**).
3. Ignore any update requests by selecting the option “**Update later**” (if you select “**Update**”, the device will proceed with the update, but at a given point a message will appear indicating that the FW update was not completed).
4. Touch the “**Recovery**” icon in the main menu next to the “**Settings**” icon.
5. Wait for the application to download then run the installation by touching the “**Recovery**” icon again; after a few sections a “**Vimar Recovery**” installation screen will appear.
Install this application, leaving all the proposed options selected, and touch the “**Install**” icon; the “**Application installed**” message will appear; finally, touch the “**End**” icon.
6. Return to the main menu.
7. Touch above the “**Recovery**” application again.
This will run a quick check on the integrity of the system files on the device. If a fault is found, you will be asked to proceed with the repair; if the check is OK, a pop-up will invite you to exit to the main menu with no further action.
8. In the main menu, select the first icon on the right “**Settings**”.
9. From the “**Settings**” page click on the icon in the bottom right hand corner, then **Log in** (enter as **Administrator** or **Installer**), update all the applications in the “**Settings**” - “**Update**” - “**Search for updates**” page and wait.



10. Now **Log in** again as **Installer** or **Administrator** and update all the applications in the “**Settings**” - “**Update**” – “**Applications**” page.
Run one update at a time, waiting for the installation request to appear in the page and then touching the “**Install**” icon and then “**End**”; wait for confirmation that installation has been completed before updating the next application.
11. Exit the main menu, then **Log in** as “**Administrator**”, return to the “**Settings**” page and select “**Update**” – “**Search for updates**” and wait; no applications to be updated must appear.

UPDATING PROCEDURE FOR OPERATING SYSTEM 1.4.1 or 1.4.2 (reserved for Installers only).

The following procedure can also be performed with the Multimedia Video Touch Screen in **OFF-LINE mode**.

Important: As “*Installer*” rights are required, the installer must have an SD card to load the firmware 1.5.0.

1. In the main menu, select the first icon on the right, “**Settings**”.
 2. In the “**Settings**” page, click on the icon in the bottom right hand corner and **Log in** (enter as the **Installer**).
 3. Select “**Update**” - “**Operating System**” and touch the “**Browse**” icon; then select the file “*vimar_firmware_1.5.0.zip*” uploaded onto the SD card as a single file.
N.B. The file must have the original name as uploaded and be compressed with the .zip extension and loaded directly into the main directory of the SD Card without creating a folder).
 4. Select “**Confirm**” and wait for the Firmware to update.
 5. After the automatic restart touch the “**Recovery**” icon shown in the main menu next to the “**Settings**” icon; this will run a quick check on the integrity of the system files. If a fault is found, you will be asked to proceed with the repair; if the check is OK, a pop-up will invite you to exit to the main menu with no further action.
 6. Now **Log in** as **Installer** or **Administrator** and update all the applications in the “**Settings**” - “**Update**” – “**Applications**” page.
Run one update at a time, waiting for the installation request to appear in the page and then touching the “**Install**” icon and then “**End**”; wait for confirmation that installation has been completed before updating the next application.
 7. Exit the main menu, then **Log in** as “**Administrator**”, return to the “**Settings**” page and select “**Update**” – “**Search for updates**” and wait; no applications to be updated must appear.
-