





Multimedia Video Touch Screen

Updating the firmware and application of multimedia web video touch screen 21553 can be made directly through the internet (see the manual installer cap.3.5) or via SD Card.





In the case where you use the SD Card with the procedure is as follows:

• Updating the firmware

1. In the user Authentication to identify themselves as “Installer” and enter the password.
2. Tap the  icon and then **Operating System**.
3. Tap the  icon and select the firmware file that is located within the SD Card (the system will only upload files with the correct nomenclature).
4. Tap the  icon to exit the popup.
5. Tap the  icon.

The multimedia touch screen restarts and upgrading.

• Upgrading Applications

1. In the user Authentication to identify themselves as “Installer” and enter the password.
2. Tap the  icon and then **Applications**.
3. Tap the  icon to select the files.apk application to update that is within the SD Card.
4. Tap the  icon to exit the popup.
5. Tap the  icon.

Will be upgraded application chosen.

IMPORTANT: The firmware update file is in .zip and must be installed without decompressing it.

The update files of individual applications are in .apk.