

**02906**

Surface GSM touch-thermostat 230 V-



## Table of Contents

---

<b>1. GSM thermostat 02906</b> .....	<b>2</b>
<b>2. Field of application</b> .....	<b>2</b>
<b>3. Installation</b> .....	<b>2</b>
<b>4. Connections</b> .....	<b>4</b>
4.1 Relay connection .....	4
4.2 External temperature probe .....	5
<b>5. GSM function</b> .....	<b>7</b>
4.1 Fitting and replacing the SIM card .....	7
<b>6. Switching on a resetting parameters</b> .....	<b>9</b>
<b>7. Display</b> .....	<b>10</b>
7.1 Functions of the buttons .....	11
7.2 Symbols .....	11
7.3 Ecometer .....	12
7.4 Locking the interface via PIN .....	12
<b>8. Operating mode</b> .....	<b>13</b>
8.1 Switched off (OFF) .....	13
8.2 Manual.....	14
8.3 Away .....	15
8.4 Nighttime reduction .....	16
8.5 Antifreeze .....	17
<b>9. Settings menu</b> .....	<b>18</b>
9.1 Operating mode setting .....	18
9.2 Heating/air-conditioning setting .....	19
9.3 Temperature set point setting .....	19
9.3.1 Comfort temperature .....	19
9.3.2 Away temperature .....	20
9.3.3 Antifreeze temperature .....	20
9.3.4 Nighttime reduction thermal delta .....	20
9.3.5 User settable thermal delta .....	20
9.3.6 Hysteresis of the device.....	20
9.4 Unit of measurement setting .....	20
9.5 Calibration setting .....	21
9.6 External probe setting .....	21
9.7 OnOff/PID setting .....	21
9.8 Buzzer setting .....	22
9.9 Standby brightness level setting .....	22
9.10 GSM settings .....	23
9.11 Info.....	23
9.12 Lock/unlock PIN setting .....	23
<b>10. Summary table of thermostat parameters</b> .....	<b>24</b>
<b>11. Cleaning the device</b> .....	<b>25</b>
<b>12. Features</b> .....	<b>25</b>
<b>13. Installation rules</b> .....	<b>26</b>
<b>14. Regulatory compliance</b> .....	<b>26</b>

## 02906 GSM thermostat - Field of application - Installation

---

### 1. 02906 GSM thermostat

Mains powered wall-mounted thermostat with interface with capacitive keys, with GSM remote control function. Equipped with user-friendly functions to facilitate energy saving. Designed to control heating and air-conditioning via C, NC, NO relay output. Input for management of an external temperature probe (e.g. art. 02965.1).

### 2. Field of application

This device is designed to control room temperature by acting on the control circuit of the burner or circulation pump (heating) or on the control circuit of the air conditioner (air conditioning), ensuring an ideal temperature. The graphical user interface, thanks to special views, facilitates system management helping the user to operate while maintaining a state of energy saving. The thermostat has a GSM communicator for remote control, making it ideal for installation in second homes.


### 3. Installation

The appliance must be installed on a wall at a height of 1.5 m off the floor in a suitable position for correctly detecting the ambient temperature. It must not be installed in niches, behind doors and curtains or in areas affected by sources of heat or atmospheric factors.


It can be installed directly on a wall or on 2 and 3 module back boxes (see figures 1 to 7).

It should be used in dry, dust-free places at a temperature between 0 °C and +40 °C

1

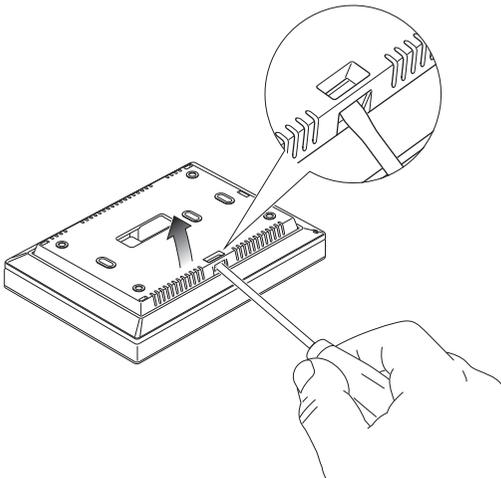

2

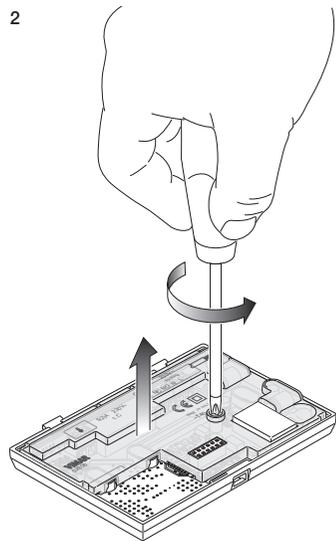



Connections

4. Connections

4.1 Relay connection

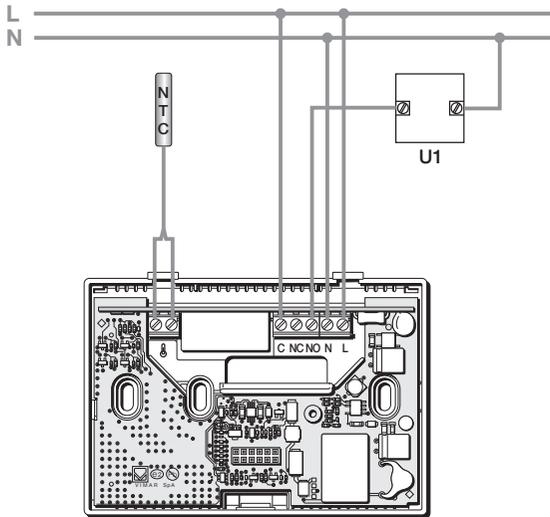


Fig. 1 - Connections with circulation pumps, burners and solenoid valves

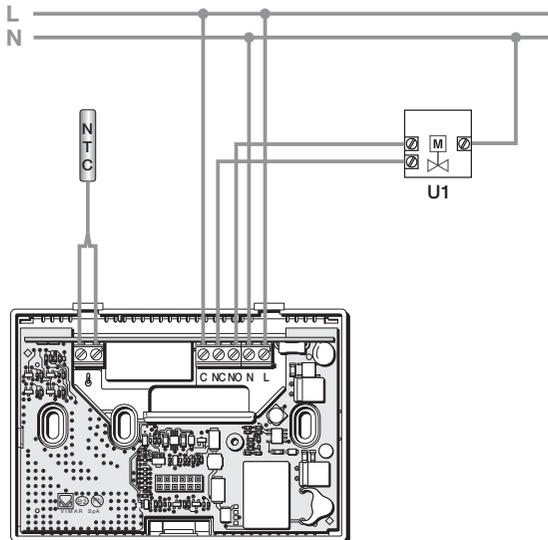


Fig. 2 - Connections with motorized valves

## Connections

### 4.2 External temperature probe

Depending on how it is configured, the external temperature probe can be used to accomplish several functions (see par. 9.6); it does NOT have polarity so you can connect the 2 wires in the 2 terminals without any particular order.

It is recommended to use the NTC 10k beta 3900 probe (art. 02965.1-20432-19432-14432).

The typical wiring diagram is the following:


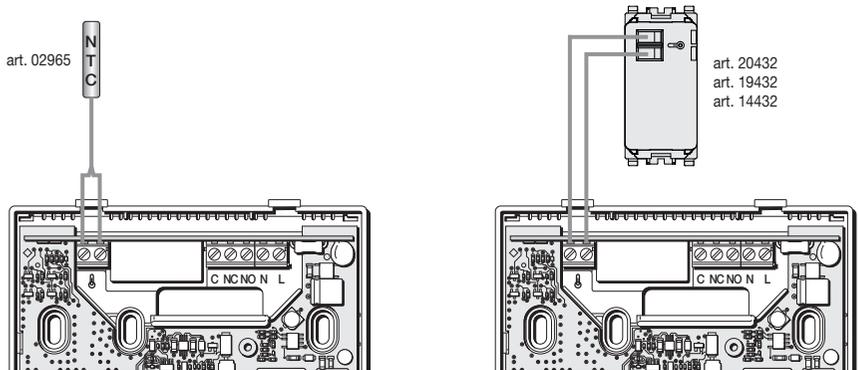


Fig. 3: Connecting the external temperature probe

#### 4.2.1 Installation examples:


*02965.1 used to display the outside temperature*

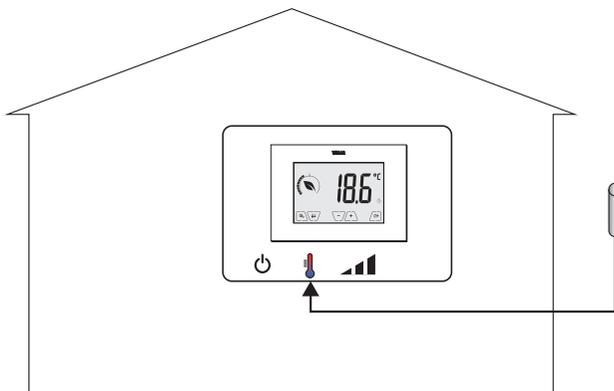


## Connections

---

02965.1 used for adjustment (of a remote environment)

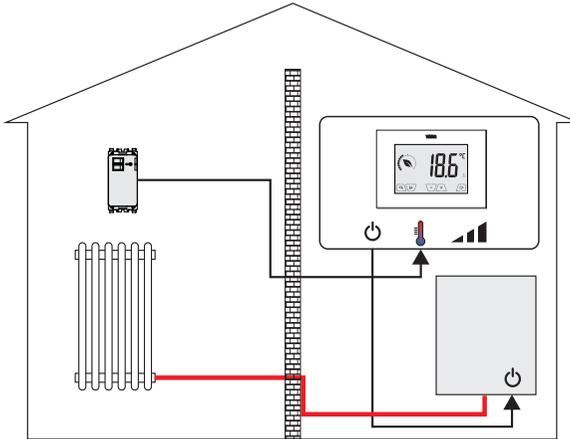

02965.1 used for limiting the temperature of underfloor heating

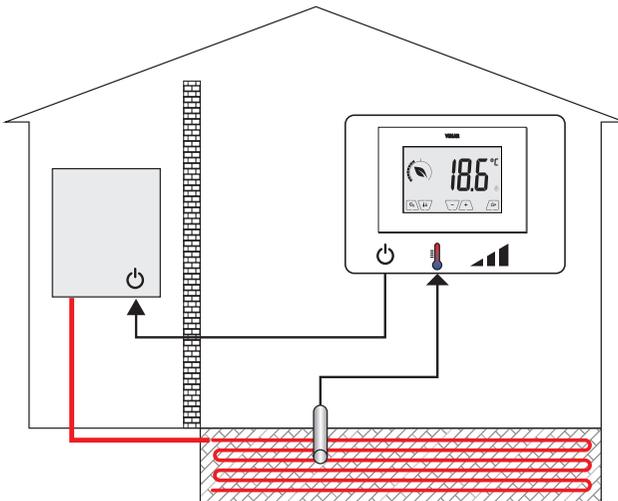

**IMPORTANT:** During installation, take care not to damage the insulation of the probe while laying the screed. Perform the installation in such a way that the probe is accessible for any maintenance work.

## GSM function

---

### 5. GSM function

By sending and receiving SMSs with the appropriate encryption, the thermostat can be switched on, off and queried for viewing data on the room and it can perform various other functions; interaction with the device for remote control is via the By-clima smartphone app that automatically creates the encrypted SMSs.

Using these features you can then:

- Set the operating parameters of the thermostat.
- Send commands.
- Query the thermostat to know the current operating status.
- Receive previously configured and enabled alarm notifications.
- Receive from the thermostat any SMSs that have not been recognized as command SMSs. Command and monitoring SMSs are generated by the By-clima App while voice calls, reading and therefore interpreting incoming SMSs must be managed manually by the user with the standard smartphone functions.

More in detail, the functions associated with GSM mode via SMS or via voice calls are:

- Thermostat management = setting the operating mode (Off, Antifreeze, Away, Manual, Nighttime reduction).
- Thermostat configuration = programming all the temperature control parameters that can also be set locally by the thermostat and configuration of all the functions of the GSM module that instead cannot be programmed locally.
- Requesting the current operating status of the thermostat (for all the various types).
- Notification of alarms for power supply voltage failure/restoration (only if configured and paired with users saved in the contacts list).
- Notification of technical alarms for exceeding the temperature thresholds (only if configured, enabled and paired with users saved in the contacts list).
- Receiving SMSs sent by the thermostat as they are not recognized as being in compliance with the communication protocol (only if configured and paired with users saved in the contacts list).

Generally, the configuration commands do not require confirmation SMSs as instead is the case for the monitoring commands; so, in order to have confirmation on successfully setting a parameter, you need to query the thermostat about its status.

Otherwise, all the command operations that, for example, change the active temperature control mode, will generate an SMS for notification and confirmation of the operation.

Using the "phone call" function, which generates a voice call from a recorded user, associated to the voice call, you can switch the operating state, in the following way:

- In heating mode:
  - from Manual to Antifreeze
  - from any other mode to Manual
- In air-conditioning mode:
  - from Manual to OFF
  - from any other mode to Manual

Also in this case a report of the general status of the GSM device is sent to the caller number.

## GSM function


### 5.1 Fitting and replacing the SIM card

The thermostat can be used with a traditional SIM card (ID-000 format) for voice / SMS traffic; data SIMs cannot be used for operating the device .


To install the SIM card:

- Disable the PIN code from the SIM card (install the SIM in a mobile phone and when switching on disable the PIN code prompt).
- Turn off the power supply to the thermostat 02906.
- Remove the front panel by inserting a screwdriver into the slot in the bottom and pushing the release tab upwards and, at the same time, pull out the front of the product.
- Insert the SIM card into the SIM holder in the rear of the front panel you have just removed.
- Fit the front panel back into its original position by hooking it onto the mounting tabs located on the upper side of the part on the wall and then closing the lower part. Finally, power up the thermostat.


1

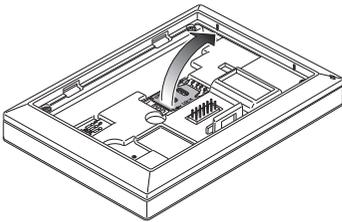


2

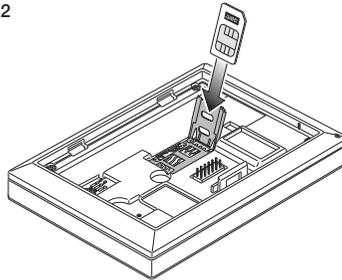

3

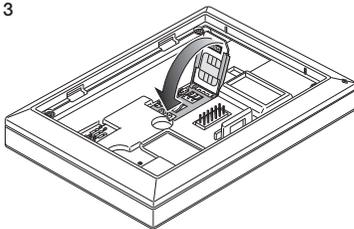

4

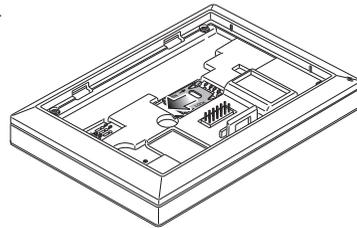

- The  icon will show the correct installation and the quality of the GSM network:

 : blinking: switch-on phase (if the icon is still flashing after a few minutes, it means that there is an ERROR so it is necessary to check the SIM card)

 : GSM signal not present or insufficient

 : GSM signal barely sufficient (up to 20%)

 : GSM signal from 20% up to 50%

 : GSM signal from 50% up to 80%

 : optimum GSM signal (over 80%)

## Switching on and resetting parameters

### 6. Switching on and resetting parameters

When switching on, in the first 3 seconds of power-up the thermostat displays the firmware version.



Fig. 4: Start up screen

If in this phase you touch the  icon, a screen appears on the display where you can reset the device parameters:



Fig. 5: Parameter reset screen

By confirming with , **ALL the device parameters** (temperature setpoint, heating/air-conditioning mode, unit of measurement, etc.) and **ALL GSM function settings** (phone numbers, SMS, etc.) will be restored to the default values.

**WARNING** This operation is not undoable.

If you wish to reset only the GSM settings, refer to paragraph 9.10.2.

## Display

### 7. Display

The touchscreen display allows you to control the system using the following buttons and icons:

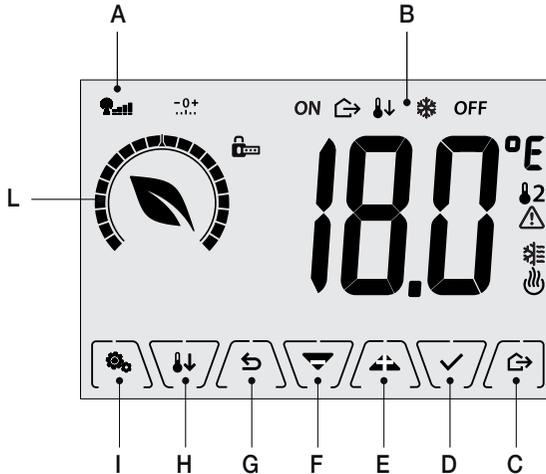


Fig. 6: Graphical interface and buttons

- A: GSM network signal
- B: Operating mode
- C: Away
- D: Confirm
- E-F: Menu navigation and setting parameters
- G: Back
- H: Nighttime reduction
- I: Settings menu
- L: Ring indicating consumption level and energy savings indicator

## Display

### 7.1 Functions of the buttons

-  : **increases** the numerical values. When it "disappears" from the display it means that the value cannot be increased any more.
-  : **decreases** the numerical values. When it "disappears" from the display it means that the value cannot be decreased any more.
-  : during navigation, it **scrolls** through the available menus to the right. If it "disappears" then you have arrived at the last of the items that can be scrolled.
-  : during navigation, it **scrolls** through the available menus to the left. If it "disappears" then you have arrived at the last of the elements that can be scrolled.
-  : **confirms** the selected option (activates the submenu if there is one or displays the next parameter/digit).  
After each confirmation, the display shows the ✓ icon for approximately 1 s.
-  : **back (or cancel)** exits the current screen/menu and returns to the previous one without saving any changes. In menus with changes to multiple digits it lets you go back to change the previous digit.

**N.B. The field/value being edited is highlighted by the field/value itself flashing.**

### 7.2 Symbols

Depending on the different operating modes, the following icons could also be displayed:

-  : GSM network signal status
-  : Calibration
-  : Away
- ON** : Manual (ON)
-  : Nighttime reduction
-  : Antifreeze
- OFF** : Switched off (OFF)
-  : Air conditioning
-  : Heating
-  : Confirm
-  : Eco (saving)

## Display

### 7.3 Ecometer

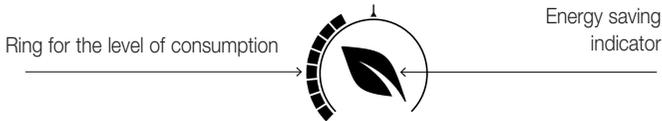


Fig. 7: Set of ECOMETER icons

On the left-hand side of the display there is a set of icons called the "ECOMETER" that provide an overview of the expected consumption as an aid to energy saving.

The information displayed is based on a consumption forecast obtained by comparing the currently set temperature setpoint and the estimated average consumption (which therefore has nothing to do with the current room temperature).

- The **consumption level ring** graphically indicates the expected level of consumption. If this level is less than half, it means that there will be a saving compared to the conventional average consumption; vice versa, if the level exceeds half, the expected consumption will be higher than the conventional average.
- The **energy saving indicator** indicates whether the currently set setpoint will allow obtaining savings with respect to the conventional average consumption.

### 7.4 Locking the interface via PIN

The thermostat lets you set a password (see par. 9.12) which inhibits any change to the operating mode (eg switching from Manual to OFF), limits setting the temperature values and, more generally, blocks access to the configuration menu.

This feature is useful to prevent the thermostat being used by unauthorized persons: the device prompts you to enter the PIN.

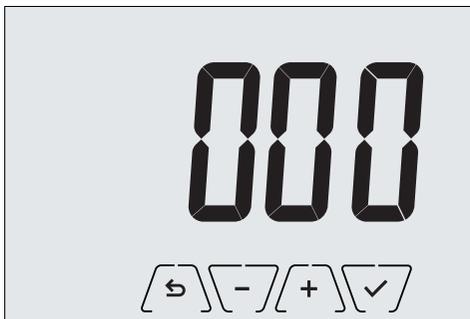


Fig. 8: Locking with PIN

## 8. Operating mode

The thermostat 02906 is able to adjust the temperature according to the following operating modes:


- **Switched off (OFF):** switches the system off without making any adjustments
- **Manual (ON):** lets you set the required temperature set-point manually
- **Away:** is a mode that lets you set the set-point in order to achieve significant energy savings during periods when the user is away
- **Nighttime reduction:** this mode, which can be activated locally, is useful for changing the manual adjustment set point in the hours of nighttime operation.
- **Antifreeze:** used to set a minimum temperature level to avoid damage to pipework or prevent the temperature from falling below a safety level.

The operating mode is selected via the **SETTINGS** menu (see chap. 9).

### 8.1 Switched off (OFF)

With this mode on, the thermostat is turned off and you cannot make any adjustments; in this case, the **OFF** icon is displayed above the temperature indicator.

When the thermostat is OFF, you cannot perform any operations other than accessing the configuration menu.

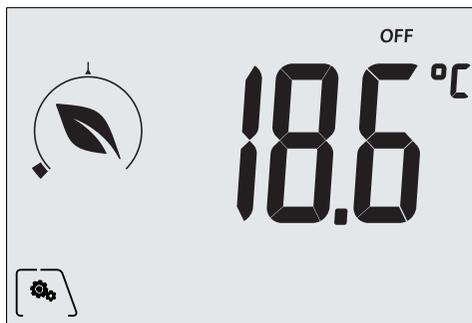

*Fig. 9: Typical screen for OFF mode*

For heating-only systems this mode is typically used in the summer.

## Operating mode

### 8.2 Manual (ON)

This is the "traditional" operating mode. The thermostat controls the room temperature and takes it to the value set by the user (manual adjustment setpoint).

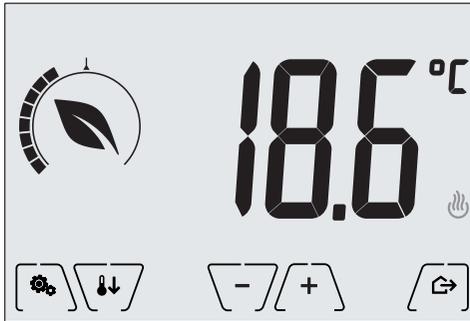


Fig. 10: Typical screen for Manual mode

The set point can always be changed via  or .

In the course of setting, the set point flashes and the circular ring fills up accordingly; this gives an indication of the expected consumption as a function of the set point you are setting:

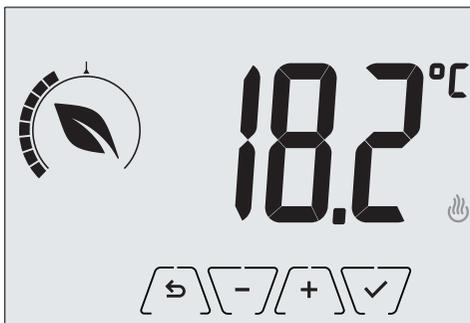


Fig. 11: Manual set point setting

The selection is confirmed by touching .

The  and  icons in the lower right corner indicate whether the system is operating in heating or air-conditioning mode respectively (icon illuminated = system on).

## Operating mode

---

### 8.3 Away

This mode is useful to achieve energy savings quickly and effectively whenever the user leaves the regulated room.

In "Away" mode the system makes the adjustment according to the "away temperature" setpoint  $T_0$  (see para. 9.3.1).

The Away mode can only be activated in manual mode by touching .

The display will show the "away temperature" setpoint for approximately 2 seconds:

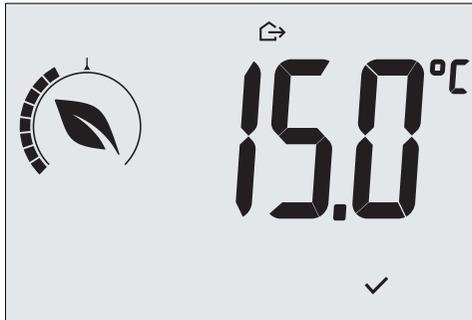


Fig. 12: Input in away mode showing the away temperature

Activation of this mode is identified by the  icon above the temperature indicator:

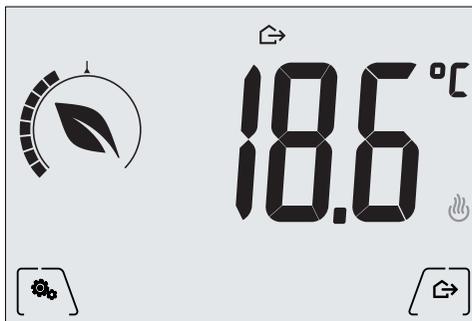


Fig. 13: Away Mode

To exit and return to Manual mode touch the  button again.

## Operating mode

### 8.4 Nighttime reduction

This is the typical mode to use at night to reduce system consumption significantly.

In "Nighttime reduction" mode the device reduces the consumption of the system, taking the room temperature to a lower value (or higher, if on air-conditioning) than the Manual mode by  $\Delta T_r$  degrees (see par. 9.3.3).

The "Nighttime reduction" function is done from Manual mode by touching .

The display will show the "nighttime reduction" setpoint for approximately 2 seconds:

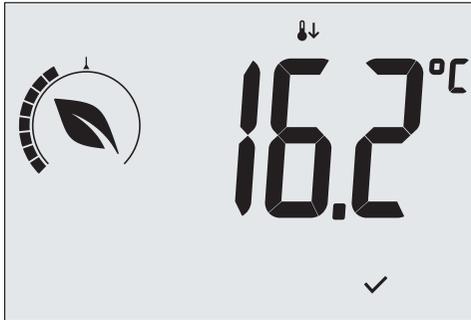


Fig. 14: Input in Nighttime Reduction mode showing the reduction set point

Activation of this mode is identified by the  icon above the temperature indicator:

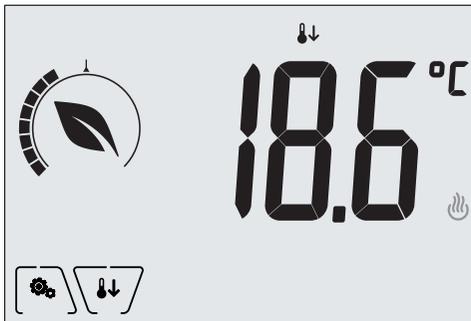


Fig. 15: Nighttime reduction mode

To exit and return to Manual mode touch  again.

## Operating mode

---

### 8.5 Antifreeze

This mode, which can only be activated when the system is operating in heating mode, lets you set a minimum temperature value ( $T_0$  setpoint) to avoid damage to the pipework or to keep it from falling below a certain safety level when you are away for lengthy periods in the winter.

The "antifreeze" mode is activated directly from the Settings menu (see par. 9.1).

Once activated, antifreeze mode is identified by the ❄️ icon above the temperature indicator.

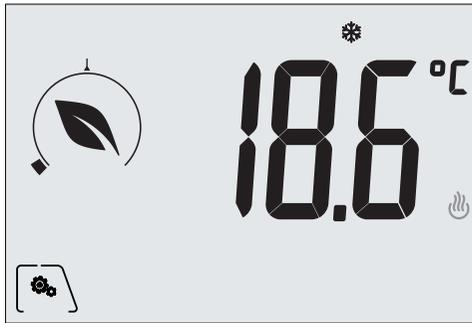


Fig. 16: Antifreeze mode

## Settings menu

---

### 9. Settings menu

From the settings menu you can configure all the features of the thermostat.

On the main screen (see Fig. 6) tap the  icon.

From the main menu, using  and  will display the following (flashing) symbols in succession, which provide access to the corresponding submenus:

1. **ON**  **OFF** operating mode setting
2.  and  air-conditioning/heating setting
3.  temperature setpoint setting
4.  unit of measurement setting
5.  calibration setting
6.  external temperature probe setting (shown only when the probe is connected)
7.  OnOff/PID temperature control algorithm setting
8.  buzzer setting
9.  brightness of the display on Standby setting
10.  GSM function setting
11.  device info
12.  lock/unlock PIN setting

Touching  opens the submenu and then the flashing highlights the parameters of the submenu.

#### 9.1 Operating mode setting

This menu is used to select the operating mode of the device:

- **ON** Manual
- **OFF** Off
-  Antifreeze (only if the thermostat is set on "heating")

Using  and  select the required mode and confirm with .

## Settings menu

---

### 9.2 Heating/air-conditioning setting

This menu lets you set the operation of the device depending on the season (winter/summer):

-  heating
-  air-conditioning

Using  and  select the required operation and confirm with .

### 9.3 Temperature set point setting

This menu lets you set the temperatures and hystereses necessary for defining the temperature control set-point used in the different operating modes.

In particular, you can have setpoints for:

1.  $T_0$  and  temperature of the **Away mode** \*
2.  $T_0$  and  temperature of the **Antifreeze mode**
3.  $dT_r$  and  thermal delta in **Nighttime reduction mode** \*
4.  $dT_u$  thermal delta with thermostat inhibited by PIN
5.  $dT$  temperature differential of the device (only if in OnOff adjustment mode)
6.  $T_L$  and  : external probe alarm temperature (if fitted and configured)

**\* WARNING:** Depending on the mode the thermostat is in (heating or air-conditioning), setting this setpoint acts only on the value associated with the current mode highlighted by the  or  icon.

After then changing the setpoints of the current mode in succession, change the mode and set all the setpoints corresponding to it.

#### 9.3.1 Away temperature

This menu, via  or , lets you increase/decrease the value of the away temperature

$T_0$ .

The away temperature, preset by the user, is an intermediate temperature between that of Manual and Antifreeze mode, geared to obtain substantial energy savings during periods when the user is away.

## Settings menu

---

### 9.3.2 Antifreeze temperature

This menu, via  or , lets you increase/decrease the value of the antifreeze temperature  $T_0$ .

Antifreeze mode is used to set a minimum temperature level to avoid damage to the pipework or keep the room temperature from falling below a safety level (see par. 8.5).

### 9.3.3 Nighttime reduction thermal delta

This menu, via  and , lets you set the difference between the Nighttime temperature and the temperature set in Manual mode.

The hysteresis is an increase/decrease in temperature that is applied to the Manual setting; the thermal delta value is identical both in heating mode and in air-conditioning mode with the only difference being that in the former case it causes a decrease in the set point while in the latter one it determines an increase.

### 9.3.4 User settable thermal delta

This menu, via  and , lets you set the range of values within which the user can adjust the temperature when the menus are inhibited after setting a PIN.

In this condition, the control temperature is fixed and therefore cannot be changed; with  $dT_u$  instead, the user can modify the temperature within a certain range.

### 9.3.5 Hysteresis of the device

This menu, via  and , lets you set the temperature range of the heating/air-conditioning system between "ON" and "OFF".

This value can also be changed via the submenu for ON/OFF operation.

**The parameter cannot be changed if the thermostat is set as PID operation.**

*For example: Heating, with setpoint on 20.0°C,  $dT$  : 0.5°C → → → 20.5 (off), 19.9 (on)*

### 9.3.6 External probe alarm temperature

The menu, via  or , lets you set the temperature limit (read by the external probe) at which the thermostat switches off the heating system and triggers an alarm (useful to protect underfloor systems against overheating).

To view this menu, the external temperature probe must be wired set as a "limitation".

## 9.4 Unit of measurement setting

- The menu lets you set the unit of measurement used for the temperature (°C or °F)

Using  and  select the required unit of measurement and confirm with .

## Settings menu

---

### 9.5 Calibration setting

This menu lets you "calibrate" the temperature read by the thermostat.

Using  or , you can add or subtract (at intervals of 0.1°) a fixed amount from the temperature detected by the thermostat to make it equal, for example, to that of a sample thermometer.

**CAUTION: For correct calibration it is recommended to wait until the thermostat has been on for at least 1 hour in a room at constant temperature.**

Tap  to confirm your choice.

### 9.6 External probe setting

This menu lets you configure how to use the external temperature probe (installed according to the instructions in par. 4 .2)

Using  or , you can select the following options:

- **OFF**: the external probe (although physically present) is ignored by the device.
- **Adjustment** (the measured temperature flashes): by enabling this function, the thermostat will regulate the temperature of the environment based ONLY on the temperature detected by the external probe (the temperature measured by the thermostat is ignored). The temperature shown on the display will be that of the external probe identified by the  icon.
- **Display** (the temperature measured by the thermostat and that of the external probe are shown alternately on the display): the external probe is only used to display the temperature in another environment .

On standby the display will alternate views of the internal temperature (measured by the thermostat) and external temperature (measured by the probe) and identifiable by the  icon.

- **Limitation** (the icon  flashes): mode used for systems with underfloor heating.

In the associated submenu you set the limitation temperature, that is the one, read by the external probe immersed in the screed, that is considered an excessive temperature. If this threshold temperature is reached the thermostat turns off the heating system and displays the alarm as long as the condition that generated it remains.

At the end of this condition, the thermostat resumes its normal operation.

Tap  to confirm your choice.

### 9.7 OnOff/PID setting

This menu lets you select the way in which the ambient temperature will be controlled.

Using  or , you can select the following options:

-  (**OnOff control**): this is the traditional "threshold" control so that, on exceeding the set temperature increased by  $dT$  (vice versa for air-conditioning), the heating is switched off to then be turned back on when the room temperature drops below the set temperature.  
The  $dT$  value can be set directly via the submenu that follows this selection.

## Settings menu

---



**(P.I.D. control):** this is an evolved algorithm that is able to keep the temperature in the environment more stable, increasing comfort; this algorithm switches the system on and off appropriately so there will be a gradual increase or decrease in the thermal (or refrigerating) power of the system itself. To take full advantage of its performance it needs to be suitably calibrated according to the type of environment and heating system; in the light of this, the following parameters must be set via the submenus that follow this selection:

- **T<sub>b</sub> (breadth of adjustment range):** starting from the set temperature, T<sub>b</sub> is the temperature range in which the heating power goes from 0% to 100%.

*For example: with the temperature (for heating) set to 20.0°C and T<sub>b</sub>=4.0°C, the thermostat activates the heating system on 100% when T<sub>ambient</sub> is ≤ 16.0°C; as this temperature increases, the system power is consequently lowered down to 0% when the ambient temperature reaches 20°C.*

The value of T<sub>b</sub> must be set consistently with the thermal capacity of the system; in general, it is recommended to use small values of T<sub>b</sub> for environments with a good level of thermal insulation and vice versa.

- **t<sub>c</sub> b (system cycle time):** this is the time in which a cycle of regulation is completed; the shorter this time, the better the regulation but the temperature control system is under greater stress. This parameter setting is thus the result of a compromise between the accuracy of the regulator and the load on the system; in general, the rule is that T<sub>b</sub> can be that much higher (and therefore put fewer demands on the system), the slower the system or the larger the environment to regulate.

Tap  to confirm your choice.

### 9.8 Buzzer setting

This menu lets you enable/disable the acoustic signals of the thermostat; if it is disabled there will no longer be any sound when you touch the buttons or in cases of confirmation/error. Whereas, in the event of an alarm, the sound signal will always be guaranteed.

Using  and  select "ON" or "OFF" and confirm with .

### 9.9 Standby brightness level setting

The menu lets you set the brightness level when the thermostat is in standby.

Using  or  you can select one of the following levels with gradually increasing brightness:

- OFF
- 1, 2, 3, 4, 5, 6, 7

While scrolling through the values, when the selection stops on a certain level, the brightness of the display will, for approximately 2 s, take on the brightness corresponding to the selected level in order to allow the user to check the visual effect.

Finally, tap  to confirm your choice.

## Settings menu

---

### 9.10 GSM settings

All the GSM functions are set exclusively via a special smartphone App which communicates by SMS with the thermostat and not via the actual thermostat; the latter is used to enable all the functions described in paragraphs 9.10.1 and 9.10.2.

#### 9.10.1 Switching on/off the GSM radio

This option is used to switch the GSM radio transmitter on or off (for example, to check that the thermostat is set only locally and that it cannot be remotely enabled/modified by any other configured mobile phone).

Using  and  select "ON" or "OFF" and confirm with .

#### 9.10.2 GSM parameter resetting

This option is used to cancel ALL the GSM function parameters; it will specifically cancel:

- the GSM security code;
- alarm thresholds and enabling (these will be restored to the default value);
- the GSM network parameters;
- the set language (which will be restored to the default language);
- all the phone numbers used by the thermostat to send messages (no more messages will be sent).

### 9.11 Info

This menu lets you view information related to the thermostat and reset the device.

Using  or  you can select:

- : displays the number of hours that the thermostat relay has been on (the same as the number of hours of operation of the system).  
The counter can be reset, by a simple prolonged touch in the centre of the display (for example at changes in season to differentiate between heating and air-conditioning).
- : displays the software version of the device.

### 9.12 Lock/unlock PIN setting

This menu lets you add/change the password to inhibit use of the thermostat.

Using  or  you can set the three digits of the PIN one at a time and then confirm  each set digit.

**N.B. Having set the PIN return to the main menu; the PIN is active after around 30 s.**

If you wish to have free access to the thermostat (so without it prompting you for a password) it is sufficient to set the PIN to "000".

If you lose or forget the PIN, to release the thermostat you must perform a full reset (see chapter 6).

## Summary table of thermostat parameters

### 10. Summary table of thermostat parameters

Function	Parameters	Value range	Resolution	Default value
External temperature probe management mode	EXT Probe selection	[Off, View, Temperature Control, Limitation]	-	Off
Nighttime Reduction	$\delta_R$ (red. offset)	[1,...,6]°C,	0.1°C	4°C
Limitation	$T_L$ (Temp. limit)	[30,...,50]°C	0.1°C	35°C
Temperature control mode	Selection TempCtrl	[Heat., Air-con.]	-	Heating
Control algorithm	Algorithm	[ON/OFF, PID]	-	ON/OFF
Hysteresis (ON/OFF)	$\delta_T$ (Differential)	[0.1,...,1]°C	0.1°C	0.2°C
Proportional band (PID)	Band	[0.5,...,5]°C	0.1°C	1°C
Adjustment period (PID)	Period	[10,...,30] minutes	1 min	20 min
Unit of measurement (temperature)	Temperature unit	[°C , °F]	-	°C
User thermal delta	$\Delta T_u$ (Differential)	[0,...,2]°C	0.1°C	0°C
Temperature offset	$T_E$ (Offset temp.)	[0,...,±3]°C	0.1°C	0°C
PIN number	PIN	[000,...,999]	1	000
Temperature set-point	$T_o$ (Away-Heat.)	[TG, 10..35]°C	0.1°C	16°C
	$T_o$ (Away-Aircon.)	[10,...,35,OFF]°C	0.1°C	29°C
	$T_M$ (Manual-Heat.)	[10,...,35]°C	0.1°C	18°C
	$T_M$ (Manual-Aircon.)	[10,...,35]°C	0.1°C	26°C
	$T_G$ (Antifreeze)	[4,...,10]°C	0.1°C	5°C
Backlight	$B_{LLVL}$	[0,...,7]	1	3
Audio feedback	BuzzerEn	[OFF, ON]	-	ON
Reset to default parameters	rSEt	-	-	-

Table 1: Device parameters

### 11. Cleaning the device

The device features a touchscreen display with capacitive buttons and therefore requires you to be gentle during the cleaning phase. Avoid using aggressive products. Clean the display with a special cloth for cleaning lenses.

### 12. Features

- Rated supply voltage: 230 V~, 50-60Hz
- Max power drawn from the grid: 3 VA
- Operating temperature range: 0-40°C (-T40)
- Temp. measurement accuracy (built-in probe): 0.5°C between +15°C and 30°C, 0.8°C at the ends.
- Relay output with clean change-over contacts: 5(2) A 230 V~  
N.B. With no power supply, the relay moves into position C-NC.
- Terminals: L live, N neutral, C relay, NC relay, N/O relay, 2 external temp. probe (art. 02965.1)
- Configurable in Heating/Air-Conditioning mode (winter/summer)
- Temperature control algorithms: ON/OFF or PID selectable via user interface.
- Operating modes: Off, Antifreeze (heating only), Away, Manual and Nighttime reduction.
- 4 set-points/settable temperature offsets (manual, away, anti-freeze, reduction) and 1 limiting threshold (external probe).
- The operating modes can be set by the user also via GSM with the By-clima app.
- Restriction on local interface access via PIN and configurable multi-function input.
- Protection class: IP40.
- Action type: 1.C.
- Degree of pollution: 2 (normal).
- Rated pulse voltage: 4000 V.
- ErP classification (Reg. EU 811/2013): ON/OFF: class I, contribution 1%; PID: class IV, contribution 2%.
- Frequency range: 900 MHz and 1800 MHz
- RF transmission power: < 2 W (33 dBm)
- Appliances of class II: 
- Number of handling cycles for manual (3.000) and automatic (100.000) operation.
- Disconnection type: micro switch.
- PTI=175.
- Room temperature during transport: -25°C ÷ 60°C.
- Software class: A.

## Installation rules - Standard compliance

---

### 13. Installation rules

Installation should be carried out by qualified personnel in compliance with the current regulations regarding the installation of electrical equipment in the country where the products are installed.

### 14. Standard compliance

RED Directive.

Standards EN 60730-2-9, EN 301 489-52, EN 301 511, EN 62311.

Vimar SpA declares that the radio equipment complies with Directive 2014/53/EU. The full text of the EU declaration of conformity is on the product sheet available at the following Internet address: [www.vimar.com](http://www.vimar.com).



#### **RAEE - Informazione agli utilizzatori**

If the crossed-out bin symbol appears on the equipment or packaging, this means the product must not be included with other general waste at the end of its working life. The user must take the worn product to a sorted waste center, or return it to the retailer when purchasing a new one. Products for disposal can be consigned free of charge (without any new purchase obligation) to retailers with a sales area of at least 400 m<sup>2</sup>, if they measure less than 25 cm. An efficient sorted waste collection for the environmentally friendly disposal of the used device, or its subsequent recycling, helps avoid the potential negative effects on the environment and people's health, and encourages the re-use and/or recycling of the construction materials.





02906IEN 04 1905



**VIMAR**

Viale Vicenza, 14  
36063 Marostica VI - Italy  
[www.vimar.com](http://www.vimar.com)