

**02952**

KNX touch thermostat.



---

**GENERAL CHARACTERISTICS AND FUNCTIONS** from page 5

---

**COMMUNICATION OBJECTS AND ETS PARAMETERS** from page 7

---

**FAQ** from page 31

---


---

For all the details about the Well-contact Plus system, refer to the installer manual that can be downloaded from the Software ➔ Product Software ➔ Well-contact Plus section of the website: [www.vimar.com](http://www.vimar.com).

# Thermostat

## General characteristics and functions

Touch screen electronic thermostat for room temperature control (heating and air conditioning) of 2 independent zones, KNX standard home automation system, 1 NO relay output 4 A 24 V~, 1 input for electronic temperature sensor or wired temperature sensor, 1 programmable digital input, RGB LED backlighting, to be completed with Eikon Evo, Eikon, Arké or Plana cover plates, grey - 2 modules.

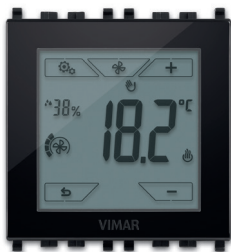


02952

### General characteristics

The thermostat is suitable for controlling room temperature (heating/air-conditioning) in 2 or 4 pipe systems (heating/air-conditioning) and neutral zone (only in 4-pipe systems), with the "boost" function to activate a second source that makes it possible to reach the desired thermal comfort faster; it can interact with other thermostats and with a monitoring unit (PC with Well-contact Suite software). It can manage 2 climate zones completely independently (equivalent to two thermostats A and B). For each zone the heating/air-conditioning modes are managed according to the related reference temperature. It is equipped with a relay programmable as NC or NO that can be used for general use (e.g. lighting, zone solenoid valve closing, activating electric towel warmer, etc.) or to control speed 1 of the fan coil, which is managed by thermostat A or thermostat B. It also has a digital input programmable as NC or NO, which can be used for other applications such as detecting an open window. The thermostat features an RGB display with 5 capacitive buttons for controlling the temperature setpoint and the speed of the fan coil, the configuration of the operating modes and the selection of thermostat A or B to view/control; it has an RGB backlit display whose colours can be adjusted via parameters with ETS.

### Display icons

	Comfort (Guest in room)
	Standby (Guest not in room)
	Economy (Room free)
<b>OFF</b>	Off
	Protected mode
	Buttons locked
	Heating valve on
	HVAC valve on

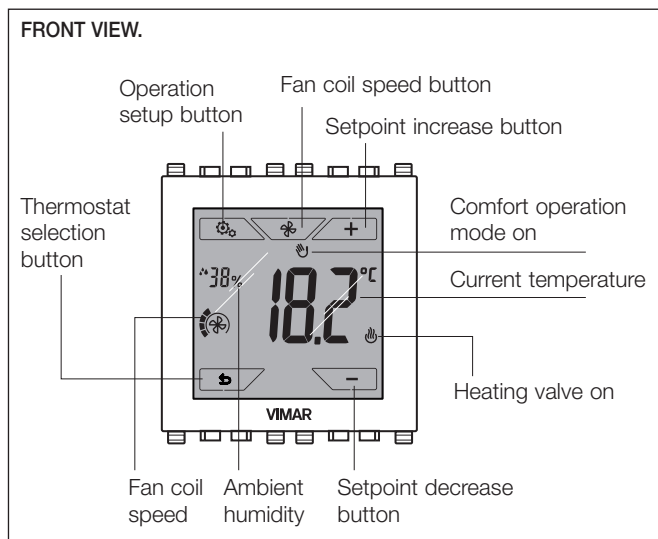

	Heating with boost function
	Air-conditioning with boost function
	Temperature display and thermostat B menu
	Temperature alarm due to exceeding threshold
	Window open indicator
	Temperature measurement unit (°C or °F)
	Relative humidity (displayed to the left of the temperature)
	Dewpoint alarm (linked to item no. 21, appears to the left of the temperature)
	Fan coil with 3 speeds and proportional control
	The 3 speeds of the fan coil are indicated by the symbols v1, v2 and v3
	The proportional speed control is indicated by the circular icon divided into 10 parts, each one of which corresponds to 10% of the maximum speed
	In 4-pipe systems, the display may show errors (E1, E2, E3, E4) as illustrated on the next page.

### Behaviour after bus power on/off

Bus power off: -.

Bus power on: the status will be set based on the setting of the parameters and the corresponding telegrams sent over the Bus.

### Behaviour after reset

As for Bus power-on.

**N.B.** The thermostat saves the comfort and standby setpoints set manually by the user; if you wish to reset them, set the ETS parameter "Reset Setpoint Shift in Economy Mode=YES". When switched to "Economy" mode, the thermostat will reset the STBY and CNF values.

## General characteristics and functions


### Neutral zone

The "Neutral Zone" is an operating mode of the thermostat (only for 4-pipe systems) in which the device keeps the temperature within a temperature range preset by the Winter Setpoint and Summer Setpoint (basically, there is no longer the usual Summer/Winter mode).

If the measured temperature is below the Winter Setpoint, the thermostat switches on the heating valve and heats the room until the temperature exceeds the set value (e.g. 20°C for Comfort mode or 18°C for Standby mode). If the measured temperature exceeds the Summer Setpoint then the thermostat switches on the cooling valve and keeps it on until the temperature falls below the set Summer Setpoint value.

Within the Neutral Zone the thermostat does not switch on any valves and the temperature can vary freely; this zone is therefore nothing more than the difference between the Summer and Winter Setpoints when the room temperature is between the winter setpoint and the summer one.

To avoid excessive temperature fluctuations, set a limited range ( $\leq 2^{\circ}\text{C}$ ) as shown in the figure below.

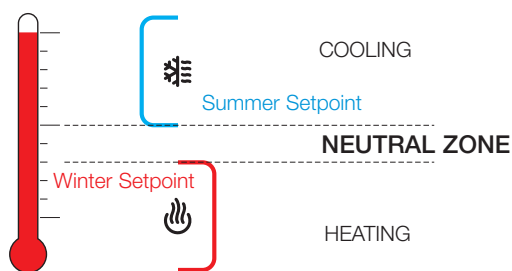

### Setpoint displayed in Neutral Zone operation

When the thermostat is working in the neutral zone, the setpoint used for the adjustment is always the **Current Setpoint**, namely the one relating to the last heating/cooling mode that came into operation; the value displayed is instead a new setpoint named "**Neutral Zone Setpoint**", which is the average value between the current summer and winter setpoints.

Changing the temperature of the "**Neutral Zone Setpoint**" (with the "+" and "-" buttons on the thermostat) will also cause a change to the value of the "**Shift Setpoint**" resulting in a shift of the two current summer/winter setpoint values; the room temperature will therefore not become the one set by the guest but that of the summer/winter setpoint which at that moment is closest to the value of the current temperature in the room. Between the two summer/winter setpoints, there is the neutral zone in which the system is not activated.

### Configuration

The KNX 02952 thermostat is configured in Neutral Zone mode if the following object is NOT connected: "Enable A: Summer - Winter - control" or "Enable B: Summer - Winter - control". The KNX 02952 thermostat can operate in Neutral Zone IF:

- The system has 4 pipes
- Winter Comfort Setpoint < Summer Comfort Setpoint
- Winter Standby Setpoint < Summer Standby Setpoint
- Winter Economy Setpoint < Summer Economy Setpoint
- Antifreeze < Too Hot

If these conditions are not satisfied, you can still commission the thermostat; if there is an error while starting up, the device will remain in "**Protected**" mode and an error message will be displayed.

For example, the following picture shows error 2 which is equivalent to Winter Comfort Setpoint  $\geq$  Summer Comfort Setpoint.



### Types of errors at the time of configuration

Error No.	Description
E1	Selected 2-pipe system instead of 4-pipe system
E2	Winter Comfort Setpoint $\geq$ Summer Comfort Setpoint
E3	Winter Standby Setpoint $\geq$ Summer Standby Setpoint
E4	Winter Economy Setpoint $\geq$ Summer Economy Setpoint
E5	Antifreeze $\geq$ Too Hot

**N.B.** Errors E2, E3, E4 and E5 may also be displayed if the thermostat is programmed in "4-pipe system" mode without the neutral zone according to the type of Setpoint shown in the table.

## Communication objects and ETS parameters

### List of existing communication objects and standard settings

No.	ETS name	Function	Description	Type	Flag 1						Priority
					C	R	W	T	U	I	
0	Internal sensor	Internal probe temperature	To see the temperature read by the thermostat sensor (to see the temperatures measured by thermostats A/B with Well-Contact Suite software, objects nos. 10/11 should be used)	2 byte	C	R	-	T	-	-	Low
1	External sensor	External NTC probe temperature	To see the temperature read by the wired NTC probe connected to the thermostat (to see the temperatures measured by thermostats A/B with Well-Contact Suite software, objects nos. 10/11 should be used)	2 byte	C	R	-	T	-	-	Low
2	External Temperature 1	KNX probe temperature on bus	To see the temperature read by a KNX sensor connected to the bus (to see the temperatures measured by thermostats A/B with Well-Contact Suite software, objects nos. 10/11 should be used)	2 byte	C	-	W	-	U	-	Low
3	External Temperature 2	KNX probe temperature on bus	To see the temperature read by a KNX sensor connected to the bus (to see the temperatures measured by thermostats A/B with Well-Contact Suite software, objects nos. 10/11 should be used)	2 byte	C	-	W	-	U	-	Low
4	External Temperature 3	KNX probe temperature on bus	To see the temperature read by a KNX sensor connected to the bus (to see the temperatures measured by thermostats A/B with Well-Contact Suite software, objects nos. 10/11 should be used)	2 byte	C	-	W	-	U	-	Low
5	External Temperature 4	KNX probe temperature on bus	To see the temperature read by a KNX sensor connected to the bus (to see the temperatures measured by thermostats A/B with Well-Contact Suite software, objects nos. 10/11 should be used)	2 byte	C	-	W	-	U	-	Low
6	External Temperature 5	KNX probe temperature on bus	To see the temperature read by a KNX sensor connected to the bus (to see the temperatures measured by thermostats A/B with Well-Contact Suite software, objects nos. 10/11 should be used)	2 byte	C	-	W	-	U	-	Low
7	External Temperature 6	KNX probe temperature on bus	To see the temperature read by a KNX sensor connected to the bus (to see the temperatures measured by thermostats A/B with Well-Contact Suite software, objects nos. 10/11 should be used)	2 byte	C	-	W	-	U	-	Low
8	External Temperature 7	KNX probe temperature on bus	To see the temperature read by a KNX sensor connected to the bus (to see the temperatures measured by thermostats A/B with Well-Contact Suite software, objects nos. 10/11 should be used)	2 byte	C	-	W	-	U	-	Low
9	External Temperature 8	KNX probe temperature on bus	To see the temperature read by a KNX sensor connected to the bus (to see the temperatures measured by thermostats A/B with Well-Contact Suite software, objects nos. 10/11 should be used)	2 byte	C	-	W	-	U	-	Low
10	Current Temperature	A: Temperature	To see the current temperature associated with thermostat-A (weighted average of the various associated probes): this object is used with Well-Contact Suite software to see the temperature measured by thermostat A	2 byte	C	R	-	T	-	-	Low
11	Current Temperature	B: Temperature	To see the current temperature associated with thermostat-B (weighted average of the various associated probes): this object is used with Well-Contact Suite software to see the temperature measured by thermostat B	2 byte	C	R	-	T	-	-	Low
<b>THERMOSTAT A:</b>											
12	Comfort	A: Mode - control	To select COMFORT operating mode by sending a 1 bit or to set the thermostat to STANDBY by sending a 0 bit	1 bit	C	-	W	-	U	-	Low
13	Energy Saving	A: Mode - control	To select ECONOMY operating mode by sending a 1 bit (a 0 bit is ignored)	1 bit	C	-	W	-	U	-	Low
14	Protected	A: Mode - control	To select OFF-ANTIFREEZE operating mode (or Too Hot in the case of air conditioning) by sending a 1 bit.	1 bit	C	-	W	-	U	-	Low
15	Off	A: Mode - control	To select OFF operating mode by sending a 1 bit (a 0 bit is ignored)	1 bit	C	R	W	-	U	-	Low
16	Thermostat Mode	A: Mode - control	To select operating mode by sending a Byte (1 = Comfort, 2 = StandBy, 3 = Economy, 4 = Protection). If you use supervision with Well Contact Suite this object must be associated with a group.	1 byte	C	-	W	-	U	-	Low
17	Thermostat Mode	A: Mode - status	To read the set operating mode by sending a Byte (1 = Comfort, 2 = StandBy, 3 = Economy, 4 = Protection). If you use supervision with Well Contact Suite this object must be associated with a group.	1 byte	C	R	-	T	-	-	Low

COMMUNICATION OBJECTS

Continued

C = Communication; R = Read; W = Write; T = Transmission; U = Enable update

## Communication objects and ETS parameters

Continued

No.	ETS name	Function	Description	Type	Flag 1						Priority
					C	R	W	T	U	I	
18	Status	A: Summer - Winter - status	To read the seasonal mode set on the thermostat (0 = Summer, 1 = Winter)	1 bit	C	R	-	T	-	-	Low
19	Enable	A: Summer - Winter - control	To set the seasonal mode on the thermostat (1 = Winter, 0 = Summer). If it is NOT associated with a group then thermostat A will function in Neutral Zone mode.	1 bit	C	-	W	-	U	-	Low
20	Thermostat Off	A: OFF communication - bus - control	This function is useful in the event of faults on the heating system to disable the valves with a 1 bit.	1 bit	C	-	W	-	U	-	Low
21	Dewpoint	A: Thermostat - control	If a 1 bit is sent to this object, the thermostat will show the specific icon on the display, turn OFF and stop the air conditioner (this works only in air conditioning mode and serves for example to avoid condensation on the floor) - <b>Note:</b> The thermostat requires a cyclical send to this object, with a time that can be set in the parameter "Dewpoint Supervision Time"	1 bit	C	-	W	-	U	-	Low
22	NOT USED										
23	Current Setpoint	A: Setpoint - status	To read the temperature setpoint set on the thermostat. If you want Well-contact Suite to know the setpoint currently set on the thermostats, this object must be linked to a group	2 byte	C	R	-	T	-	-	Low
24	Setpoint Shift	A: Setpoint - status, control	To read and control a temperature shift with respect to the current setpoint (setpoint set by ETS on the thermostat for the various operating modes CMF, STBY, etc.). The temperature shift permitted is limited to the range set by the parameter: <i>Guest Control Permitted</i> . If parameter <i>Guest Control Permitted is set to Off</i> the "Setpoint Shift" object does not shift the active setpoint.	2 byte	C	R	W	T	-	-	Low
25	Winter Comfort	A: Setpoint - status, control	To read and set the Winter Comfort setpoint.	2 byte	C	R	W	T	U	-	Low
26	Winter Standby	A: Setpoint - status, control	To read and set the Winter Standby setpoint	2 byte	C	R	W	T	U	-	Low
27	Winter Energy Saving	A: Setpoint - status, control	To read and set the Winter Economy setpoint	2 byte	C	R	W	T	U	-	Low
28	Winter Protected	A: Setpoint - status, control	To read and set the Winter Antifreeze setpoint	2 byte	C	R	W	T	U	-	Low
29	Summer Comfort	A: Setpoint - status, control	To read and set the Summer Comfort setpoint	2 byte	C	R	W	T	U	-	Low
30	Summer Standby	A: Setpoint - status, control	To read and set the Summer Standby setpoint	2 byte	C	R	W	T	U	-	Low
31	Summer Energy Saving	A: Setpoint - status, control	To read and set the Summer Economy setpoint	2 byte	C	R	W	T	U	-	Low
32	Summer Protected	A: Setpoint - status, control	To read and set the Summer Too Hot setpoint (power-off of climate control if the window is opened, for instance)	2 byte	C	R	W	T	U	-	Low
33	NOT USED										
<b>Thermostat A: Valves</b>											
34	Cooling/Heating Valve	A: Valve	If the "Valve" parameter is set for 2-pipe systems for valve management: to be used to control the head of a radiating system or the On/Off valve of a fan coil	1 bit	C	R	-	T	-	-	Low
34	Cooling Valve	A: Valve	If the "Valve" parameter is set for 4-pipe systems for valve management in Summer: to be used to control the head of a radiating system or the On/Off valve of a fan coil	1 bit	C	R	-	T	-	-	Low
35	Heating Valve	A: Valve	If the "Valve" parameter is set for 4-pipe systems for valve management in Winter: to be used to control the head of a radiating system or the On/Off valve of a fan coil	1 bit	C	R	-	T	-	-	Low
34	Cooling/Heating Valve	A: Valve	If the "Valve" parameter is set for 2-pipe proportional systems for proportional valve management: to be used to control the head of a radiating system or for the proportional valve of a fan coil	1 byte	C	R	-	T	-	-	Low
34	Cooling Valve	A: Valve	If the "Valve" parameter is set for 4-pipe proportional systems for Summer valve management: to be used to control the head of a radiating system or for the proportional valve of a fan coil	1 byte	C	R	-	T	-	-	Low

Continued

C = Communication; R = Read; W = Write; T = Transmission; U = Enable update



## Communication objects and ETS parameters

Continued

No.	ETS name	Function	Description	Type	Flag 1						Priority
					C	R	W	T	U	I	
35	Heating Valve	A: Valve	If the "Valve" parameter is set for 4-pipe proportional systems for Winter valve management: to be used to control the head of a radiating system or for the proportional valve of a fan coil	1 byte	C	R	-	T	-	-	Low
<b>Thermostat A: Second Stage</b>											
36	Cooling Valve	A: 2 <sup>nd</sup> Cooling Stage	If second cooling stage is enabled to be used for the boost function (cooling) for on/off valve control	1 bit	C	R	-	T	-	-	Low
36	Cooling Valve	A: 2 <sup>nd</sup> Cooling Stage	If second cooling stage is enabled to be used for the boost function (cooling) for proportional valve control	1 byte	C	R	-	T	-	-	Low
37	Heating Valve	A: 2 <sup>nd</sup> Heating Stage	If second heating stage is enabled to be used for the boost function (heating) for on/off valve control	1 bit	C	R	-	T	-	-	Low
37	Heating Valve	A: 2 <sup>nd</sup> Heating Stage	If second heating stage is enabled to be used for the boost function (heating) for proportional valve control	1 byte	C	R	-	T	-	-	Low
<b>Thermostat A: Fan</b>											
38	Proportional (0- 100%)	A: Fan Inputs	Used to set a proportional speed for the fan coil fan (if the selected fan is proportional with 3 speeds) via a supervisor (e.g., touch screen)	1 byte	C	-	W	-	U	-	Low
39	NOT USED										
40	V1 speed	A: Fan Inputs	Used to force activation of fan coil speed V1 (if the selected fan has 3 speeds)	1 bit	C	-	W	-	U	-	Low
41	V2 speed	A: Fan Inputs	Used to force activation of fan coil speed V2 (if the selected fan has 3 speeds)	1 bit	C	-	W	-	U	-	Low
42	V3 speed	A: Fan Inputs	Used to force activation of fan coil speed V3 (if the selected fan has 3 speeds)	1 bit	C	-	W	-	U	-	Low
43	Automatic	A: Fan Inputs	Used to force activation of fan coil speed AUTO (if the selected fan has 3 speeds)	1 bit	C	-	W	-	U	-	Low
44	Proportional (0- 100%)	A: Fan Outputs	Used to read the proportional speed of the fan coil fan (if the selected fan is proportional with 3 speeds with the 8-Bit Object - Proportional (0-100%). This object is used for controlling proportional actuators.	1 byte	C	R	-	T	-	-	Low
45	Off	A: Fan Outputs	Used to read the deactivation status of all 3 speeds (if the selected fan has 3 speeds). The thermostat sends a 1 bit when the fan is off (fan coil speed 0).	1 bit	C	R	-	T	-	-	Low
46	V1 speed	A: Fan Outputs	This is the object to pair with the relay of speed 1 of the fan coil (to read the status of speed V1 of the fan coil, this object can be polled by the bus)	1 bit	C	R	-	T	-	-	Low
47	V2 speed	A: Fan Outputs	This is the object to pair with the relay of speed 2 of the fan coil (to read the status of speed V2 of the fan coil, this object can be polled by the bus)	1 bit	C	R	-	T	-	-	Low
48	V3 speed	A: Fan Outputs	This is the object to pair with the relay of speed 3 of the fan coil (to read the status of speed V3 of the fan coil, this object can be polled by the bus)	1 bit	C	R	-	T	-	-	Low
49	V1 speed	A: Fan Disable	To disable speed V1 (if the selected fan has 3 speeds)	1 bit	C	R	W	T	U	-	Low
50	V2 speed	A: Fan Disable	To disable speed V2 (if the selected fan has 3 speeds)	1 bit	C	R	W	T	U	-	Low
51	V3 speed	A: Fan Disable	To disable speed V3 (if the selected fan has 3 speeds)	1 bit	C	R	W	T	U	-	Low
<b>Thermostat A: Window</b>											
52	Window Sensor	A: Window	Object to be paired with the input to which a window-contact is connected so that the thermostat switches to OFF-PROTECTED when the window is opened, depending on whether the mode is Air Conditioning or Heating	1 bit	C	-	W	-	U	-	Low

Continued

C = Communication; R = Read; W = Write; T = Transmission; U = Enable update

## Communication objects and ETS parameters

Continued

No.	ETS name	Function	Description	Type	Flag 1						Priority
					C	R	W	T	U	I	
<b>Thermostat A: Scenario</b>											
53	Scenario	A: Scenario	To activate a scenario with a 1 Byte message	1 byte	C	-	W	-	U	-	Low
<b>Thermostat A: Auto/Man</b>											
54	Temperature: Automatic/Manual	A: Manual operation	To see whether the guest has altered the thermostat temperature setpoint with respect to the default setting	1 bit	C	R	-	T	-	-	Low
55	Fan coil: Automatic/Manual	A: Manual operation	To see whether the guest has altered the fan coil speed with respect to the default setting	1 bit	C	R	-	T	-	-	Low
56	Temperature: Disable Local operation	A: Manual operation	Activating this object prevents the guest from altering the setpoint temperature by means of the thermostat buttons with respect to the value set by the bus	1 bit	C	-	W	-	U	-	Low
57	Fan coil: Disable Local Operation	A: Manual operation	Activating this object prevents the guest from altering the fan coil speed by means of the thermostat buttons with respect to the value set by the bus	1 bit	C	-	W	-	U	-	Low
<b>Thermostat A: Floor Probe Alarm</b>											
58	Floor Temperature	A: Alarm	If the temperature limitation is active an alarm is sent when the temperature exceeds the set threshold	1 bit	C	R	-	T	-	-	Low
<b>THERMOSTAT B:</b>											
59	Comfort	B: Mode - control	To select COMFORT operating mode by sending a 1 bit or to set the thermostat to STANDBY by sending a 0 bit	1 bit	C	-	W	-	U	-	Low
60	Energy Saving	B: Mode - control	To select ECONOMY operating mode by sending a 1 bit (a 0 bit is ignored)	1 bit	C	-	W	-	U	-	Low
61	Protected	B: Mode - control	To select ANTIFREEZE operating mode (or Too Hot in the case of air conditioning) by sending a 1 bit.	1 bit	C	-	W	-	U	-	Low
62	Off	B: Mode - control	To select OFF operating mode by sending a 1 bit (a 0 bit is ignored)	1 bit	C	R	W	-	U	-	Low
63	Thermostat Mode	B: Mode - control	To select operating mode by sending a Byte (1 = Comfort, 2 = StandBy, 3 = Economy, 4 = Protection). If you use supervision with Well Contact Suite this object must be associated with a group.	1 byte	C	-	W	-	U	-	Low
64	Thermostat Mode	B: Mode - status	To read the set operating mode by sending a Byte (1 = Comfort, 2 = StandBy, 3 = Economy, 4 = Protection). If you use supervision with Well Contact Suite this object must be associated with a group.	1 byte	C	R	-	T	-	-	Low
65	Status	B: Summer - Winter - status	To read the seasonal mode set on the thermostat (0 = Summer, 1 = Winter)	1 bit	C	R	-	T	-	-	Low
66	Enable	B: Summer - Winter - control	To set the seasonal mode on the thermostat (1 = Winter, 0 = Summer). If it is NOT associated with a group then thermostat B will function in Neutral Zone mode.	1 bit	C	-	W	-	U	-	Low
67	Thermostat Off	B: OFF communication - bus - control	This function is useful in the event of faults on the heating system to disable the valves with a 1 bit.	1 bit	C	-	W	-	U	-	Low
68	Dewpoint	B: Thermostat - control	If a 1 bit is sent to this object, the thermostat will show the specific icon on the display, turn OFF and stop the air conditioner (this works only in air conditioning mode and serves for example to avoid condensation on the floor) - <b>Note:</b> The thermostat requires a cyclical send to this object, with a time that can be set in the parameter "Dewpoint Supervision Time"	1 bit	C	-	W	-	U	-	Low
69	NOT USED										
70	Current Setpoint	B: Setpoint - status	To read the temperature setpoint set on the thermostat. If you want Well-contact Suite to know the setpoint currently set on the thermostats, this object must be linked to a group	2 byte	C	R	-	T	-	-	Low
71	Setpoint Shift	B: Setpoint - status, control	To read and control a temperature shift with respect to the current setpoint (setpoint set by ETS on the thermostat for the various operating modes CMF, STBY, etc.). The temperature shift permitted is limited to the range set by the parameter: Guest Control Permitted. If parameter Guest Control Permitted is set to Off the "Setpoint Shift" object does not shift the active setpoint.	2 byte	C	R	W	T	-	-	Low

Continued

C = Communication; R = Read; W = Write; T = Transmission; U = Enable update

## Communication objects and ETS parameters

Continued

No.	ETS name	Function	Description	Type	Flag 1						Priority
					C	R	W	T	U	I	
72	Winter Comfort	B: Setpoint - status, control	To read and set the Winter Comfort setpoint.	2 byte	C	R	W	T	U	-	Low
73	Winter Standby	B: Setpoint - status, control	To read and set the Winter Standby setpoint	2 byte	C	R	W	T	U	-	Low
74	Winter Energy Saving	B: Setpoint - status, control	To read and set the Winter Economy setpoint	2 byte	C	R	W	T	U	-	Low
75	Winter Protected	B: Setpoint - status, control	To read and set the Winter Antifreeze setpoint	2 byte	C	R	W	T	U	-	Low
76	Summer Comfort	B: Setpoint - status, control	To read and set the Summer Comfort setpoint	2 byte	C	R	W	T	U	-	Low
77	Summer Standby	B: Setpoint - status, control	To read and set the Summer Standby setpoint	2 byte	C	R	W	T	U	-	Low
78	Summer Energy Saving	B: Setpoint - status, control	To read and set the Summer Economy setpoint	2 byte	C	R	W	T	U	-	Low
79	Summer Protected	B: Setpoint - status, control	To read and set the Summer Too Hot setpoint (power-off of climate control if the window is opened, for instance)	2 byte	C	R	W	T	U	-	Low
80	NOT USED										
<b>Thermostat B: Valves</b>											
81	Cooling/Heating Valve	B: Valve	If the "Valve" parameter is set for 2-pipe systems for valve management: to be used to control the head of a radiating system or the On/Off valve of a fan coil	1 bit	C	R	-	T	-	-	Low
81	Cooling Valve	B: Valve	If the "Valve" parameter is set for 4-pipe systems for valve management in Summer: to be used to control the head of a radiating system or the On/Off valve of a fan coil	1 bit	C	R	-	T	-	-	Low
82	Heating Valve	B: Valve	If the "Valve" parameter is set for 4-pipe systems for valve management in Winter: to be used to control the head of a radiating system or the On/Off valve of a fan coil	1 bit	C	R	-	T	-	-	Low
81	Cooling/Heating Valve	B: Valve	If the "Valve" parameter is set for 2-pipe proportional systems for proportional valve management: to be used to control the head of a radiating system or for the proportional valve of a fan coil	1 byte	C	R	-	T	-	-	Low
81	Cooling Valve	B: Valve	If the "Valve" parameter is set for 4-pipe proportional systems for Summer valve management: to be used to control the head of a radiating system or for the proportional valve of a fan coil	1 byte	C	R	-	T	-	-	Low
82	Heating Valve	B: Valve	If the "Valve" parameter is set for 4-pipe proportional systems for Winter valve management: to be used to control the head of a radiating system or for the proportional valve of a fan coil	1 byte	C	R	-	T	-	-	Low
<b>Thermostat B: Second Stage</b>											
83	Cooling Valve	B: 2 <sup>nd</sup> Cooling Stage	If second cooling stage is enabled to be used for the boost function (cooling) for on/off valve control	1 bit	C	R	-	T	-	-	Low
83	Cooling Valve	B: 2 <sup>nd</sup> Cooling Stage	If second cooling stage is enabled to be used for the boost function (cooling) for proportional valve control	1 byte	C	R	-	T	-	-	Low
84	Heating Valve	B: 2 <sup>nd</sup> Heating Stage	If second heating stage is enabled to be used for the boost function (heating) for on/off valve control	1 bit	C	R	-	T	-	-	Low
84	Heating Valve	B: 2 <sup>nd</sup> Heating Stage	If second heating stage is enabled to be used for the boost function (heating) for proportional valve control	1 byte	C	R	-	T	-	-	Low
<b>Thermostat B: Fan</b>											
85	Proportional (0- 100%)	B: Fan Inputs	Used to set a proportional speed for the fan coil fan (if the selected fan is proportional or 8-bit with 3 speeds) via a supervisor (e.g., touch screen)	1 byte	C	-	W	-	U	-	Low
86	NOT USED										
87	V1 speed	B: Fan Inputs	Used to force activation of fan coil speed V1 (if the selected fan has 3 speeds)	1 bit	C	-	W	-	U	-	Low

Continued

C = Communication; R = Read; W = Write; T = Transmission; U = Enable update

## Communication objects and ETS parameters

Continued

No.	ETS name	Function	Description	Type	Flag 1						Priority
					C	R	W	T	U	I	
88	V2 speed	B: Fan Inputs	Used to force activation of fan coil speed V2 (if the selected fan has 3 speeds)	1 bit	C	-	W	-	U	-	Low
89	V3 speed	B: Fan Inputs	Used to force activation of fan coil speed V3 (if the selected fan has 3 speeds)	1 bit	C	-	W	-	U	-	Low
90	Automatic	B: Fan Inputs	Used to force activation of fan coil speed AUTO (if the selected fan has 3 speeds)	1 bit	C	-	W	-	U	-	Low
91	Proportional (0- 100%)	B: Fan Outputs	Used to read the proportional speed of the fan coil fan (if the selected fan is proportional or 8-bit with 3 speeds). This object is used for controlling proportional actuators.	1 byte	C	R	-	T	-	-	Low
92	Off	B: Fan Outputs	Used to read the deactivation status of all 3 speeds (if the selected fan has 3 speeds). The thermostat sends a 1 bit when the fan is off (fan coil speed 0).	1 bit	C	R	-	T	-	-	Low
93	V1 speed	B: Fan Outputs	This is the object to pair with the relay of speed 1 of the fan coil (to read the status of speed V1 of the fan coil, this object can be polled by the bus)	1 bit	C	R	-	T	-	-	Low
94	V2 speed	B: Fan Outputs	This is the object to pair with the relay of speed 2 of the fan coil (to read the status of speed V2 of the fan coil, this object can be polled by the bus)	1 bit	C	R	-	T	-	-	Low
95	V3 speed	B: Fan Outputs	This is the object to pair with the relay of speed 3 of the fan coil (to read the status of speed V3 of the fan coil, this object can be polled by the bus)	1 bit	C	R	-	T	-	-	Low
96	V1 speed	B: Fan Disable	To disable speed V1 (if the selected fan has 3 speeds)	1 bit	C	R	W	T	U	-	Low
97	V2 speed	B: Fan Disable	To disable speed V2 (if the selected fan has 3 speeds)	1 bit	C	R	W	T	U	-	Low
98	V3 speed	B: Fan Disable	To disable speed V3 (if the selected fan has 3 speeds)	1 bit	C	R	W	T	U	-	Low
<b>Thermostat B: window</b>											
99	Window Sensor	B: Window	Object to be paired with the input to which a window-contact is connected so that the thermostat switches to OFF-PROTECTED when the window is opened, depending on whether the mode is Air Conditioning or Heating	1 bit	C	-	W	-	U	-	Low
<b>Thermostat B: scenario</b>											
100	Scenario	B: Scenario	To activate a scenario with a 1 Byte message	1 byte	C	-	W	-	U	-	Low
<b>Thermostat B: Auto/Man</b>											
101	Temperature: Automatic/Manual	B: Manual operation	To see whether the guest has altered the thermostat temperature setpoint with respect to the default setting	1 bit	C	R	-	T	-	-	Low
102	Fan coil: Automatic/Manual	B: Manual operation	To see whether the guest has altered the fan coil speed with respect to the default setting	1 bit	C	R	-	T	-	-	Low
103	Temperature: Disable Local operation	B: Manual operation	Activating this object prevents the guest from altering the setpoint temperature by means of the thermostat buttons with respect to the value set by the bus	1 bit	C	-	W	-	U	-	Low
104	Fan coil: Disable Local Operation	B: Manual operation	Activating this object prevents the guest from altering the fan coil speed by means of the thermostat buttons with respect to the value set by the bus	1 bit	C	-	W	-	U	-	Low
<b>Thermostat B: Floor Probe Alarm</b>											
105	Floor Temperature	B: Alarm	If the temperature limitation is active an alarm is sent when the temperature exceeds the set threshold	1 bit	C	R	-	T	-	-	Low
<b>GLOBAL</b>											
106	Initialisation	Alarm	<b>Do not use:</b> it is used for automatic testing during production of the device	1 bit	C	R	-	T	-	-	Low
107	NOT USED										

Continued

C = Communication; R = Read; W = Write; T = Transmission; U = Enable update

## Communication objects and ETS parameters

Continued

No.	ETS name	Function	Description	Type	Flag 1						Priority
					C	R	W	T	U	I	
108 NOT USED											
109	General	Alarm	Used for viewing, on the thermostat display, the triggering of a generic alarm on the KONNEX BUS	1 bit	C	R	-	T	-	-	Low
110	Input	Input	Device IN control	1 bit	C	R	-	T	-	-	Low
111	Input Status	Input	Device input status. It appears if the input is set as "general use" and "Toggle rising/falling edge"	1 bit	C	-	W	-	U	-	Low
112	On/Off	Relay	Device relay control (setting relay operating parameters as "general use")	1 bit	C	-	W	-	U	-	Low
113	Status	Relay	Device relay status (setting relay operating parameters as "general use")	1 bit	C	R	-	T	-	-	Low
114	Value	Humidity	To know and view the humidity read by a KNX probe connected to the bus	1 byte	C	-	W	-	U	-	Low
114	Value	Humidity	To know and view the humidity read by a KNX probe connected to the bus (*)	2 byte	C	-	W	-	U	-	Low
115	Setpoint shift increase	Setpoint	To control an increase equivalent to "setpoint shift step" of the current current setpoint (setpoint set by ETS on the thermostat for the various operating modes CMF, STBY, etc.). The temperature shift permitted is limited to the range set by the parameter: Guest Control Permitted	1 bit	C	-	W	-	U	-	Low
116	Setpoint shift decrease	Setpoint	To control a decrease equivalent to "setpoint shift step" of the current current setpoint (setpoint set by ETS on the thermostat for the various operating modes CMF, STBY, etc.). The temperature shift permitted is limited to the range set by the parameter: Guest Control Permitted.	1 bit	C	-	W	-	U	-	Low

(\*) This datapoint is only available starting from firmware version 2.00 and later.

Number of communication objects	Max. number of group addresses	Max. number of associations
109	254	255

## Communication objects and ETS parameters

Reference ETS parameters

### General

#### General parameters

ETS text	Values available [Default value]	Comment
Displayed Value	0 = View Current Temperature	You can choose whether to view on the display: the temperature measured, the fan coil speed and the valve status, no information, the temperature delta compared to the Setpoint set by the project
	1 = Current setpoint	
	2 = Display Off	
	3 = View Setpoint Difference	
	[0]	
Visibility of operating modes	Yes	Possibility of disabling the operating mode setting button on the display
	No	
	[Yes]	
Heating icon visible	Yes	Possibility of disabling the heating icon on the display
	No	
	[Yes]	
Cooling icon visible	Yes	Possibility of disabling the air conditioning icon on the display
	No	
	[Yes]	
Button Activation	0 = Enable	You can choose whether to make the thermostat buttons operative
	1 = Disable	
	[0]	
Temperature units	0 = Celsius	Only for the display
	1 = Fahrenheit	
	[0]	
Enable Menu	0 = Disable	If enabled, the thermostat operating mode can be changed. The Reduced menu lets you locally change the thermostat operating modes only from Comfort to Protected and vice versa.
	1 = Enable	
	2 = Enable Reduced	
	[1]	
Percentage displayed	0 = None	To view the humidity on the display as a percentage or a 2 Byte value.
	1 = Humidity	
	2 = Percentage	
	[1]	

Configurazione Display

Valore Visualizzato Visualizza Temperatura Attuale

Visualizzazione modi di funzionamento  si  no

Icona riscaldamento visibile  si  no

Icona raffrescamento visibile  si  no

Attivazione Tasti  Abilita  Disabilita

Unità di Temperatura  Celsius  Fahrenheit

Menù Configurazione



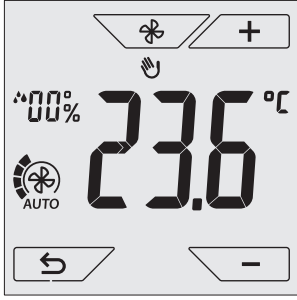
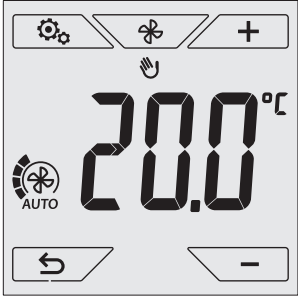
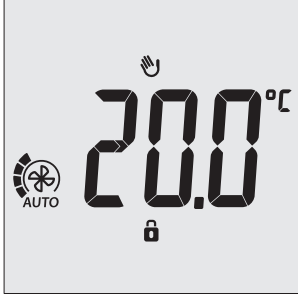
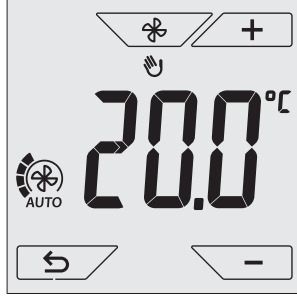

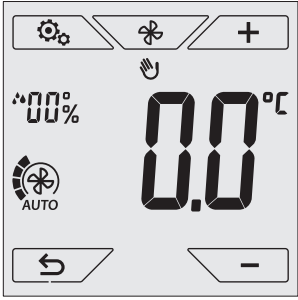

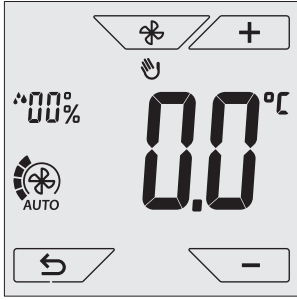
Abilita Menù Abilita

Percentuale Visualizzata Umidità

General settings

**CAUTION: If you use thermostats art. 02952 with firmware version 1.00 do not use the setting: Percentage displayed = Humidity.**

## Communication objects and ETS parameters

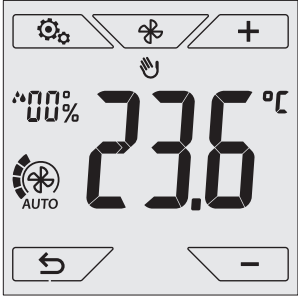Value Displayed	Enable Menu=Enable Button Activation = Enable	Enable Menu=Enable Button Activation = Disable	Enable Menu=Disable Button Activation = Enable
Display Current Temperature			
Setpoint Current			
Display Off			
View Difference Setpoint			

**Note:** In "View Setpoint Difference" mode, the difference between the Setpoint set via configuration by ETS and the Setpoint modified locally by the user is displayed. When the set Setpoint is the design Setpoint the thermostat displays 0.0.

 
## Communication objects and ETS parameters

### Backlighting

#### Backlighting Parameters

ETS text	Values available [Default value]	Comment
Backlighting	0 = Off	Always off
	1 = ON push button	On when pressing the touch buttons. Note: after some time of inactivity, the backlighting turns off.
	2 = Ecometer Mode	Ecometer Mode on
	[1]	

When Backlighting is set to "Ecometer Mode" the display backlighting colour indicates the expected consumption provided by the Ecometer with the background colour.



**CAUTION:** We do not recommend using the Ecometer view when the thermostat is set to neutral zone mode as the colour of the display depends on the active setpoint and the information for the end user might not be clear.

Retroilluminazione: Off

Backlighting Off

Retroilluminazione: Modo Ecometer

Ecometer Mode

Retroilluminazione: Pulsante On

Colore Sfondo:  Colori Predefiniti  Colore Personalizzato

Colore: Bianco (R 255, G 255, B 255)

Backlighting On

Retroilluminazione: Pulsante On

Colore Sfondo:  Colori Predefiniti  Colore Personalizzato

Colore: Bianco (R 255, G 255, B 255)

- Rosso (R 255, G 0, B 0)
- Verde (R 0, G 255, B 0)
- Blu (R 0, G 0, B 255)
- Bianco (R 255, G 255, B 255) ✓
- Ambra (R 255, G 119, B 0)
- Giallo (R 255, G 255, B 0)
- Magenta (R 255, G 0, B 119)
- Ciano (R 0, G 255, B 255)

#### Default colours

Retroilluminazione: Pulsante On

Colore Sfondo:  Colori Predefiniti  Colore Personalizzato

Colore LED Rosso: 0

Colore LED Verde: 0

Colore LED Blu: 0

#### Colour customisation

### Digital Input

#### Digital Input Parameters

ETS text	Values available [Default value]	Comment
Input Function	0 = General Use	If set as "General use", it also sends 0/1 over the bus towards a supervisor
	1 = Window Sensor	
Function (for general use)	[0]	
	0 = Switching on Rising Edge	Rising edge = close contact
	1 = Toggle on Rising Edge	Falling edge = open contact
	2 = Switching on Falling Edge	Switching = sends a 1 bit value (On/Off) on opening and the opposite on closing
	3 = Toggle on Falling Edge	Toggle = on every defined edge (opening or closure), On and then Off is sent to the cycle
	4 = Status Send	To send the contact status upon each switching and also cyclically.
	[0]	
Window Sensor Mode (for thermostat-A and thermostat-B)	0 = Deactivated	Defines whether the window sensor is normally open or closed.
	1 = Normally Open	
	2 = Normally Closed	
	[0]	

Funzione Ingresso:  Uso Generico  Sensore Finestra

A: Modalità Sensore Finestra: Normalmente Aperto

B: Modalità Sensore Finestra: Normalmente Aperto

#### Digital Input - Window Sensor

Funzione Ingresso:  Uso Generico  Sensore Finestra

Funzione: Invio Stato

Valore Fronte di Discesa:  Off  On

Valore Fronte di Salita:  Off  On

Invio Ciclico:  Disabilita  Abilita

#### Digital Input - General Use



## Communication objects and ETS parameters

### Internal/External Temperature Sensor (Thermostat-A, Thermostat-B)

#### Sensor parameters

ETS text	Values available [Default value]	Comment
Temperature Offset	-2 °C ... +2 °C	Calibration of thermostat reading (or of average of probes)
	[0]	
Cyclic Send Time	0...30 min.	0=Off. Activates cyclic send of object no. 0 "Internal Sensor" or no. 1 "External Sensor" (both for the thermostat A and for thermostat B)
	[0 = Off]	

Continued

**Note:** If you use the Well Contact Suite supervision system to update the value displayed by the supervision station of the "A/B Current Temperature" linked to objects nos. 10 and 11, you must enable cyclic send or send on change. In the event of a conjunction of a high number of thermostats, it is not advisable to enable numerous cyclic sends with timing that is too low to avoid overloading the BUS communications.

### Thermostat (A/B)

#### Guest control permitted

ETS text	Values available [Default value]	Comment
Guest control permitted	0 = Off	Determine how much the guest can change the setpoint from the value set on the thermostat (up/down)
	1 = 1.0 °C	
	2 = 2.0 °C	
	3 = 3.0 °C	
	4 = 4.0 °C	
	5 = 5.0 °C	
	6 = No Limitation	
[3]		

#### Current Temperature (A/B)

ETS text	Values available [Default value]	Comment
Temperature sensor weightings	0... 100	For the thermostat's internal sensor, the Vimar wired NTC probe (if present) and the KNX probes, this determines the relative importance for calculating the weighted average of the measured temperatures
	[0]	
Cyclic Send Time	0 = Off	Sets the frequency in minutes with which the thermostat (A/B) must send the measured temperature value (or the weighted average of the probes) over the bus to a supervisor. Activates cyclic send of object no. 10 and 11 "Current Temperature" of thermostat A/B
	11 = 30 min.	
	[0 = Off]	
Send on Change	0 = Off	Sets the temperature difference measured by the thermostat (A/B) that results in the read value (or the weighted average of the probes) being sent over the bus towards a supervisor. Activates cyclic send of object no. 10 and 11 "Current Temperature" of thermostat A/B
	1.0 = 1.0 °C	
	[0 = Off]	

Continued

ETS text	Values available [Default value]	Comment
Send on Change	0... 1.0 °C	Sets the minimum measured temperature change with respect to the setpoint that will cause the thermostat to send the current value over the bus to a supervisor.
	[0 = Off]	

Offset Temperatura	0,0 °C
Tempo Invio Ciclico	Off
Invio su Variazione	Off

Internal/external temperature sensor

ETS text	Values available [Default value]	Comment
Setpoint shift step	0.1, 0.2...1	For thermostat A setpoint shift step upon receipt of control on objects 115 and 116
	[1]	

Regolazione Permessa al Cliente	3,0 °C
Passo dello shift setpoint	1 °C

Thermostat (A/B)

Peso del Sensore di Temperatura Interno	100
Peso del Sensore di Temperatura Esterno	0
Peso Temperatura Esterna 1	0
Peso Temperatura Esterna 2	0
Peso Temperatura Esterna 3	0
Peso Temperatura Esterna 4	0
Peso Temperatura Esterna 5	0
Peso Temperatura Esterna 6	0
Peso Temperatura Esterna 7	0
Peso Temperatura Esterna 8	0
Temperatura Attuale	
Tempo Invio Ciclico	Off
Invio su Variazione	Off

Current temperature (A/B)

## Communication objects and ETS parameters

### Setpoint (A/B)

#### Setpoint parameters

ETS text	Values available [Default value]	Comment
Mode at bus power on	1 = Comfort	Thermostat operating mode at bus power on
	2 = Standby	
	3 = Energy saving	
	4 = Protect	
	255 = Last Mode Selected	
	[255]	
Time between Heating and Cooling	1 min.	To avoid the formation of condensation with radiating systems during changes of season
	10 min.	
	15 min.	
	20 min.	
	25 min.	
	30 min.	
	45 min.	
	60 min.	
[30]		
Dewpoint Supervision Time	0 = Off	Sets the time within which the thermostat must receive a message to the "Dewpoint" object from a device connected to a humidistat.
	30 sec	
	1 min.	
	2 min.	
	3 min.	A bit set to "1" will stop heating/air conditioning and set to "0" will cause it to restart. If messages have not arrived, when this time has elapsed heating/air conditioning will restart
	4 min.	
	5 min.	
	10 min.	
	15 min.	
	20 min.	
	25 min.	
30 min.		
[0 = Off]		
Cyclic Send Time	0 = Off	Sets the time for cyclic sending of temperature setpoint over bus towards a supervisor
	30 sec.	
	1 min.	
	2 min.	
	3 min.	
	4 min.	
	5 min.	
	10 min.	
	15 min.	
	20 min.	
	25 min.	
	30 min.	
[0 = Off]		
Send on Change	0 = Off	Sets the minimum temperature change made by the guest with respect to the setpoint that results in the current setpoint being sent over the bus towards a supervisor
	0.1 °C	
	0.2 °C	
	0.3 °C	
	0.4 °C	
	0.5 °C	
	0.6 °C	
	0.7 °C	
	0.8 °C	
	0.9 °C	
	1.0 °C	
[0 = Off]		
Reset Setpoint Shift in Economy Mode	Yes	By selecting "Yes", when the thermostat goes into Energy Saving (Economy) mode, the setpoint set by the user in Comfort and Standby mode is reset to the design default value. This function is useful for hotel applications and with the Well Contact Suite supervision software.
	No	
	[Yes]	

Modo all'accensione del Bus Ultima Modalità Selezionata ▼

Tempo tra Riscaldamento e Raffreddamento 30 min ▼

Tempo di Supervisione Punto di Rugiada Off ▼

Setpoint Attuale

Tempo Invio Ciclico Off ▼

Invio su Variazione Off ▼

Reset Setpoint Shift in Economy Mode  si  no

Setpoint parameters

**Important:** The "Time between Heating and Cooling" parameter is the wait time it takes for the thermostat to switch from summer-winter and vice versa. This parameter is especially useful in some underfloor radiant systems where you set a high time value to prevent the formation of condensation; this applies especially when the thermostats work with a neutral zone and so there could be multiple seasonal changes in a single day. If instead, depending on the type of system, you want a faster response of the thermostat, it is necessary to reduce the value of this parameter.

## Communication objects and ETS parameters

### Temperature Setpoint (A/B)

#### Sensor parameters


ETS text	Values available [Default value]	Comment
Winter Comfort Setpoint	[20]	See "Range" table
Winter Standby Setpoint	[18]	See "Range" table
Winter Energy Saving Setpoint	[15]	See "Range" table
Antifreeze	0 = Control Off	If you set "On" you can set the temperature the thermostat goes in "Protected" mode; if you set "Off", when the thermostat is in "Protected" mode it will turn off temperature control and will not send the current setpoint temperature
	1 = Control On	
	[1 = 011]	
Summer Comfort Setpoint	[25]	See "Range" table
Summer Standby Setpoint	[28]	See "Range" table
Summer Energy Saving Setpoint	[30]	See "Range" table

Continued

#### Setpoint range

Temp. °C	Temp. °C	Temp. °C	Temp. °C
5	16	27	38
6	17	28	39
7	18	29	40
8	19	30	41
9	20	31	42
10	21	32	43
11	22	33	44
12	23	34	45
13	24	35	
14	25	36	
15	26	37	

PROTECTED ECONOMY STANDBY COMFORT

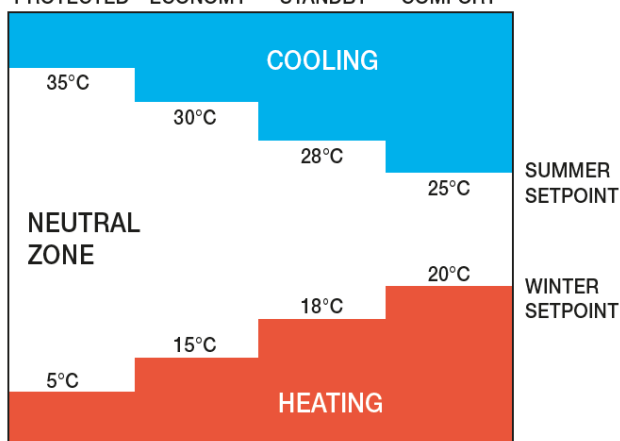

**CAUTION:** When the thermostat is in Neutral Zone mode, the breadth of this must be progressively increasing for the different operating modes of Comfort (minimum neutral zone breadth), Standby, Energy Saving and Protected. This setting made with ETS ensures that, when the thermostat changes operating mode, the active setpoint is always at a suitable value and the thermostat does not start cooling if it was heating before or vice versa, causing considerable energy consumption.

Continued

ETS text	Values available [Default value]	Comment
Too hot	0 = Control Off	If you set "On" you can set the temperature the thermostat goes in "Protected" mode; if you set "Off", when the thermostat is in "Protected" mode it will turn off temperature control and will not send the current setpoint temperature
	1 = Control On	
	[1 = On]	

**Note:** In the case of a 4-pipe system, the winter setpoint cannot take a higher value than the summer setpoint.

Inverno

Setpoint Comfort Inverno: 20 °C

Setpoint Standby Inverno: 18 °C

Setpoint Risparmio Energetico Inverno: 15 °C

Antigelo:  Regolazione Off  Regolazione On

Setpoint Antigelo: 5 °C

Estate

Setpoint Comfort Estate: 25 °C

Setpoint Standby Estate: 28 °C

Setpoint Risparmio Energetico Estate: 30 °C

Troppo Caldo:  Regolazione Off  Regolazione On

Temperature setpoint parameters

## Communication objects and ETS parameters

### Window sensor (A/B)

#### Sensor parameters

ETS text	Values available [Default value]	Comment
Window sensor delay	0 = Off	Sets the time delay that heating/air conditioning stops after window open detection
	8 = 120 sec.	
	<b>[4 = 30]</b>	

Ritardo per Sensore Finestra

30 sec ▼

Off

5 sec

10 sec

20 sec

**30 sec** ✓

45 sec

60 sec

90 sec

120 sec

Window sensor (A/B)

#### Control parameters

ETS text	Values available [Default value]	Comment
Temperature Control	0 = Control On/Off	Set according to the type of control required for the heating/air conditioning system
	1 = Integral Band	
	2 = Proportional/Integral Band	
	<b>[0]</b>	
Proportional Cooling Value	1.0 °C	To be set according to the characteristics of the system and the room (consult a heating engineer)
	1.1 °C	
	1.2 °C	
	1.3 °C	
	1.4 °C	
	1.5 °C	
	1.6 °C	
	1.7 °C	
	1.8 °C	
	2.0 °C	
	2.2 °C	
	2.5 °C	
	3.0 °C	
	3.5 °C	
4.0 °C		
4.5 °C		
5.0 °C		
<b>[3.0 °C]</b>		

Regolazione Temperatura

Regolazione On/Off ▼

Coefficiente Differenziale

0,2 °C ▼

Control On/Off (A/B)

## Communication objects and ETS parameters

### Proportional/Integral (PI) control

This type of control uses a more advanced algorithm that keeps the temperature inside the room more stable, increasing comfort. This algorithm works by switching the system on and off so as to be like a gradual increase or decrease in the system's thermal (or refrigerating) power. To obtain optimal performance you need to perform the calibration according to the type of room and heating system.


Define the variables:

- Ta = room temperature
- Sp = current setpoint
- Kp = coefficient of the proportional component
- Ki = coefficient of the integral component
- Bp = proportional band
- Ti = integrative time


the algorithm is characterised by the following parameters:

- **Proportional band:** used to calculate the coefficient  $K_p = 100 / B_p$  and corresponds to the breadth of the proportional control band. Starting from the set temperature, this value is the temperature range in which the system power goes from 0% to 100%. *For example:* with the (heating) temperature set to 20.0°C and Band (P) =4.0°C, the thermostat runs the heating system at 100% when Ta is  $\leq 16.0^\circ\text{C}$ ; as this temperature increases, the system power is consequently lowered down to 0% when Ta reaches 20°C. The value must be set taking account of the thermal capacity of the room to control; in general, it is recommended to use small values for rooms with a good level of thermal insulation and vice versa.
- **Integrative time:** used to calculate the coefficient  $K_i = K_p / T_i$  and corresponds to the time passed which, when equal to the deviation from the setpoint (error), the integrative component generates a contribution equal to that generated by the proportional component. The integral contribution reduces the error on full operation if thermal energy is lost in the room to be controlled, as this contribution increases according to the time during which the setpoint is not reached. If this value is not set correctly, it can cause transients with variations around the setpoint or it may take longer to reach the setpoint.

### Proportional integral PWM: PI control with On/Off valve

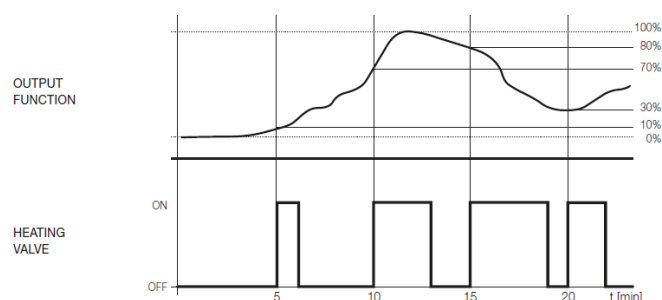

### Continuous integral proportional: PI control with proportional valve

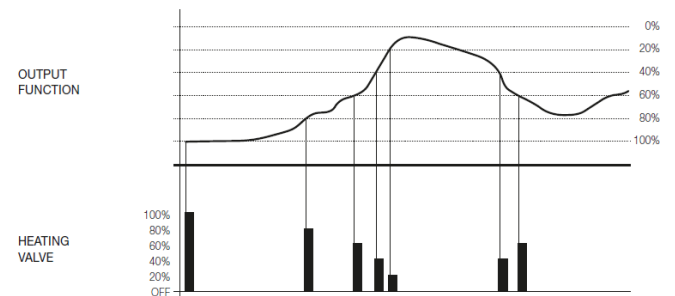

The parameters of the proportional and integral coefficients Kp and Ki are set using the ETS software: the proportional coefficient Kp for heating corresponds to the "Heating Proportional Value" parameter while the coefficient for cooling is set using the "Cooling Proportional Value" parameter. The integral time Ti is set with the "Heating Integral Value" and "Cooling Integral Value" parameters for heating and cooling, respectively.

The PI control parameters should be set according to the type of heating or cooling system used, the size of the room and its thermal insulation.

**IMPORTANT:** Generally, when using fan coils, PI control is not used. The valve is typically managed with On/Off control and On/Off valve or proportional valve (0%-100%); the fine adjustment is then made using the fan speed.

## Communication objects and ETS parameters

Continued

ETS text	Values available [Default value]	Comment
Integral Cooling Value	5 min.	
	6 min.	
	7 min.	
	8 min.	
	9 min.	
	10 min.	
	12 min.	
	15 min.	
	17 min.	
	20 min.	
	25 min.	
	30 min.	
	40 min.	
	50 min.	
	60 min.	
	90 min.	
120 min.		
	<b>[20 min.]</b>	
Proportional Heating Value	0 = Off	To be set according to the characteristics of the system and the room (consult a heating engineer)
	1.0 °C	
	1.1 °C	
	1.2 °C	
	1.3 °C	
	1.4 °C	
	1.5 °C	
	1.6 °C	
	1.7 °C	
	1.8 °C	
	2.0 °C	
	2.2 °C	
	2.5 °C	
	3.0 °C	
	3.5 °C	
	4.0 °C	
4.5 °C		
5.0 °C		
	<b>[3.0 °C]</b>	
Integral Heating Value	0=Off	
	5 min.	
	6 min.	
	7 min.	
	8 min.	
	9 min.	
	10 min.	
	12 min.	
	15 min.	
	17 min.	
	20 min.	
	25 min.	
	30 min.	
	40 min.	
	50 min.	
	60 min.	
90 min.		
120 min.		
	<b>[20 min.]</b>	
Differential Coefficient	0.1... 1.0 °C	For On/Off type control: set the thermostat (A/B) hysteresis that determines activation/deactivation of the system with reference to the difference between the setpoint and the measured temperature
	<b>[1=0.2]</b>	

Regolazione Temperatura	Banda Integrale
Valore Integrale Raffreddamento	20 min
Valore Integrale Riscaldamento	20 min

Integral band (A/B)

Regolazione Temperatura	Banda Proporzionale/Integrale
Valore Proporzionale Raffreddamento	3,0 °C
Valore Integrale Raffreddamento	20 min
Valore Proporzionale Riscaldamento	3,0 °C
Valore Integrale Riscaldamento	20 min

Proportional/integral band (A/B)


## Communication objects and ETS parameters

### Valve (A/B)


#### Valve parameters

ETS text	Values available [Default value]	Comment
System Layout	0 = 2-Pipe Circuit On/Off	Select according to the type of installed system
	1 = 4-Pipe Circuit On/Off	
	2 = 2-Pipe Proportional	
	3 = 4-Pipe Proportional	
	[0]	
Cyclic Send Time in Cooling	0 = Off....30 min. [0]	Sets the valve status send time to the associated actuators (parameter required for certain types of valves, for example Theben proportional valves, etc.)
Cyclic Send Time in Heating	0 = Off....30 min. [0]	

#### Installation of 2-pipe fan coil solenoid valve

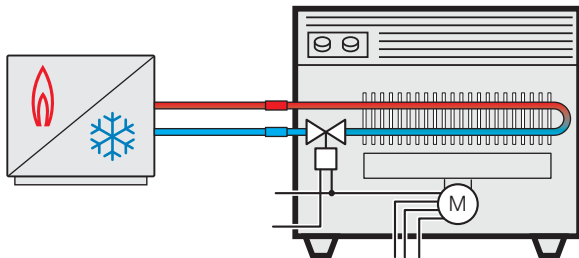

#### Installation of 4-pipe fan coil solenoid valve

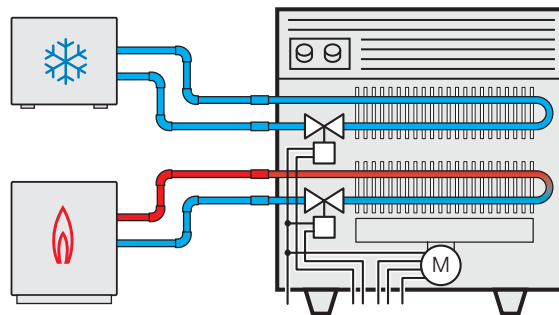


Tipologia Impianto	Circuito 2 Tubi On/Off
Tempo Invio Ciclico	Off
2-Pipe Circuit On/Off (A/B)	
Tipologia Impianto	Circuito 4 Tubi On/Off
Valvola di Raffreddamento	
Tempo Invio Ciclico in Raffreddamento	Off
Valvola di Riscaldamento	
Tempo Invio Ciclico in Riscaldamento	Off
4-Pipe Circuit On/Off (A/B)	
Tipologia Impianto	Circuito 2 Tubi Proporzionale
Tempo Invio Ciclico	Off
Proportional 2-Pipe Circuit (A/B)	
Tipologia Impianto	Circuito 4 Tubi Proporzionale
Valvola di Raffreddamento	
Tempo Invio Ciclico in Raffreddamento	Off
Valvola di Riscaldamento	
Tempo Invio Ciclico in Riscaldamento	Off
Proportional 4-Pipe Circuit (A/B)	

## Communication objects and ETS parameters

### 2<sup>nd</sup> Heating/Cooling Stage (A/B) "Boost"

The second stage is used to control a second heating or cooling source that allows the "boost" function. The "boost" function enables the second auxiliary source when the current temperature differs from the current setpoint by more than the set threshold.

In this way, the main heating/cooling stage is assisted by the auxiliary source to reach the desired setpoint value faster. This feature is particularly useful for improving comfort in dynamic lens systems such as underfloor systems.

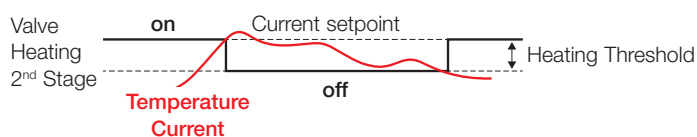

### 2<sup>nd</sup> Stage Parameters

ETS text	Values available [Default value]	Comment
2 <sup>nd</sup> Stage Cooling Valve	Disabled	Second cooling stage off
	Enable 2-point On-Off Control	Control with object that sends on/off for valve status
	Enable 2-point Control 0-100%	Control with object that sends 0% for valve off status and 100% for valve on status
	Cooling Threshold: - 0.5°C - 1.0°C - 1.5°C - 2.0°C - 2.5°C - 3.0°C - 3.5°C - 4.0°C - 4.5°C - 5.0°C	Value of the trigger threshold in cooling mode
2 <sup>nd</sup> Stage Heating Valve	Disabled	Second heating stage off.
	Enable 2-point On-Off Control	Control with object that sends on/off for valve status
	Enable 2-point Control 0-100%	Control with object that sends 0% for valve off status and 100% for valve on status
	Heating Threshold: - 0.5°C - 1.0°C - 1.5°C - 2.0°C - 2.5°C - 3.0°C - 3.5°C - 4.0°C - 4.5°C - 5.0°C	Value of the trigger threshold in heating mode

Valvola Raffreddamento 2° Stadio Disabilitato ▼

Valvola Riscaldamento 2° Stadio Disabilitato ▼

2<sup>nd</sup> Stage Disabled (A/B)

Valvola Raffreddamento 2° Stadio Abilita Controllo 2 punti On-Off ▼

Soglia Raffreddamento 5,0 °C ▼

Valvola Riscaldamento 2° Stadio Abilita Controllo 2 punti On-Off ▼

Soglia Riscaldamento 5,0 °C ▼

2<sup>nd</sup> Stage - Enable 2-point On-Off Control (A/B)

Valvola Raffreddamento 2° Stadio Abilita Controllo 2 punti 0-100% ▼

Soglia Raffreddamento 5,0 °C ▼

Valvola Riscaldamento 2° Stadio Abilita Controllo 2 punti 0-100% ▼

Soglia Riscaldamento 5,0 °C ▼

2<sup>nd</sup> Stage - Enable 2-Point Control 0-100% (A/B)



## Communication objects and ETS parameters

### Fan (A/B)

#### Fan parameters

ETS text	Values available [Default value]	Comment
Type	0 = Off	No thermostat controlled fan coil. Disables the graphics for the fan on the thermostat too. Useful when controlling only the solenoid valve for a radiator system
	1 = Three Speed Fan coil	Fan coil with 3 speeds
	2 = Proportional (0 - 100%)	Proportional-speed fan coil
	[1]	
Maximum Fan Speed	0	Sets maximum fan coil speed. Set "0" to control only the solenoid valve for a radiator system
	1	
	2	
	3	
	[3]	
Threshold for Fan Speed. 2	0.2 °C	Sets the difference between the current temperature and the setpoint that triggers start of speed V-2
	0.3 °C	
	0.5 °C	
	1.0 °C	
	1.5 °C	
	2.0 °C	
	2.5 °C	
	3.0 °C	
	3.5 °C	
	4.0 °C	
	[1.0]	
Threshold for Fan Speed. 3	0.2 °C	Sets the difference between the current temperature and the setpoint that triggers start of speed V-3
	0.3 °C	
	0.5 °C	
	1.0 °C	
	1.5 °C	
	2.0 °C	
	2.5 °C	
	3.0 °C	
	3.5 °C	
	4.0 °C	
	[2.0]	
Fan Speed Hysteresis	0.1 °C	Hysteresis for the above-mentioned speed values
	0.2 °C	
	0.3 °C	
	0.4 °C	
	0.5 °C	
	0.6 °C	
	0.7 °C	
	0.8 °C	
	0.9 °C	
	1.0 °C	
	[1=0.1]	
Switching Time between Speeds (min)	0...255	Time, in minutes, it takes to switch from one speed to another.
	[2]	

Continued

**IMPORTANT:** If you set "Switching Time between Speeds (min)" to 0 and leave a low value of "Fan Speed Hysteresis" (<0.5°C) there may be, near the speed change threshold temperatures, continual and repeated switching of the fan coil speeds that could damage it.

Continued

ETS text	Values available [Default value]	Comment
Time in Fan Man. Mode (min.)	0...255	Duration of "Manual Forcing" for the fan speed if the guest has forced the speed; after this time the thermostat returns to automatic mode. If the parameter is set to "0" it is interpreted as "Time = infinite" and the fan speed, set manually, stays on. To restore automatic operation the guest must return the fan speed to AUTO by manually operating on the thermostat display.
	[0]	
Objects	0 = 1-bit object	Select type of object (1 bit for On/Off, 8 bits for proportional 1-100%)
	1 = 8-bit object (1-100%)	
	[0]	
Cyclic Send Time	0 = Off	Set cyclical sending over the bus for the fans
	11 = 30 min.	
	[0 = Off]	
Threshold for Speed at 100%	0 = 2 °C	Absolute difference between setpoint and current temperature above which the speed goes to 100%
	1 = 3 °C	
	2 = 4 °C	
	4 = 5 °C	
	[4]	
Minimum Fan Speed	0 = 10%	Minimum operating speed on fan activation
	1 = 20%	
	2 = 30%	
	3 = 40%	
	4 = 50%	
	[0]	
Fans independent of the valve	Yes	Possibility of controlling the fans even with the valve off
	No	
	[No]	
Automatic speed disabling	Yes	Possibility of disabling the fan button on the display and objects 43 and 90 (Automatic)
	No	
	[No]	

## Communication objects and ETS parameters

Tipo: Tre Velocità Ventilconvettore

Massima Velocità Ventilatore: 3

Soglia per la Velocità del Ventilator. 2: 1,0 °C

Soglia per la Velocità del Ventilator. 3: 2,0 °C

Isteresi Velocità del Ventilatore: 0,1 °C

Tempo Commutazione tra le Velocità (min): 2

Tempo in Modo Man. del Ventilatore (min): 0

Oggetti:  1-Bit - On/Off  
 8-Bit - Proporzionale (1-100%)

Tempo Invio Ciclico: Off

Velocità indipendenti dalla valvola:  si  no

Disabilitazione velocità automatiche:  si  no

Three Speed Fan coil (A/B)

Tipo: Tre Velocità Ventilconvettore

Massima Velocità Ventilatore: 3

Soglia per la Velocità del Ventilator. 2: 1,0 °C

Soglia per la Velocità del Ventilator. 3: 2,0 °C

Isteresi Velocità del Ventilatore: 0,1 °C

Tempo Commutazione tra le Velocità (min): 2

Tempo in Modo Man. del Ventilatore (min): 0

Oggetti:  1-Bit - On/Off  
 8-Bit - Proporzionale (1-100%)

Tempo Invio Ciclico: Off

Velocità indipendenti dalla valvola:  si  no

Disabilitazione velocità automatiche:  si  no

Three Speed Proportional (A/B)

Tipo: Proporzionale (0 - 100%)

Soglia per Velocità al 100%: 5 °C

Minima Velocità Ventilatore: 10%

Tempo in Modo Man. del Ventilatore (min): 0

Tempo Invio Ciclico: Off

Velocità indipendenti dalla valvola:  si  no

Disabilitazione velocità automatiche:  si  no

Proportional (A/B)

### Manual operation of the fans

The user selects the speed used by the thermostat only when the valve is on; if the valve is off at the time of selection, the thermostat saves the setting and uses it again the next time the valve is on. On the display, the fan speed changes from "AUTO" to "OFF".

The selection made by the user remains active until the end of the time (in minutes) set by the "Time in Manual Fan Mode (min)" parameter or the fan speed is set manually onto "AUTO" with the button or remotely via the communication object.


43	Automatico	A: Ingressi Ventilatore
90	Automatico	B: Ingressi Ventilatore

Caution: If the "Time in Manual Fan Mode (min)" parameter is equal to 0 it means that the manual operation of the fan is never turned off by time.

### Automatic three-speed fan coil operation

In the case of a three-speed fan coil in "AUTO" mode, the fan coil speed is controlled automatically by the thermostat. The speed automatically goes from the higher to the lower speed gradually as the measured temperature approaches the value set as the setpoint. The threshold to determine the speed to set is linked to the following parameters: "Threshold for the Speed of Fan 2" and "Threshold for the Speed of Fan 3" while speed 1 is active when the valve is turned on and the "Switching time between speeds (min)" has passed.



An example of operation is shown in the following figure where SV2 and SV3 are respectively "Threshold for the Speed of Fan 2" and "Threshold for the Speed of Fan 3";  $\Delta TR$  is instead the "Differential Coefficient" of the on/off setting.

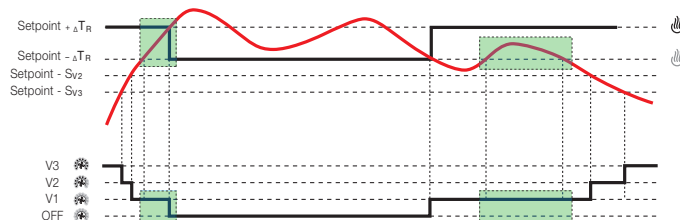

Note: In the example shown in the figure, the effect of the "Fan Speed Hysteresis" parameter was overlooked and the "Switching time between speeds" parameter was set = 0.


When the measured temperature reaches the setpoint the thermostat switches off the fan, sends a 1 bit on the Bus for object no. 45 or no. 92 "Off - Fan Outputs" (V0), switches on V0 and switches off V1. When the temperature deviates from the desired value, the valve is turned on and the speed V1, after the value of "Switching time between speeds", is activated. In the following example figures, this parameter is set to 0.

N.B.: For reasons tied to the safety of systems, if the valve is active the user will be unable to set "OFF" from the thermostat. It will therefore be necessary to turn off the valve by setting the thermostat to another mode or by modifying its setpoint.

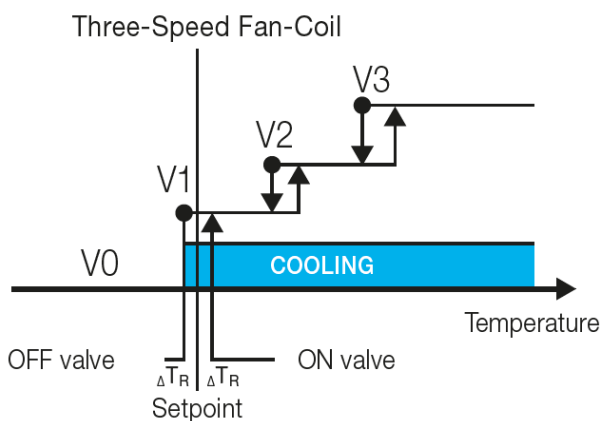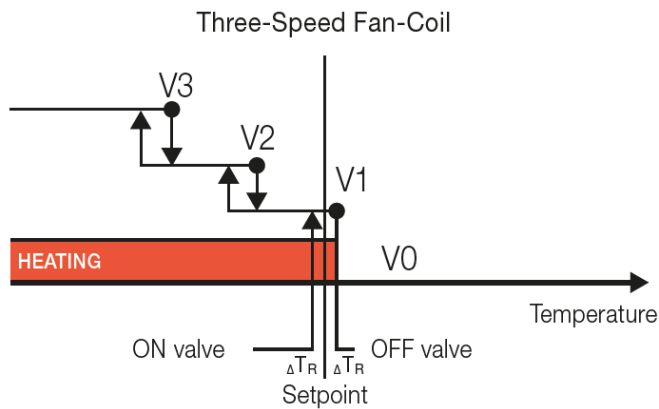



### Switching Time Between Speeds

This is the time you need to wait for the activation of the speed after switching on the valve (allows the fan coil battery to reach the correct temperature before circulating the air). This parameter is also used between one speed change and another to avoid continual speed switching near the thresholds.

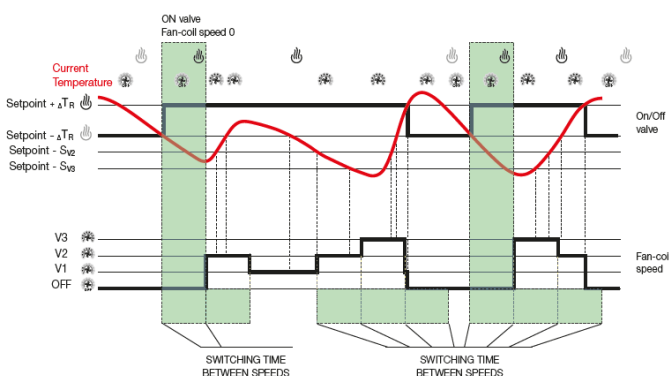

### Proportional fan coil operation

Proportional fan operation is similar to that of the three-speed fan coil. When the valve is OFF the proportional speed is equal to 0%; when the valve is ON the value of the proportional speed depends on the difference between the setpoint and the temperature measured in the room. The greater the difference, the higher the set proportional value of the speed. When this difference exceeds the value of the "Threshold for Speed at 100%" the proportional output of the fan is set to the highest possible speed that is 100%; when the difference is minimal the proportional speed is set to "Minimum Fan Speed". The operation of the proportional fan, as for the three speeds, can be set automatically or, in manual mode, to the value invoked by the thermostat button or set by the object "Proportional (0-100%) - Fan Inputs"

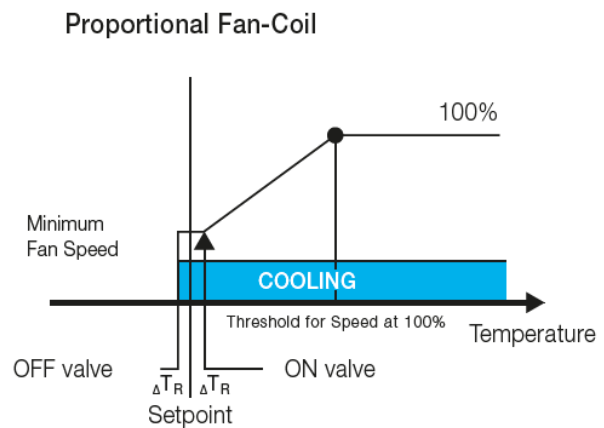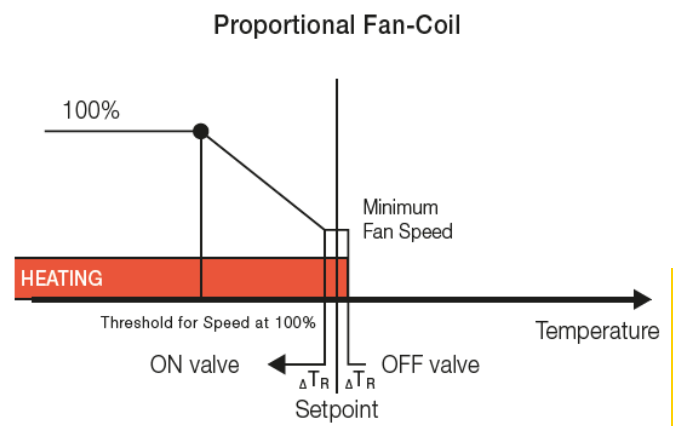

N.B.: For reasons tied to the safety of systems, if the valve is active the user will be unable to set "OFF" from the thermostat. It will therefore be necessary to turn off the valve by setting the thermostat to another mode or by modifying its setpoint.

## Communication objects and ETS parameters

### Scenario (A/B)

16 scenarios are available. 16 different scenarios can therefore be saved on the device output. With **Enable Scenario Learning** you can also set the status of the output for the desired scenario with a message from the bus (scene learn).

### Scenario parameters

ETS text	Values available [Default value]	Comment
Scenario Learning	0 = disable 1 = enable [0]	To enable scenario thermostat learning
Scenario	0=disabled 1=Comfort 2=Standby 3=Energy saving 4=Protected [0]	To define the operating mode when the scenario is called up.
...Scenario 16	0=disabled 1=Comfort 2=Standby 3=Energy saving 4=Protected [0]	To define the operating mode when the scenario is called up.

Apprendimento Scenario

Disabilita  Abilita

Scenario 1	Disattivo
Scenario 2	Disattivo
Scenario 3	Disattivo
Scenario 4	Disattivo
Scenario 5	Disattivo
Scenario 6	Disattivo
Scenario 7	Disattivo
Scenario 8	Disattivo
Scenario 9	Disattivo
Scenario 10	Disattivo
Scenario 11	Disattivo
Scenario 12	Disattivo
Scenario 13	Disattivo
Scenario 14	Disattivo
Scenario 15	Disattivo
Scenario 16	Disattivo

Scenario parameters (A/B)

## Communication objects and ETS parameters

### Temperature Protection (A/B)

This function is used to limit the temperature of the area controlled by the thermostat

### Temperature Protection Parameters

With the "Temperature Channel" parameter you select the temperature to be monitored; when, in heating, it exceeds the value selected with the "Temperature Limit" parameter, the thermostat changes its operating mode and switches OFF sending an alarm signal with the object *Floor Temperature Alarm*.

The thermostat comes out of the alarm condition when the temperature drops below the set threshold and the user changes the thermostat operating mode.

The typical application for this function is that of limiting the maximum temperature of the floor.

Canale Temperatura	Disabilitato
Temperatura Limite	35

Temperature Protection (A/B)

ETS text	Values available [Default value]	Comment
Temperature Channel	0 = Disabled	Limitation disabled
	1 = Internal Sensor	The internal sensor is used for temperature limitation
	2 = External Sensor	The external sensor is used for temperature limitation
	3 = External Temperature 1	The External Temperature 1 is used for temperature limitation
	4 = External Temperature 2	The External Temperature 2 is used for temperature limitation
	5 = External Temperature 3	The External Temperature 3 is used for temperature limitation
	6 = External Temperature 4	The External Temperature 4 is used for temperature limitation
	= External Temperature 5	The External Temperature 5 is used for temperature limitation
	8 = External Temperature 6	The External Temperature 6 is used for temperature limitation
	9 = External Temperature 7	The External Temperature 7 is used for temperature limitation
10 = External Temperature 8	The External Temperature 8 is used for temperature limitation	
	[0]	
Temperature Limit	10...70 °C	Limit of the temperature channel beyond which the limitation trips
	[35]	

## Communication objects and ETS parameters

### Relay

The output can be configured as a normal switch or for the fan, with speed V1.

### Relay parameters

ETS text	Values available [Default value]	Comment
Relay	0 = General Use	For general use or control of solenoid valve from radiator system associated with thermostat A and B
	1 = Channel A: Fan coil Speed V1	
	2 = Channel B: Fan coil Speed V1	
	[0]	
Mode	0 = Normal	Normal = step-step
	1 = Timed	Timed = one-position stable
	[0]	
On Delay	0...60min [10 sec]	Mode = Normal
Off Delay	0...60min [10 sec]	
Duration	0...60min [10 sec]	Mode = Timed
Relay	0 = Normally open	Status of thermostat output at rest
	1 = Normally closed	
	[1]	

**N.B.** The relay can be paired with the speed of the fan coil only in the case of 3-speed fan coils or proportional 3-speed fan coils but NOT in the case of proportional fan coils.

Relè Usu Generico ▼

Modo  Normale  Temporizzato

Ritardo Accensione Off ▼

Ritardo Spegnimento Off ▼

Relè Normalmente Aperto ▼

Relè Canale A: Velocità Fancoil V1 ▼

Relè Normalmente Aperto ▼

Relay parameters

## FAQ

### 1. Which thermostat objects must be used in the ETS project? For each one, should a dedicated ETS group be created or should "common groups" be created?

For the objects listed below, you must create a separate group for each datapoint of each thermostat: 10, 11 (if there is Thermostat B), 12, 13, 14, 15, 16, 17, 18, 19, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 34, (35 if the system has 4 PIPES and a COOLING valve), (38 if there is a proportional fan coil), 39, 40, 41, 42, 43, (44 if there is a PROPORTIONAL fan), 45, 46, 47, 48, (52 if there is a window contact that has to switch off the climate control) 56 and 57 (110, 111 if using the contact on the thermostat; if used for MANAGING THE WINDOW CONTACT IT HAS TO BE PAIRED WITH THE SAME GROUP AS DATAPOINT no. 52 for Thermostat A or DPT 99 for Thermostat B and 112,113 if using the relay on the thermostat).

When also using Thermostat B: 59, 60, 61, 62, 63, 64, 65, 66, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 81, (82 if the system has 4 PIPES and a COOLING valve and 85 if there is a proportional fan coil), 86, 87, 88, 89, 90 (91 if there is a PROPORTIONAL fan), 92, 93, 94, 95, (99 if there is a window contact that has to switch off the climate control), 104 and 105.

#### Note.

You could also create a general group with the Summer/Winter control of all the thermostats (DATAPOINT 19 for Thermostats A and 66 for Thermostats B), but if it is a system in which there is the Well-contact Suite supervision software we recommend that you create a group for each single Thermostat A and for each single Thermostat B.

### 2. What does the "Thermostat Mode" object represent?

It refers exclusively to the **mode the thermostat is currently in** (or the mode you want to put it into given that the corresponding object is also present in write mode).

**It does not indicate whether it is summer or winter.** The possible options are:

- 01 = Comfort
- 02 = StandBy
- 03 = Economy
- 04 = Protect/Off

To see whether the thermostat is in Off mode you can go and read object 15 "Off A: Mode - control" or object 62 "Off B: Mode - control" which will answer 1 if the thermostat is Off or 0 if it is in another operating mode.

### 3. What difference is there between the "Protected" object and "Off" in "Antifreeze-Too Hot" operation?

The "Protected" object is used and acts as Off in the event that the "Temperature Setpoint" parameters and the items "Antifreeze" and "Too Hot" are set to "Control Off". So in this case when the object "Protected" is activated, the thermostat entirely disables temperature control and does not even send its current setpoint over the bus. In normal installations it is therefore recommended to set "Control On" on the parameters "Antifreeze" and "Too Hot" and to set the corresponding two temperatures. This avoids the risk of frozen pipes in the winter and excessive room overheating in the summer. The "Off" mode on the other hand also inhibits "Too Hot" and "Antifreeze" and should never be used in normal installations. The "Off Mode" object turns off the thermostat even if the temperature falls below zero (i.e. it does not activate Heating/Air conditioning). It is advisable to use the "Protected" object, which switches

the thermostat to Off or protected (Antifreeze) depending on how the relevant parameters are set (summer or winter).

### 4. What is the function of the "Thermostat Off" object and what applications can it have?

Thermostats have various objects created for operation with our Well-contact Suite hotel software. The "Thermostat Off" object blocks thermostat bus communication (both reception and transmission). This function is dedicated to Vimar supervision software.

### 5. What is the function of the "Off" mode and what applications does it have?

The "Off Mode" object turns off the thermostat even if the temperature falls below zero (i.e. it does not activate Heating/Air-conditioning). It is advisable to use the "Protected" object, which switches the thermostat to Off or protected (Antifreeze) depending on how the relevant parameters are set (summer or winter).

### 6. What is the function of the "Comfort" object?

Unlike the "Energy Saving", "Protected" and "Off" objects, which do not permit the sending of a "0" bit, if the "Comfort" object is set to "1", the thermostat switches to **comfort mode** at the design temperature or at the custom temperature previously set by the guest. If this object is set to "0" the thermostat switches to **standby mode** (at the design temperature or at the custom temperature previously set by the guest).

### 7. What is the function of the "Summer Protected" object?

It is the **protected mode** setpoint in air conditioning operation. It corresponds to protected mode in heating operation (with air conditioning operation it cools if the temperature exceeds the setpoint whereas with heating operation it heats if the temperature falls below the setpoint).

### 8. On thermostats 20542, 16922 and 14522 a single bit was used to activate/deactivate antifreeze. What is used now?

The "Protected" object (summer or winter) is used.

#### Note.

Antifreeze (or its analogue "Too Hot") must be active in the object parameters so as not to obtain an Off.

### 9. On thermostats 20542, 16922 and 14522, to deactivate "Antifreeze" mode it was sufficient to send a "0". What needs to be done with the new thermostats? Do you need to change mode, for instance "Economy"?

Yes, the installer decides whether the user can turn the system off or set it to "Antifreeze" mode. Depending on the set ETS parameters, the thermostat switches to "Antifreeze" mode and returns to the previous mode only when the window is opened and closed, whereas if the thermostat is set to "Protected" mode from the bus, it will subsequently be necessary to change the mode.

### 10. On thermostats 20542, 16922 and 14522, a single bit was used to read the antifreeze status; in supervision single bits ("0" or "1") and not bytes are required. Where is this object/status to be found?



## FAQ

The KNX system uses the 1-byte object "*Thermostat Mode*" to read the status of the thermostat. If you do not want to use the Byte, you can set the 1-bit mode change object to read. However, this is not the ideal solution because the bits will have to be read explicitly given that the information is not sent automatically.

### 11. Are there any particular precautions to take when using the 0-100% proportional valve control?

Never use the "*Control Value*" object. This is a debug object left inside the application for KNX certification purposes. In this specific case replace it with "*Cooling Valve*" to obtain the desired function.

However, some types of valves with proportional control require a cyclic refresh of the control value. **In this case it is necessary to activate cyclic sending of the control value to the valve.** To control the proportional solenoid valves you must use the "*Cooling/Heating Valve*" object (object no. 34 and 81) in read/write mode (which appears only for "2-Pipe Proportional" systems, selected by the parameter "*Valves*") or objects no. 34 "*Cooling Valve*" and no. 35 "*Heating Valve*" will appear if "*System Type*" is set with the "*Proportional 4-Pipe Circuit*" parameter.

### 12. When do the "snowflake" and "flame" icons appear on the display? Do these icons indicate respectively the summer and winter modes?

These icons do not indicate summer/winter mode. They appear whenever the thermostat is controlling the relay or corresponding valve (if the thermostat is in heating mode, the flame appears; if it is in air conditioning mode the snowflake appears) and then disappear when the desired temperature has been reached. If the room temperature has already reached the desired value, the icon is not displayed (operation is similar to that of conventional thermostats). The object to be associated with the summer/winter change of season is a different object from the one used for reading the season: nos. 19 and 18 and nos. 66 and 65.

### 13. We need to have a group that goes to "0" when the thermostat is set to "Off" (by the guest or the supervisor) and returns to "1" when the thermostat is returned to "CMF". How can we do this?

This is an application that allows the input of a Daikin with KNX interface to be forced so that it turns the machine off if the thermostat is Off and back on if it is "CMF" without necessarily starting the system (heating is subsequently activated depending on the messages sent by the thermostat to the valve). In practice the guest wants to use the thermostat for On/Off control of a device that has its own temperature control function.

To do this you have to use an object (such as a KNX logic) that sends an On/Off message according to the thermostat mode (using the "*Mode*" object).

### 14. How should a window's N.C. contact be managed when it is connected to the thermostat for window open signalling?

The input to which the window contact is connected must be set with the "*Status Send*" function so that one message is sent when it is opened and another one when it is closed. If an N.C. contact is used, it will be necessary to set "*Off*" for the falling edge (opening of window and contact) and "*On*"

for the rising edge (closing of the window and contact). If the contact is an N.O. type, the two parameters must be set respectively to "*On*" and "*Off*" (when the window is opened the contact is closed and vice versa). If you set the input as "*Window Sensor*", opening the window will stop the thermostat writing an "04" byte (antifreeze) to the datapoint "*Mode status*" and "00" to the datapoint "*Cooling/Heating Valve*" (closes the valve); closing the window will set the previous status; you can also choose a delay time for opening the window after which the thermostat will stop. If together with this internal thermostat management you also want a "0" bit to be sent to the bus when the window is opened and a "1" bit when it is closed, you must set the thermostat IN input as "*General Use*" so as also to display object no. 110 "*Input*". If the window contact is connected to the thermostat's input, this new object must be associated with a group with the "*Window Sensor*" object no. 52 or no. 99 whereas if you use the IN input of another KNX device this will be associated with the "*Window Sensor*" object.

### 15. Which functions are considered most important for use of the thermostats on hotel systems with the Well-contact Suite management/supervision (and other) software?

a. *Current Temperature*: this is useful for displaying the thermostat temperature in the software (it is advisable to set cyclic sending amongst the parameters; to be considered in the event of a large number of devices).

b. *Thermostat Mode* or alternatively *Comfort*, *Energy Saving*, *Protection*: these are important for sending thermostat operating mode controls via Well-contact Suite.

c. *Thermostat Mode - status*: this is important to see the current operating mode of the thermostats in the software.

d. *Summer/Winter status*: this is important to see the current seasonal operating mode of the thermostats in the software.

e. *Enable Summer/Winter*: this is essential for sending seasonal thermostat operating mode controls via Well-contact Suite software.

f. *Current Setpoint*: this is useful for displaying the set thermostat temperature in the software (it is advisable to set cyclic sending amongst the parameters; to be considered in the event of a large number of devices).

g. *Winter Comfort Setpoint*, *Winter Standby Setpoint*, *Winter Energy Saving Setpoint*, *Winter Protected Setpoint*, *Summer Comfort Setpoint*, *Summer Standby Setpoint*, *Summer Energy Saving Setpoint*, *Summer Protected Setpoint* (objects from 25 to 32 and from 72 to 79): they are useful for displaying and setting the various "*Basic Setpoints*" in the two seasonal operating modes in the software.

**Note.** To be able to view the values, you have to set the read flag for these properties manually in ETS.

h. Management case studies **Heating/air conditioning speed** for thermostats:

#### Proportional Three Speed Control:

1. *Proportional (0-100%) - Fan Inputs* (objects 38 and 85): useful for sending the proportional speed maximum value.

2. *Proportional (0-100%) - Fan Outputs* (objects 44 and 92): useful for displaying the proportional speed maximum value in the software.

#### On/Off management:



## FAQ

1. *Speed V1 - Fan Inputs, Speed V2 - Fan Inputs, Speed V3 - Fan Inputs, Automatic - Fan Inputs* (objects from 40 to 43 and from 87 to 90): useful for sending speed force controls to the thermostat or for forcing automatic control.
  2. *Off - Fan Outputs, Speed V1 - Fan Outputs, Speed V2 - Fan Outputs, Speed V3 - Fan Outputs* (objects from 45 to 48 and from 92 to 95): useful for displaying the current speed of the fan coil.
  3. *Speed V1 - Disable Fan, Speed V2 - Disable Fan, Speed V3 - Disable Fan* (objects 49, 50, 51 and 96,97,98): useful for sending speed disable controls.
- i. Window Sensor (objects 52, 99 and 110): viewing the status of the window combined with the thermostat on the supervision software (for example on the computer of a hotel reception desk) requires you to:
1. Set the input contact as "General use" and use it as an open window sensor;
  2. Assign the desired group address to the "Window sensor" object (objects 52 and 99) and to an input of a KNX device (if the thermostat input is used, assign to this group object no. 110);
  3. Assign to this address the "Contact" Address/Object type inside the Well-Contact Suite software.
- l. *Temperature: Automatic/Manual* (objects nos. 54 and 101): useful for displaying whether the setpoint has been set from software or manually using the thermostat buttons.
- m. *Fan coil: Automatic/Manual* (nos. 55 and 102): useful for displaying whether the current fan coil speed is managed automatically by the thermostat or has been forced.
- n. *Temperature: Disable Local Operation* (objects nos. 56 and 103): useful for displaying and sending controls from software regarding whether or not it is possible to set the current setpoint on the thermostat manually.
- o. *Fan coil: Disable Local Operation* (objects nos. 57 and 104): useful for displaying and sending controls from software regarding whether or not it is possible to set the speed manually from the thermostat.

### 16. To perform supervision of thermostats using Vimar Well-contact Suite software, what communication objects need to be set?

YOU have to set to "Read" the relevant flags of objects from 25 to 32 and from 72 to 79 for each 02952 thermostat.

### 17. What is the parameter "Time in Manual Fan Mode" used for?

It is a time indicated in the parameters for which the thermostat remains in "Manual forcing" if the guest has manually forced the temperatures or speed of the fan coil: when this time has elapsed the thermostat returns to automatic. If the parameter is set to "0" it is interpreted as "Time = infinite" and the manual forcing stays on.

### 18. An object is needed that goes to "1" if one of the 3 speeds is activated and returns to "0" if V 1/2/3 are deactivated.

Use the object "Cooling/Heating valve" 34 and 81.

### 19. Is it possible to take an object to "0" when a speed V-0 is set from the thermostat?

No, it is not possible to set the speed V-0 manually.

### 20. Is the object "Thermostat Mode - Mode" (object 16 and 63) usable only by Well-Contact Suite or also by other supervision software?

The object "Thermostat Mode - Mode" is a KNX standard object, with coding defined by the standard (HVAC Operating Mode 20.102), therefore it can also be used by other supervision software; there is also the related object for reading the mode (objects 17 and 64).

- 0 = Automatic
- 1 = Comfort
- 2 = StandBy
- 3 = Economy
- 4 = Protection
- 5-255 = Reserved values


### 21. Is it possible to manage a general valve if there is more than one thermostat?

This function is possible only with a logic module. It is also possible to use a Well-contact Suite functional logic, which will operate only if the supervision software is active and communicating with the bus.

### 22. Is it possible to control a proportional-type fan coil with one or two supply values?

The thermostat normally controls supply at three levels of intensity: 33%, 67%, 100%. As can be seen in the following image, setting the maximum speed to 1 or 2 results in one or two thresholds (respectively 33% or 33-67%). Other supply level settings are not possible.

For the touch thermostat 02952 you can still control the proportional fan coil with minimum speed settable from 10% to 50% and with maximum speed up to 100%.

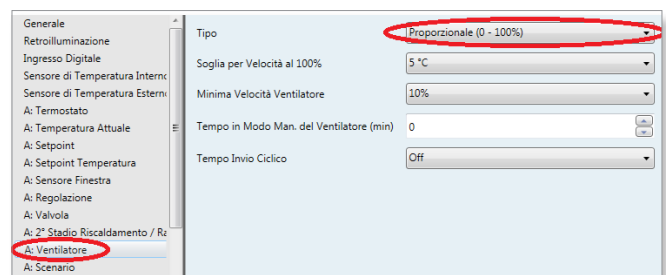

## FAQ

### 23. Is it possible to control an On/Off type radiant heating system and a fan coil air-conditioning system with 3 speeds?

You have to work prevalently with the thermostat object "Enable Summer/Winter" (object 19). Firstly, the type of system must be 4 pipes On/Off. Next, configure all the standard datapoints required by the thermostat to operate correctly. Add the following groups:

#### group 1

"Enable - Summer/Winter": to perform the season change on the thermostat and disable the 3 speeds:

- "Speed V1 - Disable fan" (object 49)
- "Speed V2 - Disable fan" (object 50)
- "Speed V3 - Disable fan" (object 51)
- "Status - Summer/Winter" (object 18)

#### group 2

To operate the radiating system with On/Off valve in winter:

- "Heating valve - valve" (object 35)
- "Relay" (the relay of the device controlling the underfloor system valve)

**Note:** you can add to the group the object "Fan coil: Disable Local Operation" (object 57) to disable the user interface of the fan coil during the winter season.

#### group 3

To operate the fan coil general On/Off valve in the summer:

- "Cooling valve - Valve" (object 34)
- "Relay" (the relay of the device controlling the fan coil valve).

#### group 4

To control the fan coil speed V1 in summer:

- "Relay" (the relay of the device controlling the speed-1 of the fan coil)
- "Speed V1 - Fan Outputs" (object 46).

#### group 5

To control the fan coil speed V2 in summer:

- "Relay" (the relay of the device controlling the speed-2 of the fan coil)
- "Speed V2 - Fan Outputs" (object 47).

#### group 6

To control the fan coil speed V3 in summer:

- "Relay" (the relay of the device controlling the speed-3 of the fan coil)
- "Speed V3 - Fan Outputs" (object 48).

In this configuration, when the thermostat is in Winter mode, *group 1* goes to "1" so the fan coil speeds are forcibly disabled to block their operation and the thermostat operates in On/Off only on the radiant heating valve as it is configured for 4-pipe On/Off systems with *group 2*; in Summer *group 1* goes to "0" and the 3 speeds can again be controlled from the bus; furthermore, the thermostat will operate with the general fan coil cooling valve of *group 3*. The *Groups 4, 5 and 6* are those of the 3 speeds and objects 46, 47, 48 for the thermostat and they can be controlled from the thermostat when the first group goes to "0" by setting the thermostat in summer mode.

### 24. What objects are used to read the thermostat temperatures from the Well-Contact Suite software?

For thermostats 02952, objects 10 and 11 (weighted averages of the temperatures that can be associated) are used to read respectively the current temperatures of thermostats A/B, and not objects 0 and 9 of the device (which are the precise measurement data for the individual internal/external probes).

### 25. Is it possible to eliminate the adjustment range in Comfort mode, which can be expanded at the most to $\pm 5^{\circ}\text{C}$ ?

It is possible by setting the parameter "Guest Control Permitted" onto "No Limitation".

### 26. If a 0-100% proportional fan coil rather than a three-speed fan coil is controlled, will values 0-100% be sent to the fan coil?

Yes, if the "Type" fan parameter is selected on "Proportional (0-100%)".

### 27. How is the "Dewpoint" object used?

This object is used in systems with underfloor cooling and is associated with a KNX humidistat capable of detecting a level of humidity at which condensation may form on the floor. By activating the ETS group for this object, the thermostat will automatically go to "Off" mode, stopping air conditioning.

It is possible to set a time limit after which the thermostat will automatically go to "Off" if a message has not arrived from the KNX humidistat. This operation does not occur in heating mode.

### 28. How does the "Comfort" object work?

If "1" is sent to this object, the thermostat goes to "CMF" mode (unless the window has been opened in the event of window-contact control); if "0" is sent the thermostat goes to "Standby" mode

### 29. IS it possible for a thermostat to control a 0-100% proportional valve and an On/Off valve simultaneously?

No, it is not possible as setting the thermostat for proportional control disables On/Off control on the valve object. With two-zone thermostats (02952, 20430 and similar), it is possible to operate "Thermostat-A" in one mode and "Thermostat-B" in the other, but the guest would have to set both each time to activate both the proportional valve and the On/Off valve.

### 30. Can the thermostat be controlled from supervisors such as the KNX touch screen?

Yes, the thermostats are KNX standard so a KNX certified supervisor is capable of managing them.

### 31. If the parameter "Enable menu" is enabled (it is disabled by default), what happens to the thermostat?

It enables the thermostat mode to be altered by acting on A and B. On thermostats 02952 the "Enable Menu" parameter is enabled by default.

### 32. How can operations performed by the guest on the thermostat (change of temperature and functions) be inhibited?

Using the objects "Temperature: Disable Local Operation" and "Fan coil: Disable Location Operation" (objects 56, 57 and 103, 104) you can block changes to fan coil temperature and speed. It is not possible to block the operating

mode because the guest cannot decide this directly. For example, the guest can force the thermostat to Off only by opening the window or can set it to standby only by leaving the room (removing the card from the pocket reader).

**33. If a 1-bit thermostat comfort/stby object is associated with the "Guest in room" pocket object, when the Well-contact Suite software is started up, the thermostats that were in "Economy" or "Protected/Off" mode return automatically to STBY with higher setpoints.**

The "U" flag must be disabled in ETS for the thermostat object. If the "Guest in room" pocket object is associated with the 1bit "Stby/Comfort" thermostat object, when a guest enters the room goes to "Comfort" mode. If within the same group the "R" read flag is enabled on the pocket object to allow the presence of a guest in the room to be interrogated by the WCS software, when it starts, the software performs interrogation polling on this group and the pocket responds with a "0" bit for the "Guest in room" object. If the flag "U" is active in that thermostat object, it takes the pocket response as an update for its operating mode and goes to Stby when perhaps it had been set to "Economy" mode or "Protected/Off" mode for an extended period of non-use of the room.

**34. How can I update the thermostat setpoints and measured temperatures on a supervisor (e.g. Well-contact Suite)?**

 

To have the new setpoint status once a new setpoint has been set on the supervisor (regardless of the mode currently being used) you must go to the "SETPOINT" and "SENSOR PARAMETERS" parameters of the thermostat and set the values of "Send on Change" and "Cyclic Send Time" as preferred: if the system is very large you should perhaps set the send on difference to 0.3-0.5°C and not set the periodic send every x minutes so as not to overload the Bus with messages.

**35. Is it possible to operate a thermostat in such a way that in the summer it controls a 0-100% proportional valve and in the winter a simple head in On/Off mode?**

Yes, this can be done by means of special programming of the thermostat and relay device that we will now look at in greater detail, provided the On/Off head is not controlled by the relay on the thermostat (which does not have the logic function described below) but by a relay of other devices such as an 01523 or a 14457, etc.. YOU have to set the thermostat VALVE parameter to "4 pipe proportional with proportional/integral control" mode. This way you have 2 separate "1 byte proportional valve" objects for each season and will use only the one for the summer - object no. 34 - (whereas for the winter you will not use the corresponding 1 byte object). For winter mode, set the thermostat FAN parameters as "Maximum speed 1", in other words use the corresponding object no. 46 of "Speed-1" given that when the winter valve is activated by a thermostat heating request, this object will certainly also be activated. Given that the thermostat's season change object (object no. 18) goes to "1" in winter status and "0" if you set the summer season, you can then work with a relay, for example a 01523 on which you can activate the parameter "1 OBJECT LOGIC function" (setting it in "AND" mode). You can then create a first group with the "On/Off control" of the relay together with object no. 38/46 "Speed 1" of the thermostat (this serves to control the heating head) and then another group with "object no. 18 summer/winter status" of the associated thermostat together with the object "Logic 1" of relay 01523. In functional terms,

in winter the "logic 1 of 01523" group is activated, so when the other group (i.e. that of object no. 38/46 of the thermostat + relay On/Off control) also goes to 1, the relay 01523 will switch towards the head. In summer the first of the two groups will be constantly at "0", so the On/Off messages reaching the 2<sup>nd</sup> group from thermostat object no. 38/46 will not cause the relay to move.

**36. Is it possible to operate a temperature control system with a 0-100% proportional speed fan coil in both summer and winter and an on/off head for the underfloor system only in winter?**

YES, it is possible. The guest will see the room temperature on the display and will use the buttons to operate the fan coil system, to activate the temperature in Comfort mode, or to stop the system with Economy/STBY/Off-Antifreeze mode. To operate the underfloor system in winter (with a constant temperature throughout the day), the guest must control "thermostat-B" via the respective menu that is selected by pressing the button ; the display will show the icon . From the thermostat parameters in ETS, the "Thermostat-B split" mode is activated and, like "Thermostat-A", it is set to consider the device probe with a 100% weighting. For "Thermostat-A" of the proportional fan coil you need to set the "4 pipes On/Off" parameters for the valve, the type of adjustment in "On/Off Control" while the type of fan can be chosen from the proportional fan coil with continuous control (0% - 100%) or the 3-speed proportional fan coil (0% - 33% - 67% - 100%). In ETS there will be the objects nos. 34, 35 for the two hot and cold valves On/Off and object no. 44 for proportional control of the fan coil speed. For "Thermostat-B" for the floor you need to set the parameters as "4 pipes with On/Off control" and the ETS objects nos. 81, 82 for control of the hot-valve and cold-valve: object no. 78/82 will be paired with the floor relay leaving object no. 77/81 unused so in the summer it will not operate. The season change is performed via bus by means of communication object no. 66 for thermostat 02952 of "thermostat-B".

**Note.** In winter, when leaving home for an extended period, the customer may activate an "Exit" scenario that uses ETS parameters to set both "Thermostat-A" and "Thermostat-B" in ECONOMY. On returning, he can use another scenario to return them to COMFORT mode (the thermostat will retain in its memory the last CMF setpoint that the customer had selected for both). Obviously the system will require two buttons or a supervisor to allow the customer to call up the two scenarios.

**37. Is it possible to control a fan coil by using any free relays of the various devices without using the 4 I/O device (art. 01522) or the relay actuator (art. 01523)?**

Yes, it is possible; however, to prevent the user via supervision from mistakenly activating a speed relay while a similar relay is also activated by the thermostat, it is necessary in the ETS project to avoid pairing the force-speed objects nos. 39, 40, 41 and 42.


**38. What is the difference between firmware version 1.00 and 2.00?**

Firmware version 2.00 has been updated with datapoint 114 Humidity Value at 2 bytes type 9.007 that is activated by setting the parameter for Percentage displayed = Humidity. Furthermore, by setting the parameter Enable Menu = Disable this excludes only the change of operating mode of the Thermostat A. In the case of the firmware version 1.00,

## FAQ

instead, in addition to the operating mode, the possibility of viewing Thermostat B is excluded.

**CAUTION: The FW version of the thermostat cannot be updated.**

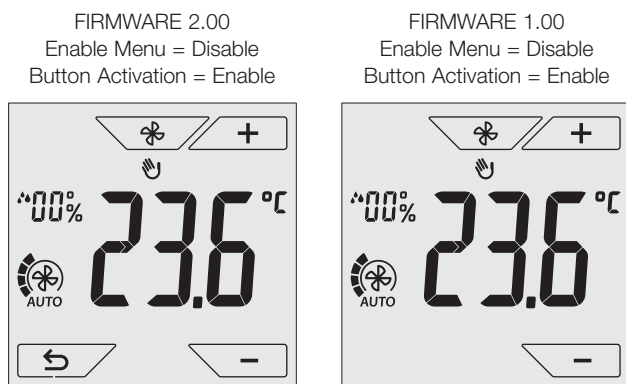

### 39. How do you know the firmware version of a thermostat?

The firmware version of the thermostat can be identified via the tracking label both on the VIMAR packing box and on the body of the thermostat. The tracking label is similar to the one in the following example:

000624201204

Label on the packing and on the device

To identify the firmware version, please refer to the table below.

Last 3 digits on the tracking label	Corresponding firmware version
206	2.09
205	2.08
204	2.07
203	2.06
202	2.05

### 40. In a hotel, the thermostats set to OFF/Economy mode suddenly all go into STBY mode; why is that?

The mode change has been generated by the Well-contact Suite software reopening which on starting up queries all the room pockets to update its supervision on the presence or absence of guests in the rooms; the pockets respond with a bit=0 on the presence, but this is the same group that is also linked to the 1 bit object of the CMF/STBY control of the thermostats and bit=0 on that group entails an interpretation of the thermostat of the type "guest not in room, go onto STBY ". The problem can be solved by disabling the Update flag "U" on the 1 bit object of "comfort/stby" of the thermostat that is active by default; in this way, when the Well-contact Suite software queries the pockets, they respond with a bit=0 on the group but since that flag is OFF, the thermostat will keep its mode without going onto STBY.

### 41. If the thermostat is operating in Neutral Zone mode and the guest changes the current setpoint by adjusting the thermostat, what happens? Are the setpoints previously set by ETS or by Well-contact Suite also changed?

No, nothing in particular happens. Acting on the thermostat changes only the Current Setpoint and not the single mode/season setpoints, the thermostat functions according to the set setpoint and the room temperature so it will activate the heating, cooling or remain in the neutral zone depending on the heating and air-conditioning setpoints of the current mode.

### 42. You cannot change the thermostat mode from the Well-Contact Suite software (neither from supervision nor from the Master-thermostat); What can be done?

To send mode messages to the thermostats, the Well-contact Suite software uses the communication objects No. 16 for thermostat-A and No. 59 for thermostat-B.

### 43. Is it possible to control a fan coil via a relay belonging to different devices and not to a 4-output module?

Yes, it is possible. The thermostat automatically performs an interlocking function between the relays of the various speeds so it deactivates the relay in use before activating that of the new speed to switch on; to prevent the guest from accidentally activating the 2 relays at the same time causing failure of the Fan coil, in the ETS project it is necessary not to pair the speed forcing objects (objects nos. 38, 39, 40 for thermostat-A and nos. 81, 82, 83 for thermostat-B) to avoid the guest forcing one speed when another one is already in use (it is not possible to interlock relays of different devices).

### 44. Can the various Setpoint communication objects be added to the same ETS group?

No, each thermostat communication object must be added to its own dedicated group.

### 45. Is it possible not to show the icon for swapping between Thermostat A and Thermostat B on the display?

Yes. So as not to display the icon on the bottom left you need to Disable the "Enable User Interface" item of the "Thermostat B" parameter.

### 46. Using the Setpoint Shift object and resetting this setting when you switch the thermostat to ECONOMY or OFF/PROTECTED mode.

If with a supervisor device (touch screen, web server, etc.) you change the current setpoint of a thermostat, in which the Reset Setpoint Shift in Economy Mode parameter is set = yes, via the SETPOINT SHIFT object and, at a later time, you bring it into ECONOMY mode, when the thermostat is put back in STBY or CMF mode the value previously set by the supervisor will not be maintained (conversely, if you write the value directly on the SUMM/WINT COMFORT SETPOINT object or on SUMM/WINT STBY SETPOINT there will not be a reset when the mode changes).



## FAQ

### 47. Is it possible to have a Boost function to supplement the heating? And will this make it possible to determine the 3 speeds of the fan coil?

The section of the parameters referred to as "2<sup>nd</sup> HEATING/COOLING STAGE" illustrates how the thermostat is able to activate an additional system, which will only be on/off, or a control of a proportional valve 0-100% by means of the objects Nos. 36 and 37 which will appear by activating this Boost function. The thermostat is not able to manage the Boost function by determining the speeds with 3 relays so either it will be on/off or proportional 0-100% (whose possible value is either 0% for power-off or 100% for fully open).

### 48. Is it possible to operate an on/off head in winter and a 3-speed fan coil in summer?

Yes, it is possible to control the underfloor heating and fan coil air-conditioning simply by setting the system type to 4 pipes; the communication object no. 35 will then be displayed for the on/off control of the heating valve and object no. 34 for the on/off control of the cooling valve (in winter the fan coil valve-relay is not activated, as it is controlled by object no. 34 of the thermostat, so the fan coil will not switch on).

### 49. Is it possible to have the thermostat 02952 send a 1 bit ON message when the thermostat turns off all the speeds?

Yes, and this function is required by some temperature control gateways to manage the Off of the fan coils when the thermostat has switched off the speeds: the communication object is No. 45 (No. 92 for Thermostat B) called "OFF - Fan outputs" and the thermostat automatically sends a bit=1 when the fans are turned off and bit=0 when they are turned back on.

### 50. If the speeds of the fan coils are forced to OFF, will the thermostat reset to AUTO when it changes mode or simply when Well-contact Suite queries the room pocket to know whether the guest is present in the room?

When Well-contact Suite queries a pocket it responds with a bit equal to 0/1 on the same control group as the CMF/STBY mode of the thermostat causing the mode control to be sent again. The thermostat is designed to reset forcing when it receives a mode control so it eliminates the forcing-OFF of the fans; to work around this problem, in the ETS project you can remove the "U" flag of the object of CMF/STBY and reprogram the thermostat so that the response sent from the pocket to the Well-contact Suite software is ignored.

### 51. Is it possible for the icon not to appear on the bottom left that allows viewing and controlling thermostat B?

Yes. For the icon not to be displayed it is sufficient to set the "Enable user interface" parameter of thermostat B to DISABLE.

### 52. How does the "Neutral Zone" mode function for a 4-pipe system?

If the "Enable Summer/Winter" object of thermostat A and/or thermostat B is not paired with any ETS group, the thermostat in question will function in Neutral Zone mode; in this mode it will be the thermostat that activates the Air-Conditioning or Heating circuit depending on the room temperature, the Summer and Winter setpoints for the currently selected mode (CMF/STBY/etc.) with a room temperature range, called Neutral Zone, within which neither circuit will be activated. If the end user increases or decreases the setpoint by using the thermostat it will not change the two summer/winter setpoints but will change a setpoint that is halfway between those two values which is the central reference of the neutral zone; raising or lowering this value will also automatically increase or decrease the two setpoints related to summer/winter for the active mode (CMF/STBY) so as to keep the neutral zone unchanged. The thermostat activates the heating or air-conditioning according to the two summer/winter setpoints so, if the room temperature is not in the neutral zone, the thermostat will take as reference the setpoint that is closest to the current temperature (summer/winter) resulting in the activation of the heating or air-conditioning circuit.

### 53. What is the difference between firmware version 2.00 and 2.01?

Firmware version 2.01 features improved neutral zone functionality and checks have been added to prevent incorrect configurations of the thermostat. The "Don't display temperature" view has been replaced by the "Current Setpoint" view. The "Reduced menu" feature has been added which limits the local mode change to only between comfort and protected. Lastly, the "Reset Setpoint Shift in Economy Mode" parameter has been added to enable or disable resetting the setpoint shift when the thermostat goes into energy saving mode.



02952IEN 01 2010



**VIMAR**

Viale Vicenza 14  
36063 Marostica VI - Italy  
[www.vimar.com](http://www.vimar.com)