

Installer manual



21815.P

HOTEL KNX Secure 2M RFID landing panel

GENERAL CHARACTERISTICS AND FUNCTIONS from page 4

COMMUNICATION OBJECTS AND ETS PARAMETERS from page 6

The device

IP55 RFID smart card landing reader, KNX SECURE standard, number/logo indication and room status signalling: do not disturb, room service and make up room, RGB LED backlighting with brightness control, 12-24 VDC, 24 VAC power supply, access management via View Suite software, entrance opening via card or smartphone via View Key APP standard Bluetooth technology, installation in vertical 2-module or 3-module box, black.

The device enables access control and viewing of the status in the rooms where it is installed externally. The landing panel is provided with an input for connecting an ON/OFF type contact which can be used, for instance, to control the door open or closed switch, to control a magnetic contact for signalling an open or closed window, for a ceiling pull alarm, etc. The front of the panel may feature luminous signalling to display the “Service request”/“Presence in room”, “Make up room” and “Do not disturb” status. Luminous indicators may also be present to display the bell, the “card” symbol, the hotel logo and the room number. The colour and the day/night brightness can be set for all luminous indicators on the device.

The device is KNX Data Secure and is equipped with a dedicated QR code to be used with ETS (version 5.5 and later) during configuration.

The device is only compatible with the VIEW Suite software for card management and requires the use of an IP router (art. 01548) and KNX Secure line couplers.

General characteristics

The configuration of the reader, physical address and parameters (NO or NC contact inputs, colours, brightness, etc.) takes place through the ETS software (minimum version for configuration ETS 5).

The card is read by putting it in front of the reader that in sequence checks:

- “system code” (whether consistent)
- “date” field (if enabled, it checks whether the validity has expired);
- “password” (checks all the codes associated with it and enabled, such as guest code, service code, time slots).

Functions

Luminous indicators

- Hotel logo: always on with the colour and day/night brightness selected during configuration.
- Room number: always on with the colour and day/night brightness selected during configuration.
- RFID reader symbol : always on with the colour and day/night brightness selected during configuration
- Central icon: on with the brightness selected for day and night with signalling active or not active. It can be set to display Presence in room  or Laundry service  or Room service . If used for Presence in room, 2 different LED colours can be chosen for when the guest is in the room and when the room is vacant.
- Do not disturb : on with the brightness selected for day and night with signalling active or not active.
- Make up room : on with the brightness selected for day and night with signalling active or not active.
- Bell push button : on with the brightness selected for day and night with the button pressed or not pressed. 2 different LED colours can be chosen for when the guest is in the room and when the room is vacant.

Input functions

- Sending ON, OFF and Toggle controls on the rising and falling edge
- Call up and save scenario
- Dimmer control
- Roller shutter control

Cover plate customisation

The cover plate includes icons  e  and other customisable symbols to be chosen at the time of purchase, namely:

- The Hotel logo
- The room number
- The bell symbol 

The central icon symbol can be chosen from the following:

- Presence in room 
- Laundry service 
- Room service 

The card is read by putting it in front of the reader that in sequence checks:

- “system code” (whether consistent)
- “date” field (if enabled, it checks whether the validity has expired);
- “password” (checks all the codes associated with it and enabled, such as guest code, service code, time slots).

Signals on the number (logo) as the card approaches

- Steady green for 3 s: card recognised
- Flashing green: invalid time frame
- Steady red for 3 s: access denied
- Flashing red: invalid expiry date
- Flashing amber/red: invalid system coding
- Flashing amber: invalid day of the week

Signals on the “card” symbol

- Flashing red/green: date and time synchronisation required
- Features the same signals as the number (logo) if the number is not present

Signals for firmware update

Long press the central icon for 5 s, the number/logo flashes blue to signal that the firmware can be updated using the View Wireless App.

During the update, the number/logo is steady blue and switches off when the update is complete.

Behaviour of output after bus power on/off

Bus off: depending on the parameter settings.

Bus on: depending on the parameter settings.

Behaviour after downloading the database.

The output is turned off.

Behaviour of output after power supply power on/off



Off: the output is turned off.

On: as for bus on.

HOTEL KNX RFID Landing panel

The device

FRONT AND BACK VIEW

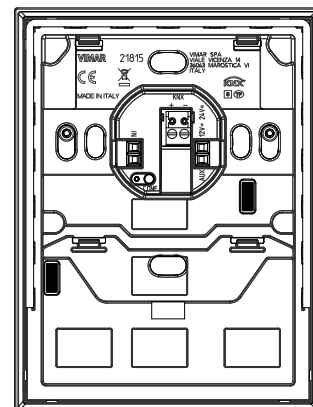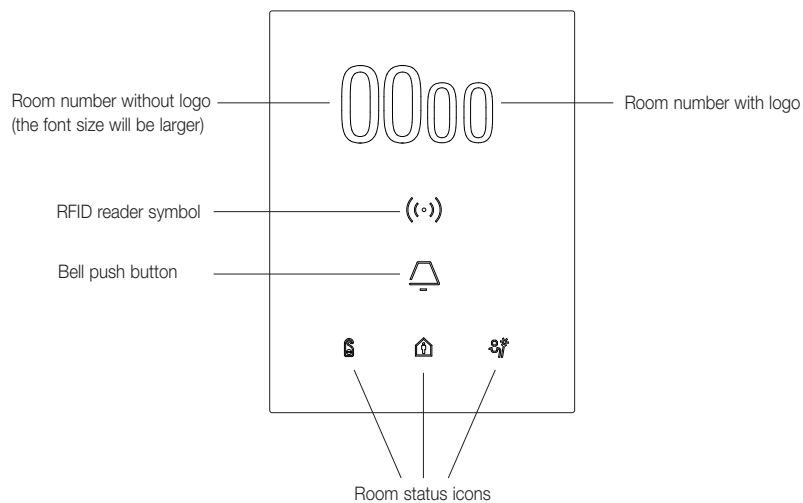

BUS +, -: KNX Bus
AUX: Auxiliary power supply
IN: Configurable potential-free input (SELV)
CONF: LED and configuration push button

The device

List of communication objects

General communication objects

	1	Transit	Transit	4 bytes	C	R	-	T	-	entrance acc...	Low
	2	AccessType1	Access guest	1 bit	C	R	-	T	-	switch	Low
	3	AccessType2	Access service staff	1 bit	C	R	-	T	-	switch	Low
	4	AccessType3	Access maintenance	1 bit	C	R	-	T	-	switch	Low
	5	AccessType4	Access installer	1 bit	C	R	-	T	-	switch	Low
	6	AccessType5	Access security staff	1 bit	C	R	-	T	-	switch	Low
	7	AccessType6	Access assistance	1 bit	C	R	-	T	-	switch	Low
	8	AccessType7	Access administration	1 bit	C	R	-	T	-	switch	Low
	9	Scene control	Scene control	1 byte	C	-	-	T	-	scene control	Low
	12	Valid access	Valid access	1 bit	C	R	-	T	-	switch	Low
	13	Courtesy Light	Courtesy Light	1 bit	C	R	-	T	-	switch	Low
	14	Alarm 1	Alarm 1	1 bit	C	R	-	T	-	alarm	Low
	15	Alarm 2	Alarm 2	1 bit	C	R	-	T	-	alarm	Low
	17	Clock	Clock	8 bytes	C	-	W	-	U	date time	Low
	18	Time	Time	3 bytes	C	-	W	-	U	time of day	Low
	19	Date	Date	3 bytes	C	-	W	-	U	date	Low
	20	Server confirm	Server confirm	4 bytes	C	-	W	-	U	entrance acc...	Low
	21	Plant ID	Plant number	4 bytes	C	-	W	-	U	counter pulses	Low
	22	Access data	Access data	10 bytes	C	-	W	-	U		Low
	23	DisableAccessType1	Disable Access Guest	1 bit	C	-	W	-	U	switch	Low
	24	DisableAccessType2	Disable Access Service Staff	1 bit	C	-	W	-	U	switch	Low
	25	DisableAccessType3	Disable Access Maintenance	1 bit	C	-	W	-	U	switch	Low
	26	DisableAccessType4	Disable Access Installer	1 bit	C	-	W	-	U	switch	Low
	27	DisableAccessType5	Disable Access Security Staff	1 bit	C	-	W	-	U	switch	Low
	28	DisableAccessType6	Disable Access Assistance	1 bit	C	-	W	-	U	switch	Low
	29	DisableAccessType7	Disable Access Administration	1 bit	C	-	W	-	U	switch	Low
	30	Reset	Reset alarm	1 bit	C	-	W	-	U	switch	Low
	33	Do Not Disturb	Do Not Disturb	1 bit	C	-	W	-	-	switch	Low
	34	Do Not Disturb State	Do Not Disturb State	1 bit	C	R	-	T	-	switch	Low
	35	Room/Laundry Service	Room/Laundry Service	1 bit	C	-	W	-	-	switch	Low
	36	Room/Laundry Service State	Room/Laundry Service State	1 bit	C	R	-	T	-	switch	Low
	37	Make-Up Room	Make-Up Room	1 bit	C	-	W	-	-	switch	Low
	38	Make-Up Room State	Make-Up Room State	1 bit	C	R	-	T	-	switch	Low
	45	Doorbell	Doorbell	1 bit	C	R	-	T	-	switch	Low
	46	Presence in the Room	Presence in the Room	1 bit	C	-	W	-	-	boolean	Low
	47	Input	Send Value - short press	1 bit	C	R	-	T	-	switch	Low
	48	Input	Send Value - long press	1 bit	C	R	-	T	-	switch	Low
	50	Input	Status on/off - short press	1 bit	C	-	W	-	U	switch	Low
	51	Input	Status on/off - long press	1 bit	C	-	W	-	U	switch	Low
	60	Presence function	Check-in	1 bit	C	-	W	-	U	switch	Low
	61	Presence function	Check-out	1 bit	C	-	W	-	U	switch	Low
	62	Presence function	Access guest	1 bit	C	-	W	-	U	switch	Low
	66	Presence function	Resume scene	1 byte	C	-	-	T	-	scene control	Low
	67	Presence function	Night welcome scene	1 byte	C	-	-	T	-	scene number	Low
	68	Presence function	Day welcome scene	1 byte	C	-	-	T	-	scene number	Low
	70	Presence function	Off scene	1 byte	C	-	-	T	-	scene number	Low
	71	Presence function	Absence scene	1 byte	C	-	-	T	-	scene number	Low
	73	Presence function	Presence in the Room	1 bit	C	R	-	T	-	switch	Low
	74	Device	Day-Night	1 bit	C	-	W	-	U	dav/night	Low

Communication objects for the input (for instance: Switching module with multiple objects -> short/long press with toggle function)

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

Channel communication objects (if a channel is not active, no communication objects are present)

No.	ETS name	Function	Description	length	Flag 1				
					C	R	W	T	U
1	Transit	Transit	a byte containing the access card data is sent every time a valid card is swiped: this object must be associated with a dedicated group for each device in every room, enabling VIEW Suite to compile the access log. This is the object through which the reader sends the 'OK/KO' transit status to VIEW Suite. This object always communicates in SECURE mode.	4 byte	X	X		X	
2	Type 1 Access	Guest Access	this bit is set to 1 when a valid card with a Guest (room customer) profile is recognised	1 bit	X	X		X	
3	Type 2 Access	Service Access	this bit is set to 1 when a valid card with a Service (cleaning staff) profile is recognised	1 bit	X	X		X	
4	Type 3 Access	Maintenance Access	this bit is set to 1 when a valid card with a Maintenance (facility maintenance engineer) profile is recognised	1 bit	X	X		X	
5	Type 4 Access	Installer Access	this bit is set to 1 when a valid card with an Installer (system installer) profile is recognised	1 bit	X	X		X	
6	Type 5 Access	Security Access	this bit is set to 1 when a valid card with a Security (facility security staff) profile is recognised	1 bit	X	X		X	
7	Type 6 Access	Assistance Access	this bit is set to 1 when a valid card with a Assistance (facility assistance staff) profile is recognised	1 bit	X	X		X	
8	Type 7 Access	Administration Access	this bit is set to 1 when a valid card with the Administration (facility director) profile is recognised	1 bit	X	X		X	
9	Scene control	Scene control	(if the "Scene number for access XY" parameters are activated for the various Guest, Service profiles, etc. and a scene number to be activated is associated for the desired profiles) if access with a valid card with a profile enabled for activation of a scene 1..64 is recognised, when the card is passed the value of the associated scene in the parameters will be sent to that profile	1 byte	X			X	
10	Not used								
11	Not used								
12	Valid access	Valid access	on recognising a valid card, this object goes to 1 to activate the electrical lock relay (remote control switch that can be automatically deactivated by this reader object after a time that can be set in the reader's parameters)	1 bit	X	X		X	
13	Courtesy Light	Courtesy Light	on recognising a valid card, this object goes to 1 to activate the courtesy light relay (remote control switch that can be automatically deactivated by this reader object after a time that can be set in the reader's parameters)	1 bit	X	X		X	
14	Alarm 1	Alarm 1	device-internal alarm objects (following a blackout, the internal clock must be resynchronised by VIEW Suite)	1 bit	X	X		X	
15	Alarm 2	Alarm 2	device-internal alarm object (the 2,000-card list is full)	1 bit	X	X		X	
16	Not used								
17	Clock	Clock	object necessary for VIEW Suite to synchronise the system devices	8 byte	X		X		X
18	Time	Time	object necessary for VIEW Suite to synchronise the system devices: a single group must be created containing all the "Time" objects of all readers in the system, which will be synchronised simultaneously by VIEW Suite by sending a single message to this group	3 byte	X		X		X
19	Date	Date	object necessary for VIEW Suite to synchronise the system devices: a single group must be created containing all the "Date" objects of all readers in the system, which will be synchronised simultaneously by VIEW Suite by sending a single message to this group	3 byte	X		X		X
20	Server Confirm	Server Confirm	object necessary for VIEW Suite to ensure that the device waits for a Confirmation response from the reception PC upon receiving the transmitted access data. This object always communicates in SECURE mode.	4 byte	X		X		X
21	System ID	System number	object dedicated to system diversification with VIEW Suite software: a single group must be created containing all the "System ID" objects of all readers in the system, which will be synchronised simultaneously by VIEW Suite by sending a single message to this group This object always communicates in SECURE mode.	4 byte	X		X		X

Continued

C = Communication; R = Read; W = Write; T = Transmission; U = Enable update

Communication objects and ETS parameters

Continued

No.	ETS name	Function	Description	length	Flag 1					
					C	R	W	T	U	
22	Access data	Access data	object dedicated to system diversification with VIEW Suite software; this is the message that the software sends the readers to communicate the valid card data. This object always communicates in SECURE mode.	10 byte	X		X			X
23	Disable Type 1 Access	Disable Guest Access	if this object is activated the device will deny access to the Guest card profile	1 bit	X		X			X
24	Disable Type 2 Access	Disable Service Access	if this object is activated the device will deny access to the Service card profile	1 bit	X		X			X
25	Disable Type 3 Access	Disable Maintenance Access	if this object is activated the device will deny access to the Service Engineer card profile	1 bit	X		X			X
26	Disable Type 4 Access	Disable Installer Access	if this object is activated the device will deny access to the Installer card profile	1 bit	X		X			X
27	Disable Type 5 Access	Disable Security Access	if this object is activated the device will deny access to the Security card profile	1 bit	X		X			X
28	Disable Type 6 Access	Disable Assistance Access	if this object is activated the device will deny access to the Assistance card profile	1 bit	X		X			X
29	Disable Type 7 Access	Disable Administration Access	if this object is activated the device will deny access to the Administration card profile	1 bit	X		X			X
30	Reset	Alarm Reset	object used to reset internal alarms (object nos. 14,15)	1 bit	X		X			X
31	Not used									
32	Not used									
33	Do not disturb	Do not disturb	to receive the DND control and display on the front LED with the defined colour (the device turns on the related LED)	1 bit	X		X			
34	Do not disturb status	Do not disturb status	to notify whether DND is active on the device (the device writes on this object every time it receives variations from object 33)	1 bit	X	X			X	
35	Room service/Laundry service	Room service/Laundry service	to receive the service or laundry request and display it on the front LED with the defined colour. Object available if the "Central symbol" parameter is set to "Room service"	1 bit	X		X			
36	Room service/Laundry service status	Room service/Laundry service status	to notify whether the Room service/Laundry service is active on the device. Object available if the "Central symbol" parameter is set to "Room service"	1 bit	X	X			X	
37	Make up room	Make up room	to receive the MUR request and display on the front LED with the defined colour (the device turns on the related LED)	1 bit	X		X			
38	Make up room status	Make up room status	to notify whether Make up room is active on the device	1 bit	X	X			X	
39	Not used									
40	Not used									
41	Not used									
42	Not used									
43	Not used									
44	Not used									
45	Bell	Bell	when the front bell button is pressed, a bit value of 1 is sent; upon release, a bit value of 0 is sent only if enabled by the "Behaviour" parameter	1 bit	X	X			X	
46	Presence in room	Presence in room	to receive the information that the guest is in the room and display on the front LED with the defined colour (the device turns on the related LED). Object available if the "Central symbol" parameter is set to "Presence in room" or if "Bell Symbol" is set to "Active".	1 bit	X		X			X
47	STOP	Value to send	(if set as "Push button" and the "switching 1 object" function is selected) - to send "ON/OFF/timed ON" messages.	1 bit	X	X			X	
47	STOP	Value to send	(if set as "Push button" and the "Trigger Control" function is selected) - to send trigger type messages	1 bit	X	X			X	
47	STOP	Sends value - short press	(if set as "Push button" and "Switching module with multiple objects/Short-Long press" function) - to send "Toggle/send ON/send OFF" messages with short press: if used in Toggle mode, also associate the object of "ON/OFF status" of the button in the same group as this object (object 52 and subsequent ones depending on the Input settings).	1 bit	X	X			X	
47	STOP	Send forcing - short press	(if set as "Push button" and "Switching module with multiple objects/Forcing" function) to send one of the forcing functions for selection as "forcing On/forcing OFF/Forced disable".	2 bit	X	X			X	
47	STOP	Send value - up	(if set as "Push button" and "Switching module with multiple objects/on the edge" function) to send one of functions for selection as "ON/OFF on the rising edge" (pressing the button).	1 bit	X	X			X	

Continued

C = Communication; R = Read; W = Write; T = Transmission; U = Enable update

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

Continued

No.	ETS name	Function	Description	length	Flag 1				
					C	R	W	T	U
47	STOP	Scenario - short press	(if set as "Push button" and "Switching module with multiple objects/Short-long press/call up or store scenario" function) to call up or store a scenario on short press.	1 byte	X	X		X	
47	STOP	Send value - short press	(if set as "Push button" and "Switching module with multiple objects/Value" function) to send a value that can be set between 0 and 255 on short press.	1 byte	X	X		X	
47	STOP	ON/OFF control	(if set as "Push button" and "Single push button dimmer control" function) - to turn a dimmed light ON/OFF: if used in Toggle mode, also associate the object of "ON/OFF status" of the button in the same group as this object (object 52 and subsequent ones depending on the Input settings).	1 bit	X	X		X	
47	STOP	Roller shutter Up/Down	(if set as "Push button" and "Single push button roller shutter control" function) - to operate a roller shutter with a single button: if used in Toggle mode, also associate the object of "ON/OFF status-short press" of the button in the same group as this object (object 52 and subsequent ones depending on the Input settings).	1 bit	X	X		X	
47	STOP	Short sequence - Value 1	(if set as "Push button" and "Switching module with multiple objects/Sequence" function) - to send the first 1 bit or 1 byte sequence message on short press. See parameters on page 18	1 bit 1 byte	X	X		X	
47	STOP	Multiple press - Value 1	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function) - to send a message at the first event of multiple presses. See parameters on page 19	1 bit 1 byte 2 byte	X	X		X	
48	STOP	Sends value - long press	(if set as "Push button" and "short/long press" function) - to send "Toggle/send ON/send OFF" messages with long press: if used in Toggle mode, also associate the object of "ON/OFF status-long press" of the button in the same group as this object.	1 bit	X	X		X	
48	STOP	Slats up down/ roller shutter stop	(if set as "Push button" and "Roller shutter single push button control" function) - to stop the roller shutter.	1 bit	X	X		X	
48	STOP	Send value - long press	(if set as "Push button" and "Switching module with multiple objects/Value" function) - to send a value that can be set between 0 and 255 on long press.	1 byte	X	X		X	
48	STOP	Dimmer control	(if set as "Push button" and "Single push button dimmer control" function) to control a dimmed light	4 bit	X	X		X	
48	STOP	Send value - down	(if set as "Push button" and "Switching module with multiple objects/on the edge" function) to send one of functions for selection as "ON/OFF on the falling edge (release the button)	1 bit	X	X		X	
48	STOP	Send forcing - long press	(if set as "Push button" and "Switching module with multiple objects/Forcing" function) to send one of the forcing functions for selection as "forcing On/forcing OFF/Forced disable"	2 bit	X	X		X	
48	STOP	Scenario - long press	(if set as "Push button" and "Switching module with multiple objects/Short-long press/call up or store scenario" function) to call up or store a scenario on long press.	1 byte	X	X		X	
48	STOP	Short sequence - Value 2	(if set as "Push button" and "Switching module with multiple objects/Sequence" function) - to send the second 1 bit sequence message on short press. See parameters on page 18	1 bit	X	X		X	
48	STOP	Multiple press - Value 2	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function) - to send a message at the second event of multiple presses. See parameters on page 19	1 bit 1 byte 2 byte	X	X		X	
49	STOP	Short sequence - Value 3	(if set as "Push button" and "Switching module with multiple objects/Sequence" function) - to send the third 1 bit sequence message on short press. See parameters on page 18	1 bit	X	X		X	
49	STOP	Multiple press - Value 3	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function) - to send a message at the third event of multiple presses. See parameters on page 19	1 bit 1 byte 2 byte	X	X		X	
50	STOP	ON/OFF status ON/OFF status - short press Roller shutter status	(if set as "Push button" and "Single push button dimmer control/toggle on short press" function or "Switching module with multiple objects/Short-long press/toggle on short press" or "Roller shutter single push button control/Roller shutter toggle movement on short press" function selected, this object must be associated with the group with the light "ON/OFF control" datapoint (relay or dimmer) or the roller shutter "roller shutter up/down" datapoint to receive the ON/OFF status of the associated load. If this is not the case, it will be unable to manage light power ON/OFF or roller shutter operation. (for object no. 47).	1 bit	X		X		X
50	STOP	Multiple press - Value 4	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function) - to send a message at the fourth event of multiple presses. See parameters on page 19	1 bit 1 byte 2 byte	X	X		X	

Continued

C = Communication; R = Read; W = Write; T = Transmission; U = Enable update

Communication objects and ETS parameters

Continued

No.	ETS name	Function	Description	length	Flag 1				
					C	R	W	T	U
50	STOP	Short sequence - Value 4	(if set as "Push button" and "Switching module with multiple objects/Sequence" function) - to send the fourth 1 bit sequence message on short press. See parameters on page 18	1 bit	X	X		X	
51	STOP	ON/OFF status - long press	(if set as "Push button" and "Switching module with multiple objects/Short-long press/toggle" function) - this object must be associated with the group with the light "ON/OFF control" datapoint on long press to receive the ON/OFF status of the associated load. If this is not the case, it will be unable to manage light power ON/OFF (for object no. 48).	1 bit	X		X		X
51	STOP	Long sequence - Value 1	(if set as "Push button" and "Switching module with multiple objects/Sequence" function) - to send the first 1 bit or 1 byte sequence message on long press. See parameters on page 18	1 bit 1 byte	X	X		X	
51	STOP	Multiple press - Value 5 long press	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function selected) to send a message in the event of long press. See parameters on page 19	1 bit	X	X		X	
51	STOP	Multiple press - Value 5 long press	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function selected) to call up/store a scenario in the event of long press. See parameters on page 19	1 byte	X	X		X	
52	STOP	Long sequence - Value 2	(if set as "Push button" and "Switching module with multiple objects/Sequence" function) - to send the second 1 bit sequence message on long press. See parameters on page 18	1 bit	X	X		X	
52	STOP	ON/OFF status - Multiple press 1	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function selected) required for Toggle mode (to be associated with object 47). See parameters on page 19	1 bit	X		X		X
53	STOP	Long sequence - Value 3	(if set as "Push button" and "Switching module with multiple objects/Sequence" function) - to send the third 1 bit sequence message on long press.	1 bit	X	X		X	
53	STOP	ON/OFF status - Multiple press 2	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function selected) required for Toggle mode (to be associated with object 48). See parameters on page 19	1 bit	X		X		X
54	STOP	Long sequence - Value 4	(if set as "Push button" and "Switching module with multiple objects/Sequence" function) - to send the fourth 1 bit sequence message on long press. See parameters on page 18	1 bit	X	X		X	
54	STOP	ON/OFF status - Multiple press 3	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function selected) required for Toggle mode (to be associated with object 49). See parameters on page 19	1 bit	X		X		X
55	STOP	ON/OFF status - Multiple press 4	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function selected) required for Toggle mode (to be associated with object 50). See parameters on page 19	1 bit	X		X		X
56	STOP	ON/OFF status - Multiple press - long press	(if set as "Push button" and "Switching module with multiple objects/Multiple presses" function selected) required for Toggle mode in long press.	1 bit	X		X		X
57	Not used								
58	STOP	Object block	with any function/sub-function, if the "Block" parameter is on) - to block the button operation via a settable bit at 1 or at 0.	1 bit	X		X		X
59	Not used								
60	Presence function	Check-in	to receive information about completed check-in (useful to call up the welcome scenario). See parameters on page 27	1 bit	X		X		X
61	Presence function	Check-out	to receive information about completed check-out (useful to call up the off scenario when the guest leaves the room for good). See parameters on page 27	1 bit	X		X		X
62	Presence function	Guest access	to receive information about a guest entry (useful to call up the restore scenario when the guest returns to their room). See parameters on page 27	1 bit	X		X		X
63	Presence function	Service access	to receive information about service staff entry (useful to call up the staff scenario when the service staff enters the room). If this information is not present the restore scenario is called up. See parameters on page 27	1 bit	X		X		X
64	Presence function	Motion sensor	to know whether the guest or service staff are inside the room by means of a motion sensor. See parameters on page 27	1 bit	X		X		X
65	Presence function	Activity signal	to know whether the guest or service staff are inside the room by means of a motion sensor or another device that sends a 1-bit message. See parameters on page 27	1 bit	X		X		X

Continued

C = Communication; R = Read; W = Write; T = Transmission; U = Enable update

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

Continued

No.	ETS name	Function	Description	length	Flag 1				
					C	R	W	T	U
66	Presence function	Restore scenario	to send a scenario save control when the guest leaves the room. To call up the previously saved scenario when the guest enters the room (saved upon the guest's departure). See parameters on page 27	1 byte	X			X	
67	Presence function	Night welcome scenario	to call up the guest welcome scenario at night. See parameters on page 27	1 byte	X			X	
68	Presence function	Day welcome scenario	to call up the guest welcome scenario during the day. See parameters on page 27	1 byte	X			X	
69	Presence function	Staff scenario	to call up the staff scenario when the service staff enters. See parameters on page 27	1 byte	X			X	
70	Presence function	OFF scenario	to call up the OFF scenario when the guest leaves the room for good. See parameters on page 27	1 byte	X			X	
71	Presence function	Away scenario	to call up the away scenario when the guest leaves the room. See parameters on page 27	1 byte	X			X	
72	Presence function	Door input	to receive an indication on the door opening and closing. See parameters on page 27	1 bit	X		X		X
73	Presence function	Presence in room	to transit a bit=1 to signal that the room is occupied and a bit=0 to signal that the room is free. See parameters on page 27	1 bit	X	X		X	
74	Device	Day-Night	to receive information about whether it is day (=0) or night (=1)	1 bit	X		X		X

C = Communication; **R** = Read; **W** = Write; **T** = Transmission; **U** = Enable update

Communication objects and ETS parameters

Reference ETS parameters

Device configuration - General characteristics

These serve to define the behaviour of the device.

ETS text	Values available [Default value]	Comment
Repetition of the Message	0...255 [1]	Determines the number of repetitions of the "Confirm transmit" message
Lock duration	0.1...5 s [0.4]	Determines how many seconds the "Valid access" object 12 remains active. When associated with a relay, this object activates the electrical lock.
Duration Courtesy [s]	1...65535 [20]	Determines how many seconds after activation object 13 of the device is set to "0" (to allow the reader to switch off the courtesy light)
Black List	0=No, 1=Yes [0]	If active, the cards associated with the reader via VIEW Suite will instead be blocked by the reader (reversed logic).
Single Access	0=No, 1=Yes [0]	If enabled, the device makes no distinction regarding the type of card (guest, service, etc.), so there are no access type distinctions
Check date	0=No, 1=Yes [1]	Leave on "Yes"
Check day	0=No, 1=Yes [1]	
Check timeslot	0=No, 1=Yes [1]	
Guest access scenario number	1...64, 255 [255=inactive]	Scenario number for guest access
Service access scenario number	1...64, 25 5 [255=inactive]	Scenario number for service staff access
Maintenance access scenario number	1...64, 255 [255=inactive]	Scenario number for maintenance staff access
Installer access scenario number	1...64, 255 [255=inactive]	Scenario number for installer access
Security access scenario number	1...64, 255 [255=inactive]	Scenario number for security staff access
Assistance access scenario number	1...64, 255 [255=inactive]	Scenario number for Assistance staff access
Administrator access scenario number	1...64, 255 [255=inactive]	Scenario number for Administrator access (manager)

Repetition of the message

Duration Lock [s]

Duration Courtesy [s]

Black List ☒ No ☐ Yes

Single Access ☒ No ☐ Yes

Check date ☐ No ☒ Yes

Check day ☐ No ☒ Yes

Check timeslot ☐ No ☒ Yes

Scene Number Guest Access

Scene Number Service Staff

Scene Number Maintenance Staff

Scene Number for Installer Access

Scene Number for Security Staff

Scene Number for Assistance Staff

Scene Number Administration

Device configuration

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

General

The following parameters concern the device

General settings - General

ETS text	Values available	Comment
	[Default value]	
Debounce time	10..120 ms	Sets the minimum input activation time
	[10]	
Time for long action	1-30 s	Sets the input activation time that can enable advanced functions (such as scene saving)
	[2 s]	
Allow the use of Mifare Classic cards	0=No 1=Yes (recommended)	To determine whether Mifare DesFire EV3 type cards or Mifare Classic type cards are used in the system (use the Mifare Classic card only for replacement in existing systems).
	[0]	

Debounce Time

50

ms

Time for long action

2,0 s

Allow the use of Mifare Classic cards

☒ No

☐ Yes (not recommended)

General settings

Communication objects and ETS parameters

Input

The parameter configuration is shown in the table below.

“Block function” parameter

For the input, you can enable an object that allows you to block the functions that are normally recalled upon the closing or opening of the input.

ETS text	Values available [Default value]	Comment
Block function	Disable	Parameter for enabling the block function and making the related object available
	Enable	
	[Disable]	
Block value	Value 1	To choose whether the block function is active when it receives the value 0 or the value 1 from the bus
	Value 0	
	[Value 1]	
Block function at power up	No change	To choose whether, following a power down, the block remains in the same status it was in before the power down, whether it is deactivated or activated
	Off	
	On	
	[No change]	

Block function

☐ Disable ☒ Enable

Block value

☒ 1 value ☐ 0 value

Block function at power up

No change

“Block function” parameters

Let's look in detail at the **functions that can be associated** with the input

Push button configuration

ETS text	Values available [Default value]	Comment
Function	255 = off	Possibility of selecting the function associated with the wired input
	0 = switching one object (see page 15)	
	1 = switching multiple object (see page 16)	
	2 = single push button dimmer control (see page 19)	
	3 = single push button roller shutter control (see page 19)	
	[255]	

Input function

Send Value

Block function

Block value

Block function at power up

Push button configuration

Switching one object ▼

Disabled

Switching one object ✓

Switching multiple objects

Single Key Dimming

Single Key Shutter

No change ▼

“Switching one object” parameters

ETS text	Values available [Default value]	Comment
Value to send	0 = send ON	Possibility of choosing whether to send an ON message, an OFF message, an ON message with a set time or with trigger control
	1 = send OFF	
	2 = timed ON	
	3 = trigger control	
	[0]	
Time in seconds	1...32000 s	Only if timed
	[30]	

Input function

Send Value

Block function

Block value

Block function at power up

“Switching one object” parameter

Switching one object ▼

Send On ▼

Send On ✓

Send Off

Timed On

Trigger Command

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

“Switching multiple objects” parameters (see sub-parameters up to page 18)

ETS text	Values available [Default value]	Comment
Operation type	0 = On the edge	Possibility of choosing the behaviour and sending over multiple objects
	1 = Short/Long press	
	2 = Force	
	3 = Value	
	4 = Sequence	
	5 = Multiple presses	
	[0]	

Input function	Switching multiple objects
Operation type	Short/long press
Short press function	Toggle
Long press Function	No Reaction
Block function	Toggle
Block value	Send On
Block function at power up	Send Off
	Own Scene
	Save Scene

“Switching multiple objects” parameter

“Switching multiple objects/on the edge” sub-parameter

To obtain a “Bell” ON/OFF and OFF/ON function.

ETS text	Values available [Default value]	Comment
Value on the rising edge	0 = send OFF	On pressing the push button it will send ON or OFF
	1 = send ON	
	[1]	
Value on the falling edge	0 = send OFF	On releasing the push button it will send ON or OFF
	1 = send ON	
	[0]	

Input function	Switching multiple objects
Operation type	On edge
Value on Rising Edge	☐ Off ☒ On
Value on Falling Edge	☒ Off ☐ On
Block function	☐ Disable ☒ Enable
Block value	☒ 1 value ☐ 0 value
Block function at power up	No change

“Switching multiple objects/on the edge” parameter

“Switching multiple objects/Short-Long press” sub-parameter with Toggle and ON/OFF options

To perform “Toggle” or “ON-only” or “OFF-only” with both short and long presses.

ETS text	Values available [Default value]	Comment
Short press function	No reaction	Possibility of choosing the message to send on a short press of the push button. By choosing “Toggle”, ON/OFF/ON etc. will be sent in sequence with each press of the push button. Both the control object and the push button “Status” object must be associated with the group
	Toggle	
	Send ON	
	Send OFF	
	[Toggle]	
Long press function	No reaction	Possibility of choosing the message to send on a short press of the push button. By choosing “Toggle”, ON/OFF/ON etc. will be sent in sequence with each press of the push button. Both the control object and the push button “Status” object must be associated with the group
	Toggle	
	Send ON	
	Send OFF	
	[Toggle]	

Input function	Switching multiple objects
Operation type	Short/long press
Short press function	Toggle
Long press Function	Send On
Block function	☐ Disable ☒ Enable
Block value	☒ 1 value ☐ 0 value
Block function at power up	No change

“Switching multiple objects/Short-long press” parameters with Toggle and ON/OFF” options

Communication objects and ETS parameters

“Switching multiple objects/Short-Long press” sub-parameter with the options for the scenario

A scenario can be activated or saved (with a long press).

ETS text	Values available [Default value]	Comment
Short press function	0 = no action	If enabled, a short push button press saves a scenario in the bus or calls up a scenario
	1 = save scenario	
	2 = call up scenario	
	[0]	
Scenario	1-64	Number of the scenario called up or saved on short press
	[1]	
Long press function	0 = no action	If enabled, a prolonged push button press saves a scenario in the bus or calls up a scenario
	1 = save scenario	
	2 = call up scenario	
	[0]	
Long press scenario	1-64	Number of the scenario called up or saved on long press
	[1]	

Input function	Switching multiple objects ▼
Operation type	Short/long press ▼
Short press function	Own Scene ▼
Scene	1 ▼
Long press Function	Save Scene ▼
Scene	1 ▼
Block function	☐ Disable ☒ Enable
Block value	☒ 1 value ☐ 0 value
Block function at power up	No change ▼

“Switching multiple objects/Short press/Long press with options for the scenario” parameter

“Switching multiple objects/Forcing” sub-parameter

The push button can be used for forcing functions (ON or OFF).

ETS text	Values available [Default value]	Comment
Short press function	0 = no reaction	To send forced ON or OFF controls and to disable forcing on short press
	1 = forced ON	
	2 = forced OFF	
	3 = disable forcing	
	[0]	
Long press function	0 = no reaction	To send forced ON or OFF controls and to disable forcing on long press
	1 = forced ON	
	2 = forced OFF	
	3 = disable forcing	
	[0]	

Input function	Switching multiple objects ▼
Operation type	Forced ▼
Short press function	Forced On ▼
Long press Function	Forced disable ▼
Block function	☐ Disable ☒ Enable
Block value	☒ 1 value ☐ 0 value
Block function at power up	No change ▼

“Switching multiple objects/Forcing” parameter

“Switching multiple objects/Value” sub-parameter

To send a value 0÷255 on short or long push button press.

ETS text	Values available [Default value]	Comment
Short press function	0÷255	Sends a value between "0" and "255" over the bus on a long push button press
Enables second value on long press	Yes	To enable a second value to send on long press
	No	
	[No]	
Long press function	0÷255	Sends a value between "0" and "255" over the bus on a long push button press

Input function	Switching multiple objects ▼
Operation type	Value ▼
Short press function	0 ▼
Long press second Value	☐ No ☒ Yes
Long press Function	215 ▼
Block function	☐ Disable ☒ Enable
Block value	☒ 1 value ☐ 0 value
Block function at power up	No change ▼

“Value” parameter

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

“Switching several objects/Sequence” sub-parameters

A maximum of 4 distinct sequences can be configured for short and long presses (ranging from 1 bit to 1 byte). For each sequence (1 to 4), you define the value sent onto the bus by the corresponding group object.

ETS text	Values available [Default value]	Comment
Data format	0 = 1 bit	Type of data to send
	1 = 1 byte	
	[0]	

If data format = 1 bit

Sequence type	0 = Cyclic	By choosing cyclic sequence, for each press the data on the objects Value 1, Value 2, Value 3, Value 4, Value 1, Value 2, Value 3, Value 4... are sent By choosing increasing/decreasing sequence, the data on the objects Value 1, Value 2, Value 3, Value 4, Value 3, Value 2, Value 1, Value 2, Value 3, Value 4... are sent
	1 = Increasing/Decreasing	
	[0]	

Number of objects	0÷4	Number of objects concerned in the sequence for short press
	[2]	

Value 1..n	0 = ON	ON or OFF values to send for short press
	1 = OFF	
	[1]	

Long press function	Disable	Enabling of the sequence function for long press
	Enable	
	[Disable]	

Number of objects	0÷4	Number of objects concerned in the sequence for long press
	[2]	

Value 1..n	0 = ON	ON or OFF values to send for long press
	1 = OFF	
	[1]	

If data format = 1 byte

Sequence type	0 = Cyclic	By choosing cyclic sequence, for each press of the dedicated object, the data on the objects Value 1, Value 2, Value 3, Value 4, Value 1, Value 2, Value 3, Value 4... are sent By choosing increasing/decreasing sequence, the data Value 1, Value 2, Value 3, Value 4, Value 3, Value 2, Value 1, Value 2, Value 3, Value 4... are sent
	1 = Increasing/Decreasing	
	[0]	

Number of values	0÷4	Number of different values to send in the sequence for short press
	[2]	

Value 1..n	0÷255	Values to send for short press
	[0]	

Long press function	Disable	Enabling of the sequence function for long press
	Enable	
	[Disable]	

Number of values	0÷4	Number of different values to send in the sequence for long press
	[2]	

Value 1..n	0÷255	Values to send for long press
	[0]	

Input function	Switching multiple objects
Operation type	Sequence
Data format	☒ 1 Bit ☐ 1 Byte
Sequence type	☒ Cycling ☐ Increasing/Decreasing
Number of objects	4
Value 1	☐ On ☒ Off
Value 2	☒ On ☐ Off
Value 3	☐ On ☒ Off
Value 4	☐ On ☒ Off
Long press Function	☐ Disable ☒ Enable
Number of objects	4
Value 1	☐ On ☒ Off
Value 2	☒ On ☐ Off
Value 3	☐ On ☒ Off
Value 4	☒ On ☐ Off
Block function	☒ Disable ☐ Enable

“Switching module with multiple objects/Sequence” parameters

Communication objects and ETS parameters

“Switching multiple objects/Multiple presses” sub-parameters

ETS text	Values available [Default value]	Comment
Message transmission	0 = Each single press	To establish whether to send the messages at all presses in the series or only at the end of the series.
	1 = Only at the end of pressing	
	[0]	
Maximum time between presses	100÷32000 ms	This time determines the end of the series of presses
	[500]	
Data format	0 = 1 bit	Type of data to send (for the first press)
	1 = 1 byte	
	2 = 2 byte	
	[0]	
Value to send (if data format = 1bit)	0 = OFF	1 bit values to send for short press
	1 = ON	
	2 = Toggle	
	[0]	
Value 1..n (if data format = 1byte)	0÷255	1 byte values to send for short press
	[0]	
Value 1..n (if data format = 2byte)	0÷ 65535	2 byte values to send for short press
	[0]	
Second press detection	Disable	Enabling management of second press
	Enable	
	[Disable]	
Data format	0 = 1 bit	Type of data to send (for the second press)
	1 = 1 byte	
	2 = 2 byte	
	[0]	
Value to send (if data format = 1bit)	0 = OFF	1 bit values to send for short press
	1 = ON	
	2 = Toggle	
	[0]	
Value 1..n (if data format = 1byte)	0÷255	1 byte values to send for short press
	[0]	
Value 1..n (if data format = 2byte)	0÷ 65535	2 byte values to send for short press
	[0]	
Third press detection	Disable	Enabling management of third press
	Enable	
	[Disable]	
Data format	0 = 1 bit	Type of data to send (for the third press)
	1 = 1 byte	
	2 = 2 byte	
	[0]	
Value to send (if data format = 1bit)	0 = OFF	1 bit values to send for short press
	1 = ON	
	2 = Toggle	
	[0]	
Value 1..n (if data format = 1byte)	0÷255	1 byte values to send for short press
	[0]	
Value 1..n (if data format = 2byte)	0÷ 65535	2 byte values to send for short press
	[0]	
Fourth press detection	Disable	Enabling management of fourth press
	Enable	
	[Disable]	

Continued

Input function	Switching multiple objects
Operation type	Multiple presses
Message sending	☐ Every single press ☒ Only at the end of the pressure
Max time between pressures	500 [ms]
Data format	2 Byte
Value to send	134
Second press detection	☐ Disable ☒ Enable
Data format	1 bit
Value to send	On
Third press detection	☒ Disable ☐ Enable
Fourth press detection	☒ Disable ☐ Enable
Long press Function	Save Scene
Scene	1
Block function	☒ Disable ☐ Enable

“Switching multiple objects/Multiple presses” parameter

Note: An example of a long press application is a water control unit pulse counter that sends an extended pulse if a pump fault occurs (this can be used to signal the fault alarm on the KNX bus).

Continued

ETS text	Values available [Default value]	Comment
Data format	0 = 1 bit	Type of data to send (for the fourth press)
	1 = 1 byte	
	2 = 2 byte	
	[0]	
Value to send (if data format = 1bit)	0 = OFF	1 bit values to send for short press
	1 = ON	
	2 = Toggle	
	[0]	
Value 1..n (if data format = 1byte)	0÷255	1 byte values to send for short press
	[0]	
Value 1..n (if data format = 2byte)	0÷ 65535	2 byte values to send for short press
	[0]	
Long press function	No reaction	To enable the sending of a message for long press on object no. 55 (if set as “Toggle”, object 55 should also be combined with object 56)
	Toggle	
	Send ON	
	Send OFF	
	Save scenario	
	Call up scenario	
	[No reaction]	
Scenario	1..64	Number of the scenario called up or saved for long press on object no. 55
	[1]	

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

“Single push button dimmer control” parameter (see the “Push button configuration” parameters on page 14)

Dimmer control with a single push button.

ETS text	Values available [Default value]	Comment
Dimming step	1.5....100% [100%]	Sets the dimming speed
Repeat dimming telegrams	0 = No 1 = Yes [0]	Sets the dimming mode (continuous or step-step)
Repetition time	0.3....5 s [1.0 s]	Dimming message repetition time
Dimmer behaviour	Toggle (short press) Up/ Down Dimming (long press) ON (short press) Up Dimming (long press) OFF (short press) Down Dimming (long press) [Toggle (short press) Up/Down Dimming (long press)]	Possibility of choosing the behaviour for short and long press

Input function	Single Key Dimming
Dimming steps	100%
Repeat Dimming Telegrams	☒ No ☐ Yes
Dimmer Behaviour	On (short), Dimming Up (long)
Block function	☒ Disable ☐ Enable

“Single push button dimmer control” parameters

“Single push button roller shutter control” parameter (see the “Push button configuration” parameters on page 14)

Roller shutter control with a single push button.

ETS text	Values available [Default value]	Comment
Roller shutter behaviour	Roller shutter up (long press), stop/step (short press)	Possibility of choosing the behaviour for short and long press
	Roller shutter down (long press), stop/step (short press)	
	Roller shutter toggle movement (long press), stop (short press)	
	Roller shutter up (short press), stop/step (long press)	
	Roller shutter down (short press), stop/step (long press)	
	Roller shutter toggle movement (short press), stop (long press)	
	[Roller shutter up (long press), stop/step (short press)]	
Send Stop on release	0 = No 1 = Yes [0]	Possibility of choosing whether to send the stop when the push button is released

Input function	Single Key Shutter
Shutter Behaviour	Shutter Movement UP (long), Stop/Step(short)
Send stop on Release	☒ No ☐ Yes
Block function	☒ Disable ☐ Enable

“Single push button roller shutter control” parameters

Note.

By setting “Push button” and selecting the “Single push button dimmer control” function or the “Toggle object” function or the “Single push button roller shutter control” function, this object must be associated with the group with the light “ON/OFF status” datapoint (relay or dimmer) or the roller shutter “roller shutter up/down” datapoint to receive the ON/OFF status of the associated load. If this is not the case, it will be unable to manage light control or roller shutter operation.

Communication objects and ETS parameters

User interface

Parameters

You can activate or deactivate the signalling present on the front of the landing panel.

ETS text	Values available [Default value]	Comment
Central symbol	Off	To enable the symbol and choose the function of the central icon
	Room service	
	Presence in room	
	[Off]	
Bell symbol	Off	To enable the symbol and the bell function
	On	
	[Off]	
Card reader	Off	To enable the card reading function and related symbol.
	On	
	[Off]	
Logo symbol and room number	Off	To enable the number and the logo
	On	
	[Off]	
Flashing DND on pressing the bell with DND on	No	To enable the flashing on the "Do not disturb" symbol on pressing the bell with "Do not disturb" on. This is to indicate that the control is not sent on pressing the bell button.
	Yes	
	[No]	

Central Symbol Presence in the room

Doorbell symbol ☒ Not active ☐ Active

Card reader ☒ Not active ☐ Active

Logo and room number symbol ☒ Not active ☐ Active

Flashing DND on pressing bell with active DND ☒ No ☐ Yes

User interface parameters

Bell symbol

The colour and brightness of the bell symbol can be selected. This function is available if the "Bell symbol" parameter was enabled.

ETS text	Values available [Default value]	Comment
Behaviour	On when pressed, off when released	To decide whether a 0 bit is sent when released
	On when pressed	
	[On when pressed, off when released]	
Colour with presence in room	Default colours	To choose the colour of the bell when the information about the presence in the room is present on the "Presence in room" object
	Customised colour	
	[Default colours]	
Colour	Amber	To select the colour of presence in room on the bell from a default list. Available if "Colour with presence in room" is set to "Default colours"
	White	
	Red	
	Green	
	Blue	
	Cyan	
	[White]	
Red LED colour	0...255 [255]	To select the coordinates of the colour of presence in room on the bell. Available if "Colour with presence in room" is set to "Customised colour"
Green LED colour		
Blue LED colour		
Colour without presence in room	Default colours	To choose the colour of the bell when the presence in the room is not present on the "Presence in room" object
	Customised colour	
	[Default colours]	

Behaviour ☒ On when pressed, off when released ☐ Only on when pressed

Colour with presence in the room ☒ Predefined colours ☐ Custom colours

Colour White

Colour with no presence in the room ☒ Predefined colours ☐ Custom colours

Colour White

Day brightness when pressed Off

Day brightness when not pressed High

Night brightness when pressed Off

Night brightness when not pressed Medium

"Bell symbol" parameter

Continued

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

Continued

ETS text	Values available [Default value]	Comment
Colour	Amber	To select the colour of away from room on the bell from a default list. Available if "Colour without presence in room" is set to "Default colours"
	White	
	Red	
	Green	
	Blue	
	Cyan	
	Magenta	
	[White]	
Red LED colour	0...255 [255]	To select the coordinates of the colour of presence in room on the bell. Available if "Colour without presence in room" is set to "Customised colour"
Green LED colour		
Blue LED colour		
Day brightness when pressed	Off	To choose the brightness of the bell button during the day when pressed
	Low	
	Medium	
	High	
	[Off]	
Day brightness when not pressed	Off	To choose the brightness of the bell button during the day when not pressed
	Low	
	Medium	
	High	
	[High]	
Night brightness when pressed	Off	To choose the brightness of the bell button at night when pressed
	Low	
	Medium	
	High	
	[Off]	
Night brightness when not pressed	Off	To choose the brightness of the bell button at night when not pressed
	Low	
	Medium	
	High	
	[Medium]	

Communication objects and ETS parameters

“Do not disturb” symbol

The colour and brightness of the “Do not disturb” symbol can be selected.

ETS text	Values available [Default value]	Comment
Colour	Default colours	To select the colour of the “Do not disturb” symbol
	Customised colour	
	[Default colours]	
Colour	Amber	To select the colour of the “Do not disturb” symbol from a default list. Available if “Colour” is set to “Default colours”
	White	
	Red	
	Green	
	Blue	
	Cyan	
	Magenta	
	[White]	
Red LED colour	0...255 [255]	To select the coordinates of colour of the “Do not disturb” symbol. Available if “Colour” is set to “Customised colour”
Green LED colour		
Blue LED colour		
Activated day function brightness	Off	To select the brightness of the “Do not disturb” symbol during the day when the signalling is on
	Low	
	Medium	
	High	
	[High]	
Deactivated day function brightness	Off	To select the brightness of the “Do not disturb” symbol during the day when the signalling is not on
	Low	
	Medium	
	High	
	[Off]	
Activated night function brightness	Off	To select the brightness of the “Do not disturb” symbol at night when the signalling is on
	Low	
	Medium	
	High	
	[Medium]	
Deactivated night function brightness	Off	To select the brightness of the “Do not disturb” symbol at night when the signalling is not on
	Low	
	Medium	
	High	
	[Off]	

Colour

☒ Predefined colours ☐ Custom colours

Colour

White ▼

Activated day function brightness

High ▼

Deactivated day function brightness

Off ▼

Activated night function brightness

Medium ▼

Deactivated night function brightness

Off ▼

“Do not disturb” parameter

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

“Room service” symbol

The colour and brightness of the “Room service” symbol can be selected. This menu is available if the “Central symbol” parameter is set to “Room service”.

ETS text	Values available [Default value]	Comment
Colour	Default colours	To select the colour of the “Room service” symbol.
	Customised colour	
	[Default colours]	
Colour	Amber	To select the colour of the “Room service” symbol from a default list. Available if “Colour” is set to “Default colours”
	White	
	Red	
	Green	
	Blue	
	Cyan	
	Magenta	
	[White]	
Red LED colour	0...255 [255]	To select the coordinates of colour of the “Room service” symbol. Available if “Colour” is set to “Customised colour”
Green LED colour		
Blue LED colour		
Activated day function brightness	Off	To select the brightness of the “Room service” symbol during the day when the signalling is on
	Low	
	Medium	
	High	
	[High]	
Deactivated day function brightness	Off	To select the brightness of the “Room service” symbol during the day when the signalling is not on
	Low	
	Medium	
	High	
	[Off]	
Activated night function brightness	Off	To select the brightness of the “Room service” symbol at night when the signalling is on
	Low	
	Medium	
	High	
	[Medium]	
Deactivated night function brightness	Off	To select the brightness of the “Room service” symbol at night when the signalling is not on
	Low	
	Medium	
	High	
	[Off]	

Colour

Colour

Activated day function brightness

Deactivated day function brightness

Activated night function brightness

Deactivated night function brightness

“Room service” parameter

☒ Predefined colours ☐ Custom colours

White ▼

High ▼

Off ▼

Medium ▼

Off ▼

Communication objects and ETS parameters

“Presence in room” symbol

The colour and brightness of the “Presence in room” symbol can be selected. This menu is available if the “Central symbol” parameter is set to “Presence in room”.

ETS text	Values available [Default value]	Comment
Colour with presence in room	Default colours	To select the colour of the “Presence in room” symbol when there is a presence in the room
	Customised colour	
	[Default colours]	
Colour	Amber	To select the colour of the “Presence in room” symbol from a default list. Available if “Colour” is set to “Default colours”
	White	
	Red	
	Green	
	Blue	
	Cyan	
	Magenta	
	[White]	
Red LED colour	0...255 [255]	To select the coordinates of colour of the “Presence in room” symbol. Available if “Colour” is set to “Customised colour”
Green LED colour		
Blue LED colour		
Colour without presence in room	Default colours	To select the colour of the “Presence in room” symbol when the room is empty
	Customised colour	
	[Default colours]	
Colour	Amber	To select the colour of the “Presence in room” symbol from a default list when the room is empty. Available if “Colour” is set to “Default colours”
	White	
	Red	
	Green	
	Blue	
	Cyan	
	Magenta	
	[White]	
Red LED colour	0...255 [255]	To select the coordinates of colour of the “Presence in room” symbol when the room is empty. Available if “Colour” is set to “Customised colour”
Green LED colour		
Blue LED colour		
Day brightness	Off	To select the brightness of the “Presence in room” symbol during the day
	Low	
	Medium	
	High	
	[High]	
Night brightness	Off	To select the brightness of the “Presence in room” symbol at night
	Low	
	Medium	
	High	
	[Medium]	

Colour with presence in the room

☒ Predefined colours ☐ Custom colours

Colour

White ▼

Colour with no presence in the room

☒ Predefined colours ☐ Custom colours

Colour

White ▼

Day brightness

High ▼

Night brightness

Medium ▼

“Presence in room” parameter

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

“Make up room” symbol

The colour and brightness of the “Make up room” symbol can be selected.

ETS text	Values available [Default value]	Comment
Colour	Default colours	To select the colour of the “Make up room” symbol
	Customised colour	
	[Default colours]	
Colour	Amber	To select the colour of the “Make up room” symbol from a default list. Available if “Colour” is set to “Default colours”
	White	
	Red	
	Green	
	Blue	
	Cyan	
	Magenta	
	[White]	
Red LED colour	0...255 [255]	To select the coordinates of colour of the “Make up room” symbol. Available if “Colour” is set to “Customised colour”
Green LED colour		
Blue LED colour		
Activated day function brightness	Off	To select the brightness of the “Make up room” symbol during the day when the signalling is on
	Low	
	Medium	
	High	
	[High]	
Deactivated day function brightness	Off	To select the brightness of the “Make up room” symbol during the day when the signalling is not on
	Low	
	Medium	
	High	
	[Off]	
Activated night function brightness	Off	To select the brightness of the “Make up room” symbol at night when the signalling is on
	Low	
	Medium	
	High	
	[Medium]	
Deactivated night function brightness	Off	To select the brightness of the “Make up room” symbol at night when the signalling is not on
	Low	
	Medium	
	High	
	[Off]	

Colour

☒ Predefined colours ☐ Custom colours

Colour

White

Activated day function brightness

High

Deactivated day function brightness

Off

Activated night function brightness

Medium

Deactivated night function brightness

Off

“Make up room” parameter

Communication objects and ETS parameters

“Card” symbol

The colour and brightness of the “Card” symbol can be selected.

ETS text	Values available [Default value]	Comment
Colour	Default colours	To select the colour of the “Card” symbol
	Customised colour	
	[Default colours]	
Colour	Amber	To select the colour of the “Card” symbol from a default list. Available if “Colour” is set to “Default colours”
	White	
	Red	
	Green	
	Blue	
	Cyan	
	Magenta	
	[White]	
Red LED colour	0...255 [255]	To select the coordinates of colour of the “Card” symbol. Available if “Colour” is set to “Customised colour”
Green LED colour		
Blue LED colour		
Day brightness	Off	To select the brightness of the “Card” symbol during the day
	Low	
	Medium	
	High	
	[High]	
Night brightness	Off	To select the brightness of the “Card” symbol at night
	Low	
	Medium	
	High	
	[Medium]	

Colour

Colour

Day brightness

Night brightness

“Card” parameter

☒ Predefined colours ☐ Custom colours

White

High

Medium

“Logo” symbol and “Room number”

The colour and brightness of the logo and room number can be selected.

ETS text	Values available [Default value]	Comment
Colour	Default colours	To select the colour of the logo and room number
	Customised colour	
	[Default colours]	
Colour	Amber	To select the colour of the logo and room number from a default list. Available if “Colour” is set to “Default colours”
	White	
	Red	
	Green	
	Blue	
	Cyan	
	Magenta	
	[White]	
Red LED colour	0...255 [255]	To select the coordinates of colour of the logo and room number. Available if “Colour” is set to “Customised colour”
Green LED colour		
Blue LED colour		
Day brightness	Off	To select the brightness of the logo and room number during the day
	Low	
	Medium	
	High	
	[High]	
Night brightness	Off	To select the brightness of the logo and room number at night
	Low	
	Medium	
	High	
	[Medium]	

Colour

Colour

Day brightness

Night brightness

“Logo” and “Room number” parameter

☒ Predefined colours ☐ Custom colours

White

High

Medium

HOTEL KNX RFID Landing panel

Communication objects and ETS parameters

Presence in room function

The Presence in room function is useful to call up a scenario when specific conditions occur, such as entering and leaving the room, the first entry after check-in, the final departure from the room after check-out, etc.

Note: The function can be activated by selecting an option from the related menu, between “With motion sensor” or “With pocket”.

With KNX motion sensor

In this case, the logic manages the following events:

- Check-in. 1bit information received on the “Check-in” object.
- Door opening and closing. 1bit information received on the “Door input” object.
- Staff access. 1bit information received on the “Service access” object.
- Check-out. 1bit information received on the “Check-out” object.
- Day-Night. 1bit information received on the “Day-Night” object.
- Motion in the room. 1bit information received on the “Motion sensor” and “Activity signalling” objects.

This function is used to check if a room is occupied and signal it in the 1 bit object “Presence in room”. To implement the function, at least a motion sensor and a room access door opening and closing signal must be used. The configuration of an object signalling activity in the room is optional.

With a non-KNX pocket whose relay output is connected to a KNX input

In this case, the logic manages the following events:

- Check-in. 1bit information received on the “Check-in” object.
- Guest access. 1bit information received on the “Guest access” object.
- Staff access. 1bit information received on the “Service access” object.
- Check-out. 1bit information received on the “Check-out” object.
- Day-Night. 1bit information received on the “Day-Night” object.

This function is used to check if a room is occupied and signal it in the 1 bit object “Presence in room”. To implement the function, at least one card pocket must be used.

The combination of messages received on objects from nos. 64 to 69 will make objects from nos. 71 to 75 perform actions.

Presence in the room function

With presence detector

Empty room timeout

1 min

Closed door timeout

Not active

Staff entry verify

☒ Disable ☐ Enable

Activity reporting

☒ Disable ☐ Enable

Resume scene

Not active

Night welcome scene

Not active

Day welcome scene

Not active

Off scene

Not active

Absence scene

Not active

Presence in room with presence sensor

Presence in the room function

With holder

Empty room timeout

1 min

Staff entry verify

☒ Disable ☐ Enable

Resume scene

Not active

Night welcome scene

Not active

Day welcome scene

Not active

Off scene

Not active

Absence scene

Not active

Presence in room with pocket

Continued

ETS text	Values available [Default value]	Comment
Empty room time-out	1 min	In the case of the Presence in room function “With motion sensor”: A timeout that starts when the door closes, during which it verifies if the guest has actually left the room by checking the messages sent to the “Motion sensor” object by the motion sensor and any other sensor communicating on the “Activity signalling” object. In the case of the Presence in room function “With pocket”: A timeout that starts when the card is removed, during which it verifies if the guest has actually left the room by checking whether the card is inserted into the pocket again via the “Guest access” or “Service access” objects. Note: after the door opens and closes, the device checks whether 1 or 2 motion sensors or a pocket (non-KNX) signal a presence within a certain time interval; otherwise, the person is considered to have left
	2 min	
	3 min	
	4 min	
	5 min	
	[1 min]	

Continued

ETS text	Values available [Default value]	Comment
Presence in room function	Off	To decide whether room presence detection occurs using information from a motion sensor or through inserting a card into a non-KNX pocket connected to a KNX input
	With Pocket	
	With motion sensor	
	[Off]	

Continued

Communication objects and ETS parameters

Continued

ETS text	Values available [Default value]	Comment
Door closing time-out	Off	A timeout that starts when the door opens to consider the door closed even if the closing message has not been received on the "Door input" object. Only available in the case of the Presence in room function "With motion sensor".
	1 min	
	2 min	
	3 min	
	4 min	
	5 min	
	[Off]	
Staff entry check	Disable	To enable checking whether entry into the room is by service staff. If enabled, the "Service access" scenario is available. If disabled, entry is always considered to be a "guest" type.
	Enable	
	[Disable]	
Activity signalling	Disable	If this parameter is enabled, any command received on the "Activity signalling" object signals the presence in the room (object no. 65)
	Enable	
	[Disable]	
Restore scenario	Off	Scenario called up when the guest returns to the room and stored when the guest leaves the room. This way, upon returning, the guest finds the same conditions they left when exiting (object no. 66)
	1...64	
	[Off]	
Night welcome scenario	Off	Scenario called up upon the guest's first entry into the room after check-in at night (object no. 67)
	1...64	
	[Off]	
Day welcome scenario	Off	Scenario called up upon the guest's first entry into the room after check-in during the day (object no. 68)
	1...64	
	[Off]	
Staff scenario	Off	Scenario called up upon staff entry into the room (object no. 69)
	1...64	
	[Off]	
OFF scenario	Off	Scenario called up when the guest leaves the room for good upon check-out (object no. 70)
	1...64	
	[Off]	
Away scenario	Off	Scenario called up when the guest leaves the room (object no. 71)
	1...64	
	[Off]	

Note.

These scenarios ensure that the status of the various KNX relays is stored at every entry and exit of the guest in the room.

The scenarios are then reset when the guest check-out is performed from View Suite.

Additional scenarios can be associated in the event of a new check-in from View Suite (depending on whether it occurs during the day or at night) and also when service staff enter the room.

Caution: In the event of a blackout, when mains voltage is restored, the device restarts with the new information received from the bus and not with the information relating to room presence prior to the blackout.



21815.P IT 01 2606



VIMAR

Viale Vicenza 14
36063 Marostica VI - Italy
www.vimar.com