Instructions manual

21848.1

4.3" colour touchscreen for monitoring and control, Well-contact Plus



WELL-CONTACT PLUS





Table of Contents

TABLE OF CONTENTS

2. Main menu 2 Date and time 3 Display 3 Keys Tone 4 Protection 4 Information 6 3. Area management 6 4. Weather station 5 5. Screen saver 10 6. Cleaning the touchscreen. 10 7. Conformity 10		Description	
Display 3 Keys Tone 2 Temperature Unit 2 Protection 2 Information 2 3. Area management 6 4. Weather station 5 5. Screen saver 10 6. Cleaning the touchscreen 10	2.		
Keys Tone 2 Temperature Unit 2 Protection 2 Information 2 3. Area management 6 4. Weather station 2 5. Screen saver 10 6. Cleaning the touchscreen 10		Date and time	3
Temperature Unit 2 Protection 2 Information 5 3. Area management 6 4. Weather station 5 5. Screen saver 10 6. Cleaning the touchscreen 10		Display	3
Protection 2 Information 5 3. Area management 6 4. Weather station 5 5. Screen saver 10 6. Cleaning the touchscreen 10		Keys Tone	4
Information 6 3. Area management 6 4. Weather station 6 5. Screen saver 10 6. Cleaning the touchscreen 10		Temperature Unit	4
3. Area management 6 4. Weather station 9 5. Screen saver 10 6. Cleaning the touchscreen 10			
4. Weather station 5 5. Screen saver 10 6. Cleaning the touchscreen 10		Information	5
5. Screen saver 10 6. Cleaning the touchscreen. 10	3.	Area management	6
6. Cleaning the touchscreen	4.	Weather station	9
	5.	Screen saver	10
7. Conformity			
	7.	Conformity	10



Description - Main menù

1. DESCRIPTION.

Colour 4.3" touchscreen for control and command, Well-contact Plus, complete with mounting frame for installation in boxes of 8 modules.

2. MAIN MENU'.

Once the touch screen has been configured with the Touchscreen Configurer software, the opening screen is displayed containing the various sections for the control/command of the whole system.

Touching the icon

n Ch

gives access to the Settings menu.





е

Main menù

• Date and Time By touching the

icon it is possible to set the time and date to be displayed. With the

impostare il valore evidenziato fino a portarlo al giorno, mese, anno e orario desiderato.

Display

When the *icon* is touched the display shows the screen that allows you to adjust the back-lighting and the contrast of the display.

🐨 🛛 Display an	d Sounds
— Backlig	ht ON ——
_	+
– Backlight	Standby —
-	+
Key So	unds
OFF	ON
OFF —— Temperat	

This is set by holding your finger on the + and - icons until the desired level is reached.



Main menù

Keys Tone

ON OFF With the and icons it is possible to enable or disable the acoustic signal(beep) which accompanies the touching of the icons displayed by the touchscreen.

Temperature Unit

With the °C and icons it is possible to select the unit of measurement with which the touchscreen will display the temperature in the various areas of the system.

To confirm the settings made, touch the OK icon.

To return to the previous screen touch the icon.

Protection

By touching the icon you can set a password with which you select whether to inhibit access to all **h**...... the menus or only to the Settings menu.





ΓA

H

icon you activate or deactivate protection of all the menus.

With the

icon you access the window that allows you to set the desired password.



Main menù



After making the desired settings (Menu Protection and/or PIN change) simply touch the OK icon of the Protection menu.

Information

Touching the **i** icon on the screen shows the softwarerelease and the main characteristics of the touchscreen.





Area management

3. AREA MANAGEMENT.

From the main menu, when the icon , is touched the display is shown which allows you to select the different areas of the system and to control the devices associated with them (lights, roller shutters, HVAC, etc.).



For example, when the icon

is touched that corresponds to the area called "Ground Floor",

the touch screen displays the following screen:





Area management

- Touching the icon
- 귯 +
- switches on/off and adjusts the lighting called "Corridor Light".
- Touching the icon 🔽 🚾 🖌
- △ lifts and lowers the roller shutter called "Roller shutters".

• Touching the icon **see and the set of the**



The temperature can be varied only in a certain range of values that is defined in the thermostat via the ETS software.

The above also applies in the case of operation in protected and non-protected modes.



Area management

• Touching the **section** icon displays the screen which allows you to set the operation (Comfort, Standby, etc.) of the heating/air-conditioning system for the area called Ground Floor.

In the case of operation in protected mode it will be possible to set only the Comfort and OFF options.



• Touching the **example** icon activates the scenario called Entrance; the same applies to all the other icons associated with the different scenarios displayed.

• Touching the and icons scrolls through the whole screen for the groups and scenarios of the selected area.

• Touching the Dirac icon gives access to the screens for all the other areas of the system.



Weather station

4. WEATHER STATION.

If the Vimar weather station is installed in the system, the touchscreen displays the measured data in a specific screen.

Two examples of screens showing the data provided by the weather station are given below.



Important: The detailed screens for each thermostat may vary according to the characteristics chosen by the installer during configuration; for example, it is not always possible to adjust the temperature or select the operating mode.



Screen saver - Cleaning - Conformity

5. SCREEN SAVER.

When you touch the icon for some pages, e.g. the main menu, pages for the areas, etc., a screenshot appears that lets you choose whether you want to set the page you have selected as your home page or as your screensaver (see figure on following page).



On viewing the screen that you want to set as "home" and touching the title of this page (for instance "Area Selection"), the following possibilities are available for selecting the screensaver:

• touching the icon on "As Home Page" will, after approximately one minute, turn off the touchscreen and the date and time display.

• touching the icon on "Come Salvaschermo" (As Screensaver) will, after approximately one minute and regardless of the position in the menus, load the home page and lower the backlighting of the touchscreen to the value set as "Retroilluminazione Standby" (Standby Backlighting).

6. CLEANING THE TOUCHSCREEN.

Periodically clean the touchscreen with a soft, dry cloth. Do not use any solvents or detergents.

7. CONFORMITY.

EMC directive. Standard EN 50428, EN 50090-2-2.





Viale Vicenza, 14 - 36063 Marostica VI - Italy Tel. +39 0424 488 600 - Fax (Italia) +39 0424 488 188 **800-862307** Fax (Export) +39 0424 488 709 www.vimar.com

