



Spare part	Spare part description	Contained in
RA41	Post and gate anchor brackets for EAM2, EAM3	EAM2, EAM3
RA46	Terminal-block cover for EAM1, EAM2, EAM3	EAM2, EAM3
RA47	Motor assembly for EAM2, EAM3	EAM2, EAM3
RA48	Worm-drive assembly for EAM2	EAM2
RA49	Worm-drive assembly for EAM3	EAM3
REA1	Gearbox assembly for EAM1, EAM2, EAM3	EAM2, EAM3
REA4	Release lever for EAM2, EAM3	EAM2, EAM3
REA5	Release lock and key for EAM2, EAM3	EAM2, EAM3
REA6	Release cover for EAM2, EAM3	EAM2, EAM3
ZX33	Blank release key for ESM1, ESM2, EAM2, EAM3	EAM2, EAM3