

Multimedia video touch screen

DISCLAIMER

Use of this device by any user, consumer or professional presupposes conscious acknowledgement and full acceptance of this Disclaimer.

It remains understood that use of the device is to be considered as acceptance of the contents of this Disclaimer, it nevertheless being understood that VIMAR shall at any time be able to completely or partially change and/or update this device, or the conditions of its use.

1. Ownership of the device, content rights, limitations and prohibitions on use, Copyright.

The copyright on the device is owned by VIMAR S.p.A. Viale Vicenza 14, Marostica (VI).

The trademarks and distinctive marks published on the device are the property of VIMAR S.p.A. , or of third parties and, in any case, access to the device does not give the right to use such trademarks and distinctive marks without the written authorization of their respective owners.

Any registered trademark, service mark, collective mark, design right, image right, privacy right or similar rights, mentioned or used in the device, are the property of their legitimate owners.

All the material available through this device is protected by the rights of intellectual property, in conformity with the current regulations on the protection of the applicable copyright.

Access to the device does not provide any right to take possession of it, nor copy, change, distribute or re-publish any part of the information it contains in any form or with any instrument, without the express written authorization of VIMAR S.p.A. and / or of the third party owner of the relevant rights for its use and/ or reproduction.

2. Exemption from responsibility.

VIMAR S.p.A.:

- shall not be held responsible for consequences that may be caused to Users or third parties by possible malfunctioning of the device and for any damage of any nature that Users may meet with, including any failures, malfunctioning, breaks in the availability or operation of the device and/or its functions;
- by way of example and not peremptorily VIMAR S.p.A. shall moreover not be held responsible for any loss of earnings caused by using the information contained in the device, loss of data or work stoppages deriving directly or indirectly from use of the device;

The user acknowledges VIMAR S.p.A. the right to stop the supply at any moment, whether temporarily or definitively, completely or partially, of some applications equipping the device owned by third parties (Web Radio), relieving it from all responsibility.

VIMAR shall not be held responsible for the lawfulness, truthfulness or exactness or accuracy of the information provided by the applications equipping the device and owned by third parties.

The above limitations /exclusions of responsibility do not have the purpose of limiting / excluding the responsibility of the Company in cases in which it cannot be excluded or limited in accordance with the applicable national law.

3. Privacy.

For whatever is not contemplated, any treatment and/or filing (unless in an "aggregate" form and for "statistical purposes") of the data passing through the software platform, VIMAR S.p.A. with the application of every precaution as required by Italian Legislative Decree D.lgs no. 196/2003 will receive and receives express authorization to treat it in any way, within the limits of that which is strictly necessary for the purposes of performing the described services.

The software platform collects some service information from the device that is necessary for providing the services concerning the registered devices, the version of the application and of the services it provides, as well as signals for checking correct access and operation of said services. The above information is all necessary and functional in order to enable correctly performing the functions of remote control of the applications and devices supported by the platform.

It is therefore necessary to grant specific approval and authorization for each above-mentioned treatment, within the limits of that which is strictly necessary for providing the associated service.

Table of Contents


1. Description	5
1.1 Main characteristics	5
2. Main menu	6
2.1 Notices	7
2.2 Context menu.....	8
3. Settings	10
3.1 General	10
3.2 Vimar Web Server IP network	15
3.3 Video door entry system	15
3.4 User management.....	18
3.5 Updating	23
4. Using files from removable media	24
5. Home automation system	24
6. Video door entry unit	25
6.1 Video door entry unit with no active calls	25
6.2 Video door entry unit with call in progress	26
6.3 VOIP	29
7. Video cameras	31
7.1 Viewing the video camera list	31
7.2 Cyclical viewing of video cameras	32
8. Blackboard	34
9. Photo/Video	38
10. Web Radio	39
11. Music	41
12. Weather	43
13. Feed Reader	46
14. Calcolatrice	48
15. Calendar	49
16. Cleaning the multimedia video touch screen	49
17. Compliance with regulations	49

Description

1. DESCRIPTION

In a By-me automation system in which the web server is installed, the multimedia video touch screen enables complete control of lights, roller shutters, HVAC, speaker system, scenarios, event programs, load control, power consumption management (Energy Guard) and intrusion detection alarm system. The multimedia video touch screen can moreover be used as a video door entry unit and it manages all the functions of the Due Fili (Two Wire) video door entry system (displays images from panel and from video cameras, voice communication with speech unit, audio door entry units and call buttons, opening electrical lock, etc.). The device also lets you access certain information over the Internet via dedicated applications (weather forecasts, news, RSS feed readers, web radio), view video or photographs, listen to music (mp3 files), write notes and link them to an acoustic alarm signal (date and time) and create text or graphic notes with real drawings thanks to the "blackboard" function.

1.1 Main characteristics.

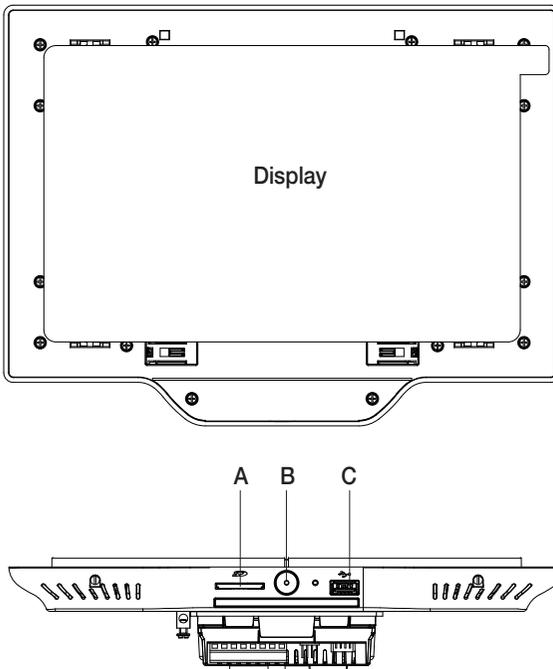

- A:** SDHC port
- B:** ON/OFF button
- C:** USB port

ON/OFF button:


- ON: with the device switched off, press once to turn on the video touch screen.
- With the device switched on, press once to display the context menu.
- OFF: with the device switched on, press and hold for approximately 8 s until the video touch screen displays the off icon.

Video backlighting lifetime: 10,000 hours (at 25°C)

The lifetime is defined as the estimated time for the brightness to fall to 50% of the initial value.

Main Menu

2. MAIN MENU

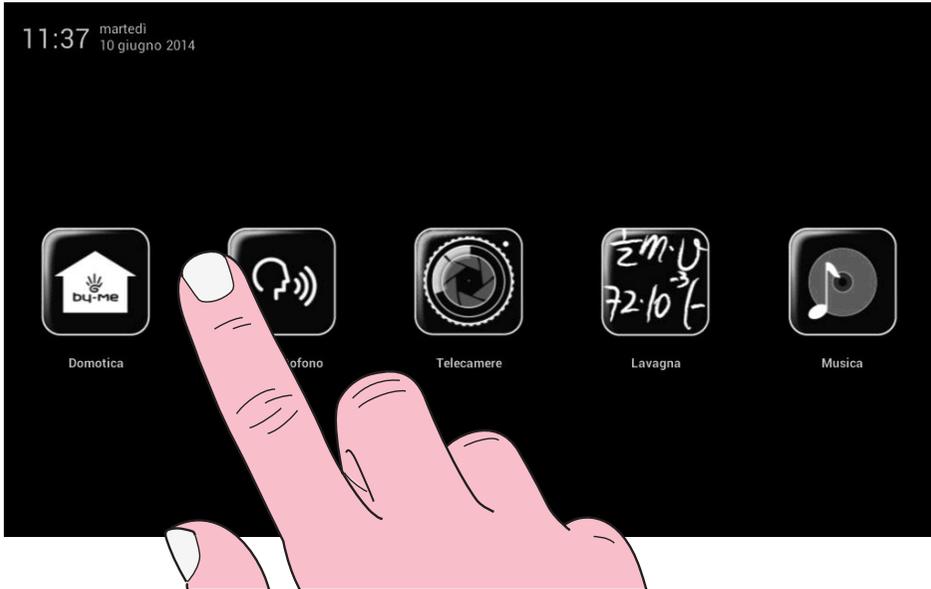

← To display all the other icons, scroll horizontally with your finger over the area covering them. →



Main Menu



2.1 Notices.

In case of special settings or events (for example video door entry call, alarm silencing, etc.) the multimedia video touch screen will display the following warnings:

-  : User away or advanced video door entry answering machine function activated
-  : Ringtone off
-  : "Door open" indicator
-  : SD card not inserted
-  : SD card inserted 51-75%
-  : SD card inserted 76-100%
-  : Indicator for "lost call" (video door entry system) and "new note" (blackboard)

At the bottom of the touch screen multimedia video device are three RGB LEDs which light up to provide a further indication of missed calls and new notes written on the blackboard.

Depending on the notification, the message will be as follows:

- **1 red flash** every 5 s for a call recorded on the answering machine;
- **1 yellow flash** every 5 s for a new note added to the blackboard.

The LEDs remain off if there are no notifications.

Main Menu

2.2 Context menu

 
When accessing each of the menus contained in the main one, it is possible to view a context menu used to carry out some quick operations for managing the multimedia video touch screen.

The context menu is displayed by **pressing the ON/OFF button once** (button **B** illustrated one page 5).



More specifically:

- Tapping  displays the Main menu sending the current application, when applicable, to the back.
- Touching  displays the options relating to the current menu (tool bars, etc.).
- Tapping  takes you back and closes the current application.
- Touching  closes the context menu
- Touching the cursor of the scroll bar (moving it to the left or right) increases/decreases the volume of the audio outputs (the level is highlighted by the illumination of the bar).



Main Menu


As illustrated on page 4, from the main menu you access all the management menus of the multimedia video touch screen relating both to its own functions and to those of the home automation system to monitor.

The following chapters describe all the main screens of these menus; note that on touching the  **VIMAR** icon you always go back to view the main menu.

Settings

3. SETTINGS

From the main menu, touching the  icon takes you to the Settings menu.

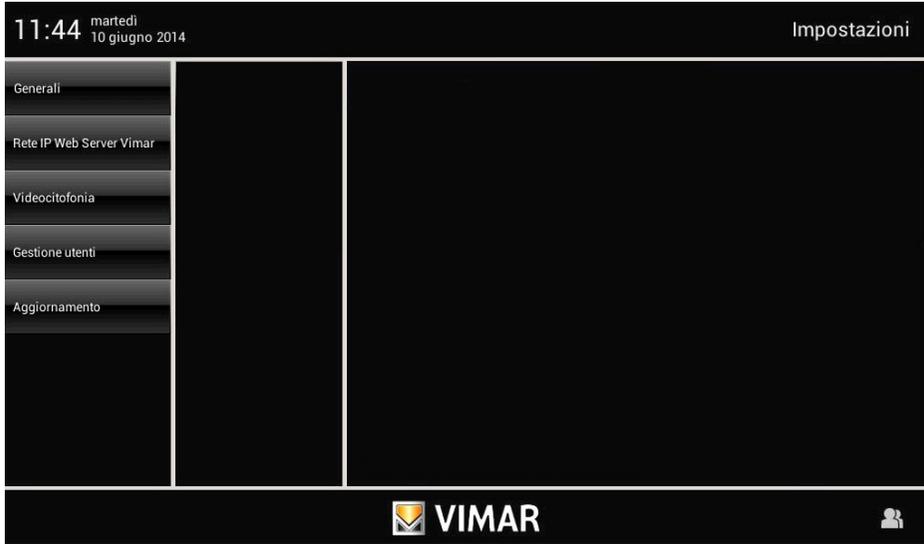

3.1 General.

Touching the  icon displays the following options:

- System info;
- Date and Time;
- Language and Unit of Measurement;
- Energy Saving.

Settings

- **System info**

Touching the **System Info** icon displays the software release and the main features of the multimedia video touch screen.



The screenshot shows the 'Impostazioni' (Settings) screen. At the top left, the time is 13:51 and the date is lunedì 27 aprile 2015. The top right corner shows 'Impostazioni'. The main content is divided into three columns. The first column contains a list of settings: Generali, Rete IP Web Server Vimar, Videocitofonia, Gestione utenti, Aggiornamento, Market VIMAR, and Market. The second column contains 'Info Sistema', 'Salva - Ripristina Configurazione', and 'Log'. The third column displays system information under the heading 'VideoTouchScreen'. This information includes: 'Versione Sistema Operativo: BUILD 1.0.6 - RELEASE 4.1.2', 'Versione Hardware : 2.0.0', 'Versione Software : 4.1.12', 'IP Address : 192.168.0.101', 'MAC Address : 00:1B:29:00:A8:8F', 'Serial Number : PROT040700N111111111', and 'VOIP Ready : Si'. Below this, there is a section for 'Modulo 01963' with 'Versione Hardware modulo 01963 : 4' and 'Versione Software modulo 01963 : 2.9'. Another section is 'Videocitofonia e colloquio con WebServer Vimar' with 'Indirizzo IP WebServer : 192.168.0.110' and 'Configurazione WebServer : Primaria'. At the bottom, there is a 'Versione dei moduli' section with 'Versione Domotica : 4.0.07'. The VIMAR logo and a user icon are visible at the bottom of the screen.

- **Date and Time**

By touching the **Date and Time** icon it is possible to adjust the time and date displayed.

By touching the relevant icons it will be possible to select Automatic or Manual mode, viewing the time in AM/PM or 24h mode, the time zone and set the current date.

Settings

Automatic:



11:45 martedì 10 giugno 2014 Impostazioni

Generali	Info Sistema	Automatica	Manuale
Rete IP Web Server Vimar	Data e Ora		
Videocitofonia	Lingua e unità di misura	AM/PM	
Gestione utenti	Risparmio Energetico	24h	
Aggiornamento	Audio	Fuso orario (GMT+1:00) Europe/Rome	

 **VIMAR** 

Manual:



11:45 martedì 10 giugno 2014 Impostazioni

Generali	Info Sistema	Automatica	Manuale
Rete IP Web Server Vimar	Data e Ora		
Videocitofonia	Lingua e unità di misura	AM/PM	10/06/2014 11:45
Gestione utenti	Risparmio Energetico	24h	imposta data imposta ora
Aggiornamento	Audio		

 **VIMAR** 


Settings

• Language and Unit of Measurement

By touching the **Language and Unit of Measurement** icon it is possible to select the language in which all the words will be displayed and the unit of measurement with which the multimedia video touch screen will display the temperature of the various system environments.

Touch the drop-down menu on "Language" and select the desired one.

Touch the icon corresponding to the unit of measurement for the temperature in °C or °F; the set unit of measurement will then be used in the Weather application.

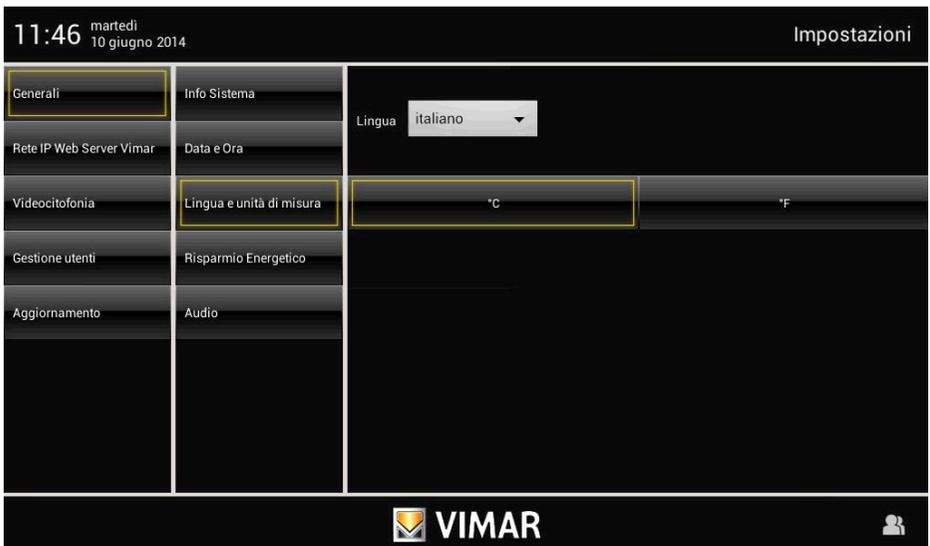

Settings

• Energy Saving

Touching the **Risparmio Energetico** icon takes you to the screen for setting the notifications, screen saver and brightness settings for the multimedia video touch screen.



By tapping the dedicated icons you can activate switching off the display and the screen saver, setting its type and its time out.

- **Slide Show** enables selecting a picture folder on the SD card;
- **Movie** enables selecting a video on the SD card;
- **Data e Ora** enables viewing the current day, date and time.

The drop-down menu is used to set the time-out at the end of which the screen saver will be started.

The drop-down menu alongside the "**monitor switch-off timer**" icon is used to set the time-out at the end of which the display will switch off.

The screen also has two controls for adjusting the brightness of the display during normal use and in screen saver status.

Settings

3.2 Vimar Web Server IP network

This menu is used to carry out all the operations of configuring the IP network and the Vimar Web Server. **These operations are solely for the installer.**

3.3 Video door entry system.

This menu is used to carry out all the configuration operations of the multimedia video touch screen for managing the video door entry system. **These operations are solely for the installer.**

The user can set different ringtones according to the type of call so as to identify it based on the associated acoustic signal.

Touching the **Ringtones** icon and subsequently the **Video Intercom** icon brings up the screen that enables setting the ringtone to associate with the types of call.



Touching the  icon on the ringtone to set, opens a menu with a list of available ringtones.

Settings



Touching:

- **Load MP3** takes you to the audio folder that may be on the SD card or on the USB stick to link mp3 files to each type of call;
- **Cancel** stops the selection;
- **Confirm** confirms the settings made.

To adjust the volume of all the ringtones, touch the cursor of the scroll bar and move it to the left or to the right according to the desired level (this level is highlighted by the illumination of the bar).



Settings

Video door entry system answering machine.

This option is used to define the timeout after which the unanswered call is considered "missed" and the caller's video, recorded in the first 10 seconds after pressing the doorbell, is saved. At the same time the notification is displayed in the Main menu and, if enabled, the LED notification is also activated when there are one or more missed calls.

- In the main window touch the  icon and then the  icon.



Set the answer time by entering a value in the shown range.

Saving missed calls is managed as follows:

- If the device has an SD card with free space, the calls are saved in sequence with a numerical limit set only by the available space on the SD Card (consider that every missed call occupies approximately 5 MB of memory);
- If no SD card is inserted in the device, only the last missed call will always be saved in the local memory and will overwrite the previous one.

• Advanced video door entry system answering machine

The setup screen of the video door entry answering machine also features controls for recording a voice message to be played when an external call is received. This function is called the "Advanced video door entry answering machine". The caller can thus listen to this message after ringing the bell and in her turn leave a video message with sound for a maximum duration of 20 s.

The "Advanced video door entry answering machine" function is active when the audio door entry answering machine is switched on (ON) and in the main menu of the "Video door entry unit" application the "User away" status has been set.

N.B. Since the advanced video door entry answering machine entails the caller recording a video message, it is necessary to fulfil the obligations in compliance with the current privacy and installation regulations in the countries where the product is installed.

Settings

3.4 User Management.

This menu is used to make the settings that enable differentiating the use of the multimedia video touch screen according to the type of user.

Touching the **Users Management** icon brings up the screen that enables creating different types of user with which different privileges are associated.

Creating users and assigning privileges can be done only by the Administrator.

Touching the **Users** icon brings up the screen that enables creating new users and editing ones already configured.

Before displaying the screen for user management, the multimedia video touch screen requests authentication by the administrator by entering name and password.

The default passwords, namely the ones to use when first switching on (that will then be subsequently able to be changed), are the following:

- Administrator password: **admin**
- Installer password: **inst**



When creating a new user, the password that by default is assigned to this user is the name of the user. For example: a user called Mario is created; the password assigned by default will be Mario.

Touching the  icon confirms the entered password.

Settings



Touching:

-  changes the settings for already configured users;
-  deletes the selected user;
-  adds a new user.

Touching the  icon displays the **Settings** menu.

Touching the  icon displays the screen that enables managing the three types of user:

- Administrator;
- Installer;
- User.

The table shown on the page alongside illustrates the three types of user and the functions associated with them; in the phase of creating users then, it will suffice to link to each one of these the privileges that you want to assign.

Settings

MENU	ADMINISTRATOR	INSTALLER	STANDARD USER
GENERAL	✓	✓	✓
System info	✓	✓	✓
Date and Time	✓		
Language and Unit of Measurement	✓		
Energy Saving	✓		
Line Out		✓	
Save-Restore Configuration		✓	
Log		✓	
VIMAR WEB SERVER IP NETWORK		✓	
IP Network Parameters configuration		✓	
Vimar Web Server configuration		✓	
VIDEO DOOR ENTRY	✓	✓	
Installation		✓	
Ringtones	✓	✓	
Accessory Functions		✓	
video cameras		✓	
Intercom		✓	
Door Opening		✓	
Video door entry system answering machine	✓	✓	
USER MANAGEMENT	✓		
Users	✓		
Groups	✓		
Permissions	✓		
UPDATING		✓	
Operating System		✓	
Applications		✓	

Settings

MENU	ADMINISTRATOR	INSTALLER	STANDARD USER
PERMISSION MANAGEMENT (DEFAULT)	(not modifiable)	✓	✓
Access to Home Automation System Application	(not modifiable)	✓	✓
Access to Photo-Video Application	(not modifiable)	✓	✓
Access to Music Application	(not modifiable)	✓	✓
Access to Web Radio Application	(not modifiable)	✓	✓
Access to Calendar Application	(not modifiable)	✓	✓
Access to Blackboard Application	(not modifiable)	✓	✓
Access to Weather Application	(not modifiable)	✓	✓
Access to News Application	(not modifiable)	✓	✓
Access to Feed Reader Application	(not modifiable)	✓	✓
Added and change Blackboard messages	(not modifiable)	✓	
Added and change Feed	(not modifiable)	✓	
Added and change News	(not modifiable)	✓	
Added and change Weather location	(not modifiable)	✓	
Video camera self-start	(not modifiable)	✓	
Display missed calls	(not modifiable)	✓	

Settings



Touching:

-  changes the settings for already configured groups;
-  deletes the selected group;
-  adds a new group.

Settings

Touching the  icon shows the screen that enables assigning users with the menus and applications they can access.



Touching the  icon for the user and the desired application enables this user to utilize the selected function.

3.5 Updating.

When a new software update is available, the multimedia video touch screen will display the message: "Vimar application updates are available. Log in as an administrator or contact your installer to perform the installation".

This message will also be seen by the basic user, but the update can only be performed after identification as "Administrator" or "Installer".

Using files from removable media - Home automation

4. USING FILES FROM REMOVABLE MEDIA.

Some applications let you take files directly from the SD Card or from a USB pen drive.

If you need to explore one of these media, the system will display a file explorer that will perform this function.


The explorer will be used:

- to manage the screen saver and select the folder with the images or video;
- when asked to restore or save;
- to update the Multimedia Video Touch screen when updating via the remote server will not be possible;
- to load MP3 ringtones.

5. HOME AUTOMATION.



From the main menu, tapping the  icon takes you to the Home Automation System menu displaying the screens for managing returns available via Vimar Web Server.

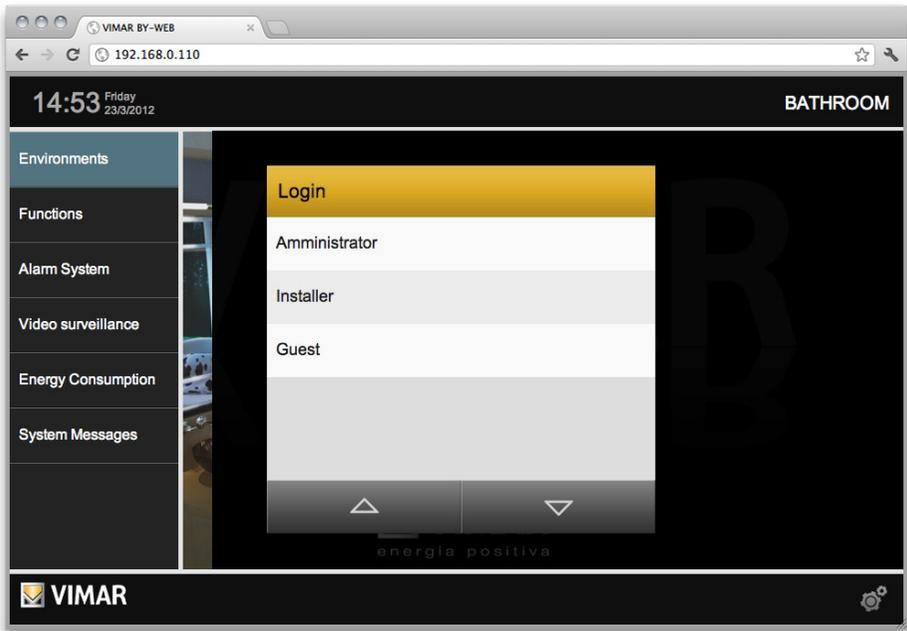

For all the details concerning automation system and intrusion detection alarm system management via the multimedia video touch screen please refer to the Vimar web server user manual.

Video door entry unit


6. VIDEO DOOR ENTRY UNIT.

From the main menu, touching the  icon takes you to the Video Door Entry Unit menu.

With this menu it will be possible to view and communicate with the person that made the call and open the electrical lock, switch on the stair lights, make intercom calls with other video door entry units and audio door entry units, activate self-starts for environmental monitoring, etc.

6.1 Video door entry unit with no active calls

If no calls have arrived the multimedia video touch screen will show a window more or less similar to the one below.

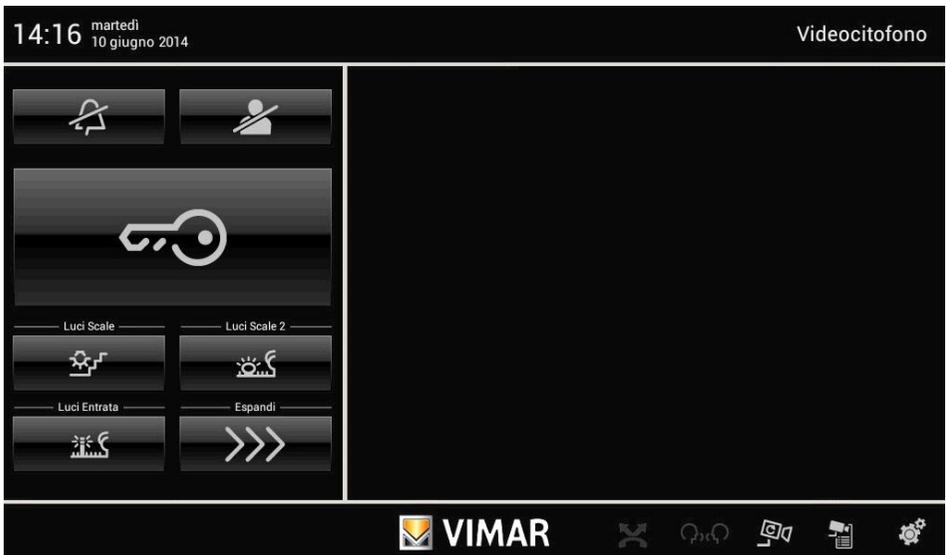

- Touching the  icon opens the electrical lock of the door or gate.
- Touching the  icon disables the internal ringtone and the title bar shows the "ringtone disabled" icon.
- Touching the  icon disables the "User away" function and the title bar shows the "User away" icon. The advanced video door entry answering machine can be activated in "User Away" mode (if previously enabled in the settings).

Finally, at bottom right there are the following icons:

-  to view the icons associated with the intercom calls configured in the system.

Video door entry unit

-  to cyclically view the images transmitted from the video cameras (each touch changes video camera).
-  to view a list of configured video cameras.

6.2 Video door entry unit with call in progress.

When a call is made from a speech unit (external panel, call button, etc.), the multimedia video touch screen emits an audible warning and, if there is also a video signal, the display lights up to display the person calling.



- To answer the call and communicate with the person calling it is sufficient to touch the  icon; touching the icon again cuts off the audio ("mute" mode)
- To break off the communication touch the  icon;
- To adjust the volume of the audio communication, touch the cursor of the scroll bar and move it to the left or to the right according to the desired level (this level is highlighted by the illumination of the bar).



Video door entry unit

- Touching the  icon opens the electrical lock of the door or gate.
- Touching the  icon activates the associated command (for example the stairs light is turned on).
- If there is more than one icon (for example for controlling lights), touching  expands the screen and displays all the other icons associated with the controls.



Video door entry unit

- Touching the  icon shows the screen with any messages recorded by the video door entry system answering machine.



Touching the  icon displays the corresponding message.

Finally, the  icon enables deleting the corresponding message.

The recorded messages are saved to the SD card (if there is one and if this function has been set).

Without an SD card, the multimedia video touch screen enables recording a single video door entry message that is then overwritten by the next one.

Video door entry unit

6.3 VOIP Functionality

VOIP functionality lets you use your mobile device to forward the video door entry system functions of your Due fili system.

By-door APP

This application lets you transfer an audio/video call from the entrance panel to a mobile device, tablet or smartphone connected via Wi-Fi to the local network in which there are the Multimedia video touchscreen and the By-me Web Server. The application also enables auto-starting any Due Fili or IP cameras connected to the video door entry system and controlling any auxiliary functions that are already configured in it.


Using this application requires:

- the system to have a Multimedia video touchscreen (art. 21553.1) and the By-me Web Server (art. 01945, with serial number higher than 14-0001);
- the firmware and APP upgrades for the same items, whose latest versions are available both in the multimedia product catalogue and in the Product Software section of the website www.vimar.com.

The APP (in Italian and English) is available for iOS and Android via a free download from iTunes or Google Play, which can be reached from the Mobile Applications section of the Vimar website.

Main APP information

The following screen shows the menus and functions you can use via the APP.

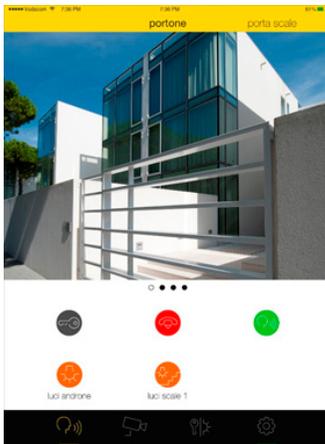

The menu lets you navigate through the following functions:

- entrance panels 
- cameras 
- auxiliary/custom controls 
- settings 


Each **entrance panel** can be paired with a representative image that can be taken from the gallery or obtained by taking a photo with the entrance panel camera.

Video door entry unit


The commands available on this screen enable controlling door opening, entrance panel auto-starting, activating audio communications and switching on the lights (if present and configured in the system).

In the case of an entrance panel call, a notification is displayed in the bar at the top; selecting this notification forces loading the application in the background and shows the picture of the panel in the call.

Another pop-up allows the user to accept  or refuse  the call.

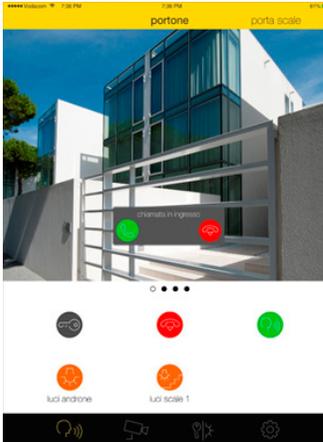

Each **camera** can be paired with a representative image that can be taken from the gallery or obtained by taking a photo with the camera itself. Also, if there are multiple cameras in the system, you can activate a sequential display of these cameras, setting the desired duration time.

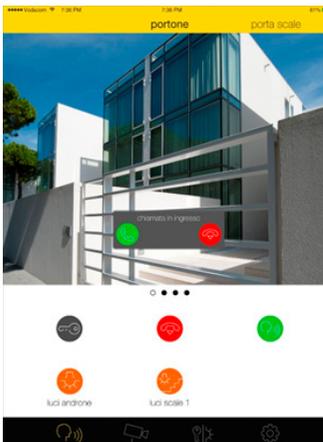

You can pair any name you want with the **custom commands** menu. The functions configured in the Multimedia video touchscreen that belong to the functions of the Due fili system can be added to the group.

Video cameras

7. VIDEO CAMERAS.

From the main menu, touch the  icon (where present) to access the Video cameras menu.

This menu can be used to view the images transmitted by all cameras integrated into the home automation system (video door entry system, external video cameras, IP video cameras, etc.).



7.1 Viewing the video camera list.

- Touch the  icon to view the list of all video cameras in the home automation system.
- Touch the icon associated with the desired video camera (for example, ) to view the corresponding images.

Video cameras



- Touch the  icon to view the previous video camera (in list order), or touch  to view the next video camera.
- To adjust the audio volume of the camera (when the camera makes it available), touch the cursor of the scroll bar and move it to the left or to the right according to the required level (this level is highlighted by the illumination of the bar).



- Touch the  icon to view the list of video cameras again (see figure opposite).

7.2 Cyclical viewing of video cameras.

- Touch the  icon to automatically display (in list order) all video cameras within the home automation system.

The images from each video camera will be displayed for a set period of time, after which the system automatically moves on to the next video camera.

Once the last camera in the list has been shown, the display will begin again from the beginning.

Video cameras



- To adjust the period of time after which the display moves on to the next video camera, touch the cursor scroll bar and move it to the desired duration (in seconds). The viewing time is also shown through the illumination of the bar.



- To adjust the audio volume of the selected video camera, touch the scroll bar cursor and move it to the left or to the right depending on the desired level (this level is highlighted by the illumination of the bar).



- Touch the  icon to view the list of video cameras again (see figure on page 28).


Blackboard

8. BLACKBOARD

The "Blackboard" application enables writing notes, recording audio messages, or making graphic notes with actual drawings.



From the main menu, touching the  icon takes you to the Blackboard menu.

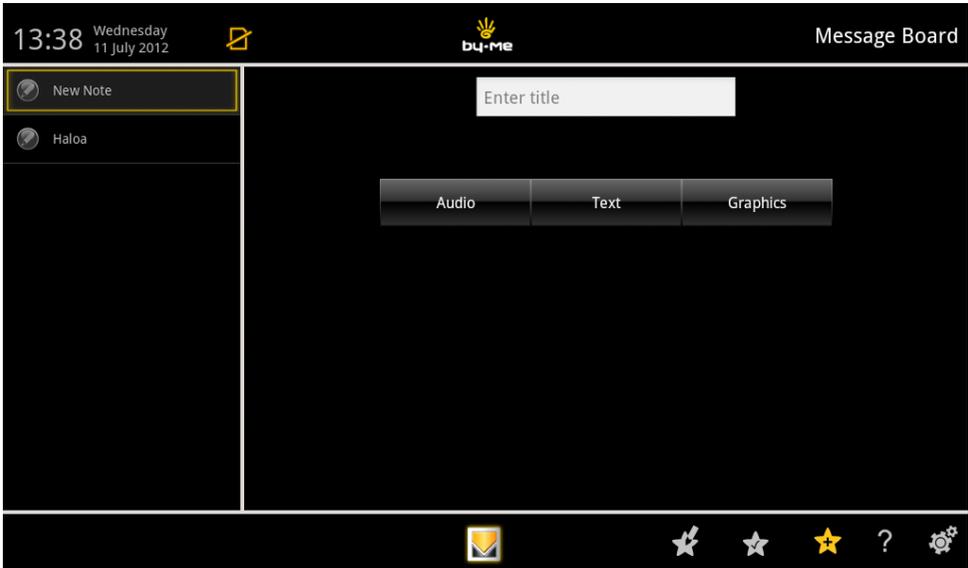

The Blackboard window, on the left, will show a list of the existing messages marked by a ball that indicates the type of note and whether the note has been read or not (yellow/grey in colour).


Touching the  icon deletes the corresponding note (the icon only appears in the phase of creating the note).

Touching the  icon creates a new note (which must be assigned a name) defining the following options associated with it:

- Audio (recording of a voice message); touch the  icon.
- Text (writing a text message); touch the  icon.
- Graphics (doing the graphics of a drawing); touch the  icon.

Blackboard

- Audio.

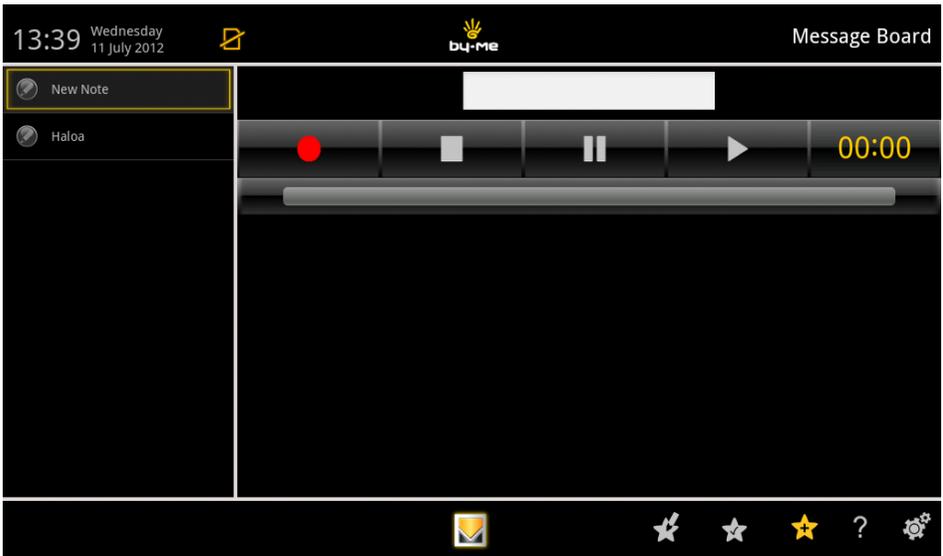

Touch the icons:

-  to start recording the message (maximum length 2 minutes);
-  to listen to the recorded message;
-  to temporarily stop recording/listening to the message;
-  to end recording/listening to the message.
-  to save the recorded message.

Blackboard

- Text.



With the  icons it will be possible to choose the type of font and the body of the character with which to write the text message.


Touching the  icon creates a new note.

Touching the  icon saves the note.

Touching the  icon manages the notes shown in the list on the left (move, delete and edit).

Blackboard

- Graphics.

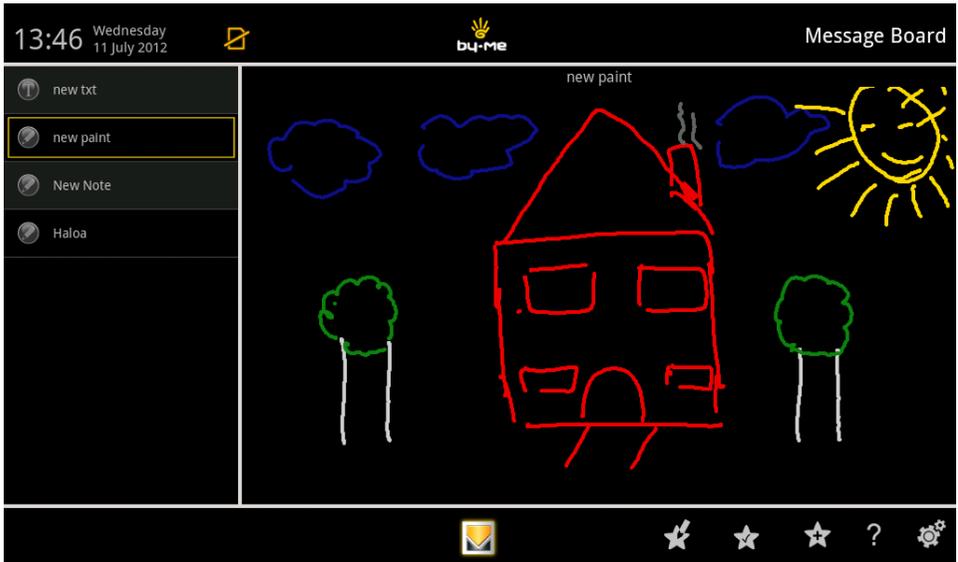

With the  icons it will be possible to choose the type and the thickness of the stroke, its colour and if necessary an eraser to delete what has been drawn.

After choosing the stroke and colour you do the drawing on the display using the finger of a hand.

Touching the  icon creates a new note.

Touching the  icon saves the note.

Touching the  icon manages the notes shown in the list on the left (move, delete and edit).

Photo/Video

9. PHOTO/VIDEO.

This menu enables loading and viewing images and video on the multimedia video touch screen.

From the main menu, touching the  icon takes you to the Photo/Video application.



N.B. The above images are merely explanatory as the display depends on what the user loads on the SD Card and/or USB pen drive.

Web Radio

10. WEB RADIO.


This menu is used to find, select and save the desired radio station (web radios all over the world) on the multi-media video touch screen.

On starting the application will display the various categories of radios on the network; to find a specific station use the "Find" icon.



After finding the desired radio station simply touch it to start it playing.

To add the radio to your favourites touch the heart-shaped icon (see page 87).

From the main menu, touching the  icon takes you to the Web Radio menu.

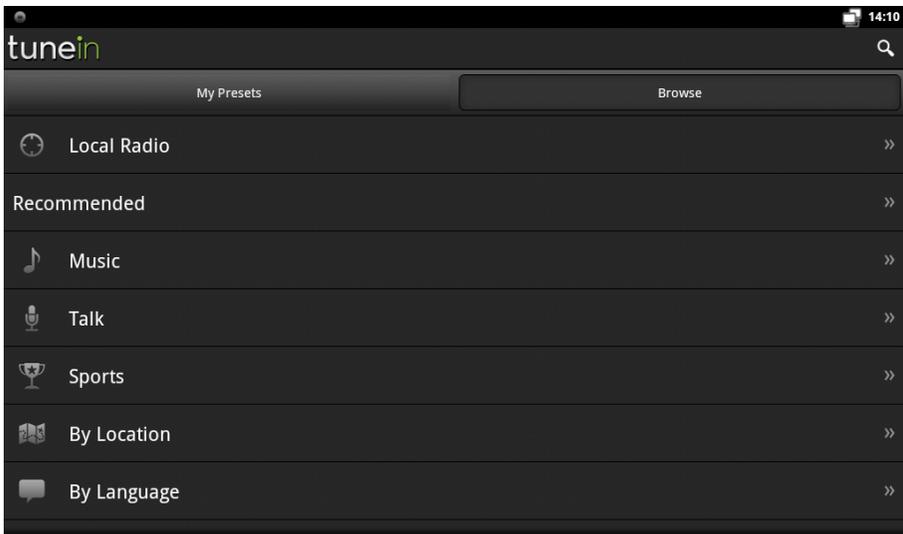

Web Radio

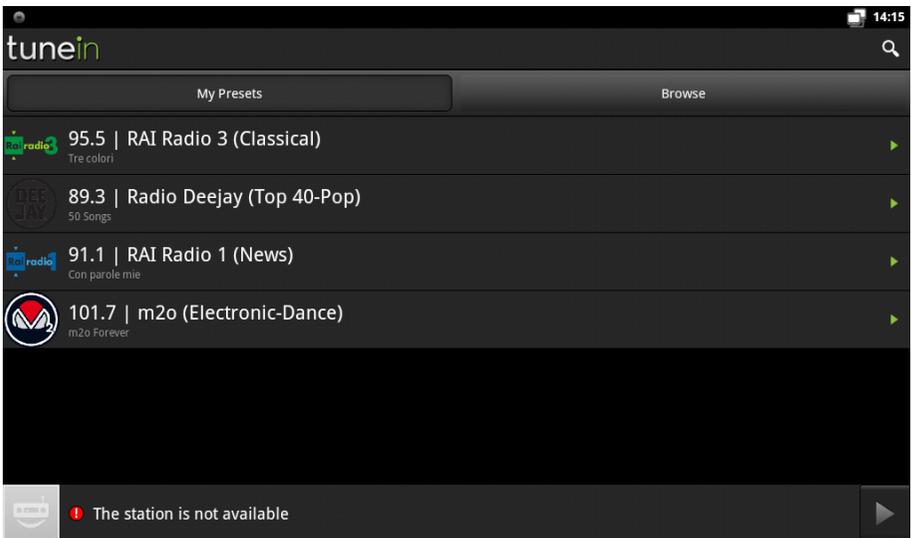
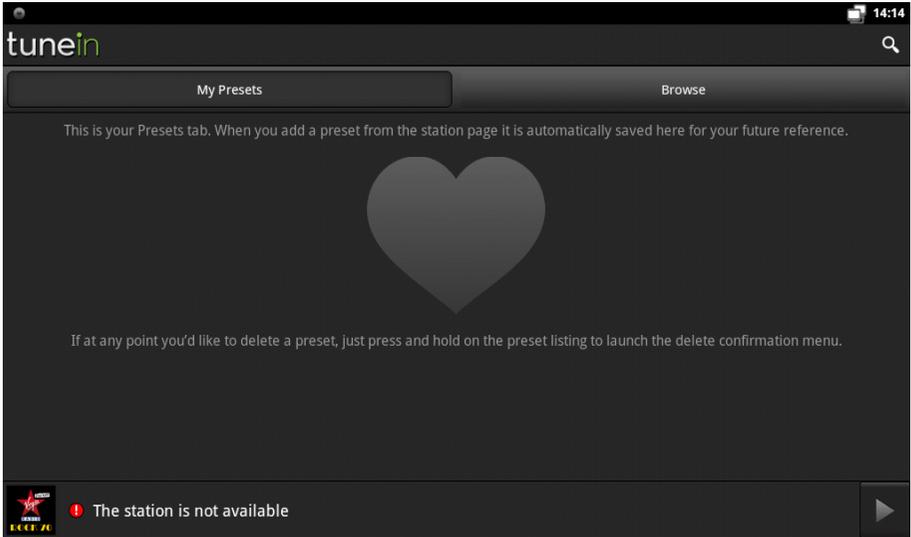


Music

11. MUSIC.

This menu is used for loading and listening to audio files on the multimedia video touch screen.

From the main menu, touching the  icon takes you to the Music menu.

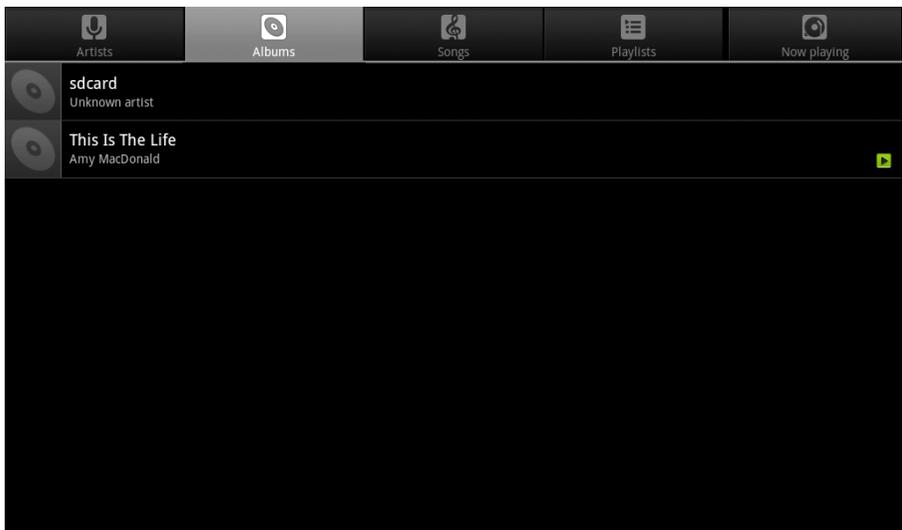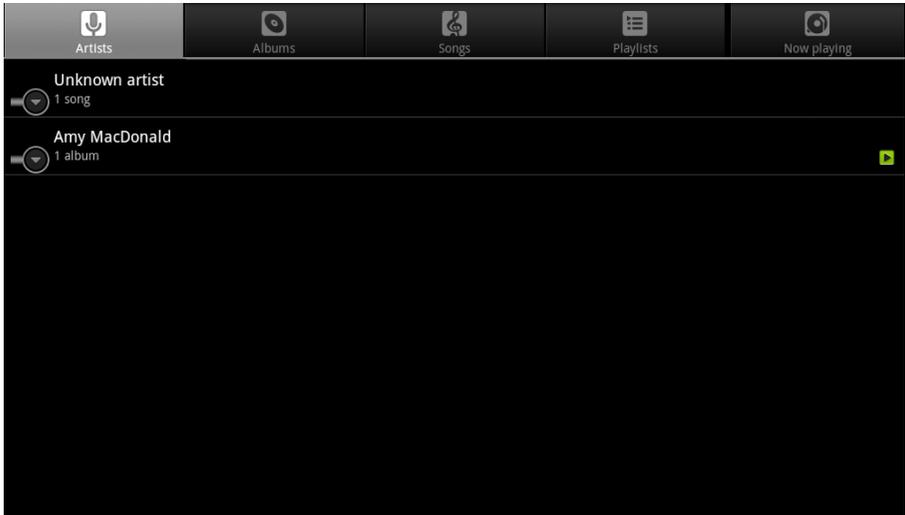

Music

 Artists	 Albums	 Songs	 Playlists	 Now playing
Barrowland Ballroom				3:54
Amy MacDonald				
Caledonia [Hidden Track]				2:00
Amy MacDonald				
Footballer's Wife				5:02
Amy MacDonald				
L.A.				4:03
Amy MacDonald				
Let's Start A Band				4:01
Amy MacDonald				
Mr. Rock And Roll				3:31
Amy MacDonald				
Poison Prince				3:25
Amy MacDonald				
rec				0:08
Unknown artist				

Weather


12. WEATHER.

This menu can be used to consult the web page providing weather forecasts for all cities throughout the world, in particular:

- Current conditions, updated every 3 hours
- 10-day weather forecast
- Forecast updated every 3 hours for each of the 10 days in the above category

From the main menu, touch the  icon to access the Weather menu.

- Touch the icon for the desired city to view the corresponding weather forecasts (current day, next 10 days and a detailed breakdown).

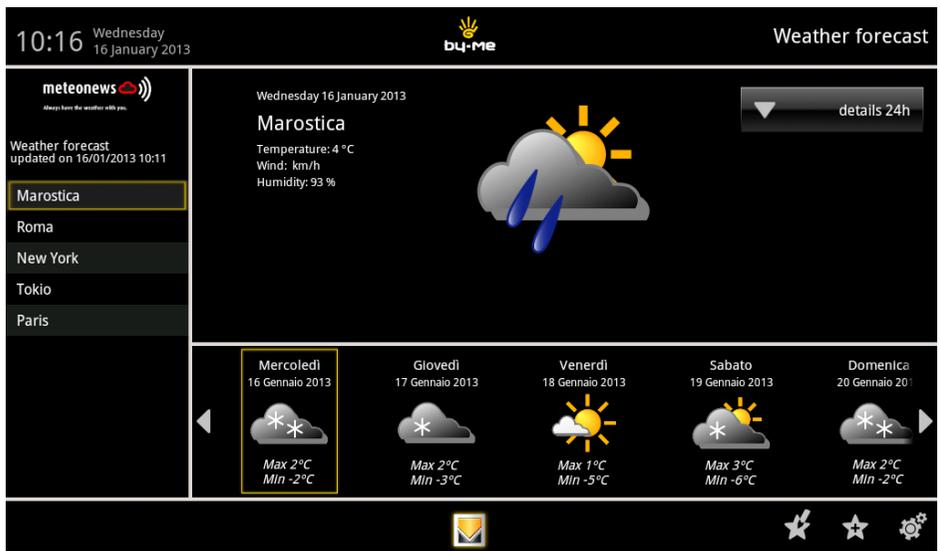

The screenshot shows the weather application interface. At the top, it displays the time 10:16, the day Wednesday, and the date 16 January 2013. The logo 'by-me' is visible. The main heading is 'Weather forecast'. On the left, there is a 'meteoneWS' logo and a list of cities: Marostica (selected), Roma, New York, Tokio, and Paris. The main content area shows the current weather for Marostica on Wednesday, 16 January 2013: Temperature: 4 °C, Wind: km/h, Humidity: 93%. A large weather icon shows a sun behind a cloud with rain. A 'details 24h' button is on the right. Below this is a 5-day forecast grid:

Mercoledì	Giovedì	Venerdì	Sabato	Domenica
16 Gennaio 2013	17 Gennaio 2013	18 Gennaio 2013	19 Gennaio 2013	20 Gennaio 2013
				
Max 2°C Min -2°C	Max 2°C Min -3°C	Max 1°C Min -5°C	Max 3°C Min -6°C	Max 2°C Min -2°C

At the bottom, there is a home button and three icons: a star, a star with a checkmark, and a gear.

- Touch the icon corresponding to the desired day (for example, ) to view the relative forecasts (weather, temperature, wind speed, humidity, etc.).

Weather

10:17 Wednesday
16 January 2013

Weather forecast

meteoneWS
Always have the weather with you.

Weather forecast
updated on 16/01/2013 10:11

- Marostica
- Roma
- New York
- Tokio
- Paris

Friday 18 January 2013

Marostica

Temperature: Min:-5 °C Max:1 °C
 Wind: 15 km/h
 Humidity: 75 %
 Precipitation: 0/0 mm
 Sunshine: 85 %
 UV: 2



▼ details 24h

Mercoledì
16 Gennaio 2013



Max 2°C
Min -2°C

Giovedì
17 Gennaio 2013



Max 2°C
Min -3°C

Venerdì
18 Gennaio 2013



Max 1°C
Min -5°C

Sabato
19 Gennaio 2013



Max 3°C
Min -6°C

Domenica
20 Gennaio 2013



Max 2°C
Min -2°C





- Touch the ▼ dettaglio 24h icon to view the weather forecast in intervals of 3 hours for the selected day.

10:18 Wednesday
16 January 2013

Weather forecast

meteoneWS
Always have the weather with you.

Weather forecast
updated on 16/01/2013 10:11

- Marostica
- Roma
- New York
- Tokio
- Paris

▲ details 24h

	03:00	06:00	09:00	12:00	15:00	18:00	21:00	00:00
Weather forecast								
Temperature	1 °C	1 °C	0 °C	2 °C	1 °C	1 °C	0 °C	-1 °C
Wind	10 km/h 	10 km/h 	10 km/h 	10 km/h 	10 km/h 	10 km/h 	10 km/h 	10 km/h 
Sunshine	0 %	0 %	0 %	0 %	0 %	0 %	0 %	0 %
UV	UV - 0	UV - 0	UV - 1	UV - 1	UV - 0	UV - 0	UV - 0	UV - 0
Humidity	85 %	85 %	85 %	85 %	80 %	80 %	85 %	85 %
Precipitation	0 - 1 mm	0 - 3 mm	0 - 5 mm	0 - 3 mm				

Mercoledì
16 Gennaio 2013



Max 2°C
Min -2°C

Giovedì
17 Gennaio 2013



Max 2°C
Min -3°C

Venerdì
18 Gennaio 2013



Max 1°C
Min -5°C

Sabato
19 Gennaio 2013



Max 3°C
Min -6°C

Domenica
20 Gennaio 2013




Max 2°C
Min -2°C






Weather

- Touch the  icon to manage your favourites (move or delete).

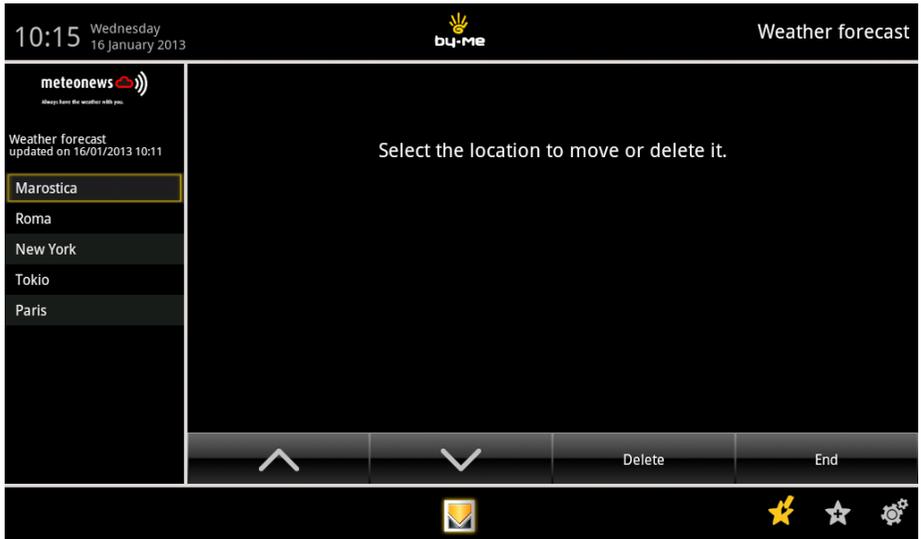

- Touch the  icon to add a new town to the list of favourites shown on the left.

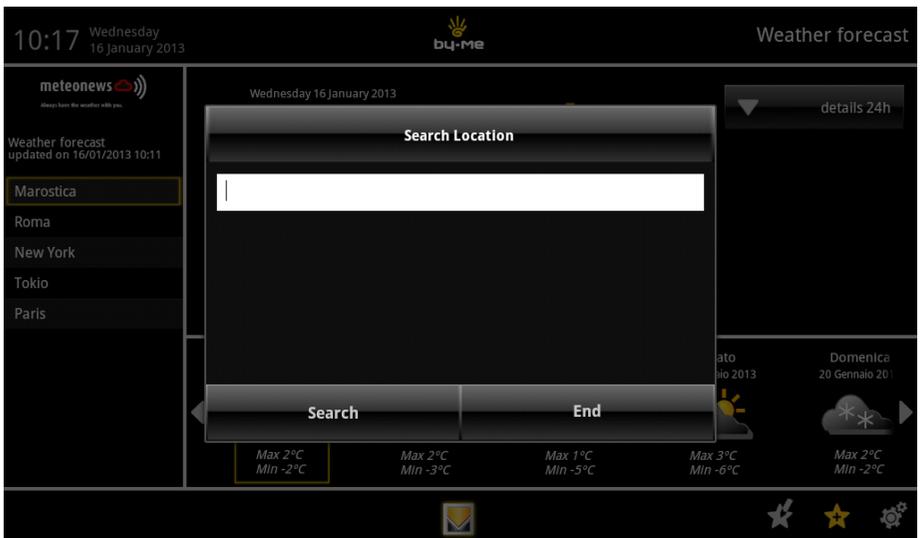

Feed Reader

13. FEED READER.


The Feed Reader enables collecting web updates (such as newsletters) like news headlines, blogs and podcasts to which you have subscribed, in a single place so as to make reading easier.

The Feed Reader reduces the time and the operations necessary to regularly follow website updates and enable creating a single place for information (basically "personal news").

After subscribing to a Feed, an aggregator is able to monitor new content at the frequency defined by the user and retrieve the update.



From the main menu, touching the  icon takes you to the Feed Reader.

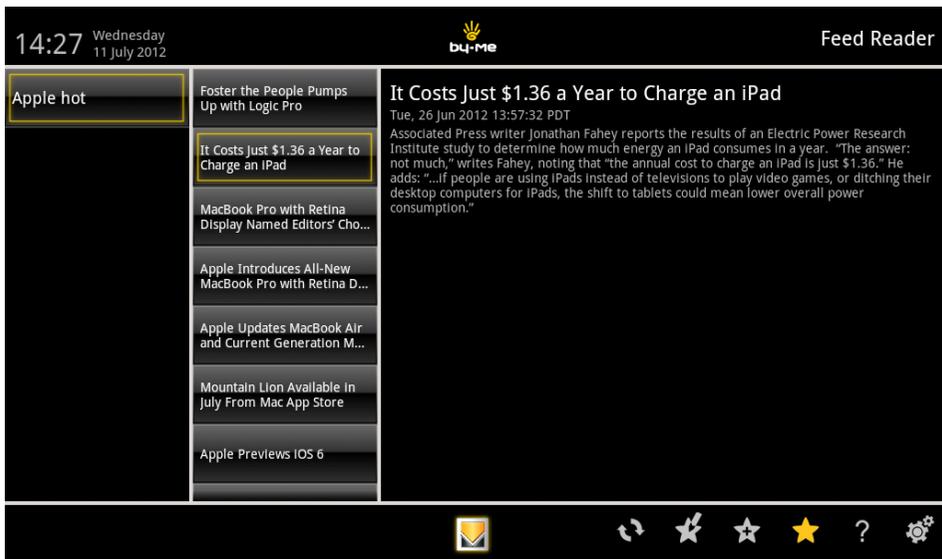

- Touching the  icon updates the Feed.
- Touching the  icon displays your list of Feeds.
- Touching the  icon manages the Feeds in the list (move, delete and edit the URL of the Feed).
- Touching the  icon adds a new Feed to the list shown on the left.

Feed Reader

14:27 Wednesday
11 July 2012

Feed Reader

Apple hot	<p>Foster the People Pumps Up with Logic Pro</p> <p>It Costs Just \$1.36 a Year to Charge an iPad</p> <p>MacBook Pro with Retina Display Named Editors' Cho...</p> <p>Apple Introduces All-New MacBook Pro with Retina D...</p> <p>Apple Updates MacBook Air and Current Generation M...</p> <p style="border: 1px solid #eee; padding: 2px;">Mountain Lion Available In July From Mac App Store</p> <p>Apple Previews iOS 6</p>	<h3>Mountain Lion Available in July From Mac App Store</h3> <p>Mon, 11 Jun 2012 17:50:28 PDT</p> <p>Apple today announced that OS X Mountain Lion, the ninth major release of the world's most advanced desktop operating system, will be available in July. Mountain Lion introduces more than 200 innovative features, including the new Messages app, Notification Center, system-wide sharing, Facebook integration, Dictation, Power Nap, AirPlay Mirroring, Game Center, and the enhanced security of Gatekeeper. With iCloud built into the foundation of OS X, Mountain Lion makes it easier than ever to keep your content up to date across all your devices. OS X Mountain Lion will be available in July from the Mac App Store for \$19.99 (US). The OS X Mountain Lion Up-to-Date upgrade is available at no additional charge via the Mac App Store to all customers who purchased a qualifying new Mac system from Apple or an Apple Authorized Reseller on or after June 11, 2012.</p>
-----------	--	---









14:28 Wednesday
11 July 2012

Feed Reader

Apple hot	<p style="text-align: center;">select the source to move, edit or delete it</p> <p>Title: <input style="width: 90%; border: none; border-bottom: 1px solid #ccc;" type="text"/></p> <p>URL: <input style="width: 90%; border: none; border-bottom: 1px solid #ccc;" type="text"/></p>
<div style="display: flex; justify-content: space-around; align-items: center;"> ↑ ↓ Delete Save Modifications End </div>	










Calculator

14. CALCULATOR.

From the main menu, touch the



icon to view the calculator, which can be used in traditional or scientific mode.

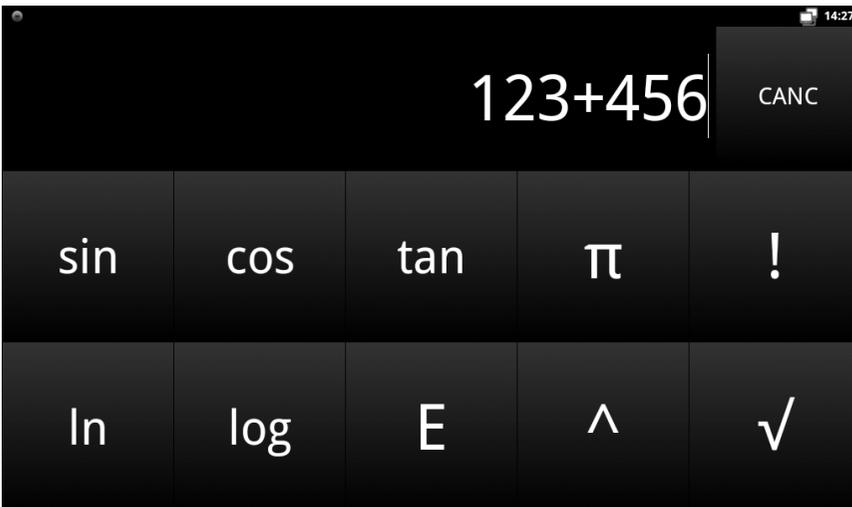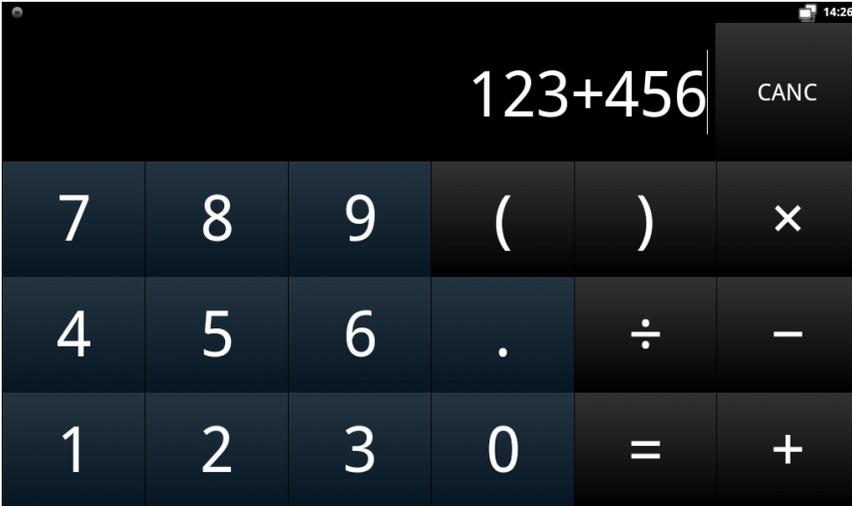


Calendar

15. CALENDAR.

This menu enables viewing the current calendar setting various view modes (monthly, weekly, etc.)

From the main menu, touching the  icon takes you to the Calendar.

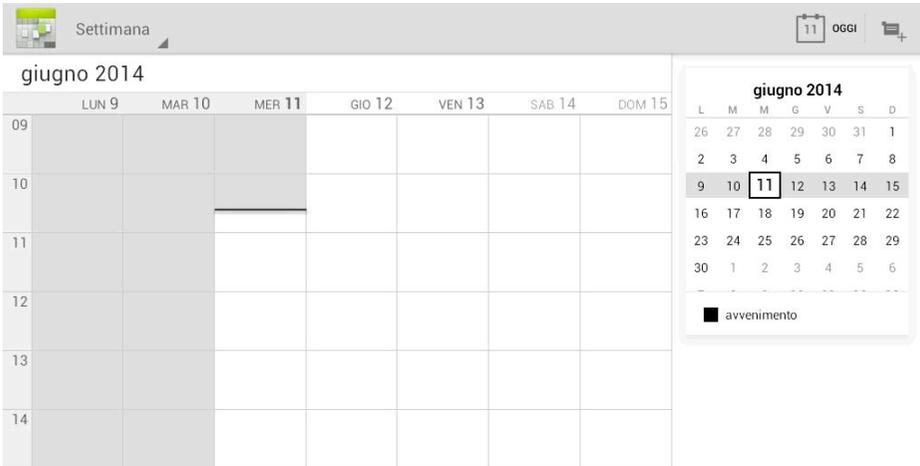

Touch the desired day to view/edit/add any notes, memos, etc. distributed over a 24 h period.

16. CLEANING THE MULTIMEDIA VIDEO TOUCH SCREEN.

Periodically clean the multimedia video touch screen with a soft, dry cloth. Do not use any solvents or detergents.

17. REGULATORY COMPLIANCE.

LV directive

EMC directive

Standards EN 60950-1, EN 61000-6-1, EN 61000-6-3.



VIMAR

Viale Vicenza, 14 - 36063 Marostica VI - Italy

Tel. +39 0424 488 600 - Fax (Italia) +39 0424 488 188

Fax (Export) +39 0424 488 709

www.vimar.com



21553.1 EN utente 04 1601
VIMAR - Marostica - Italy